


Conext™ XWPro

Owner's Guide

975-0801-01-02

August 2019

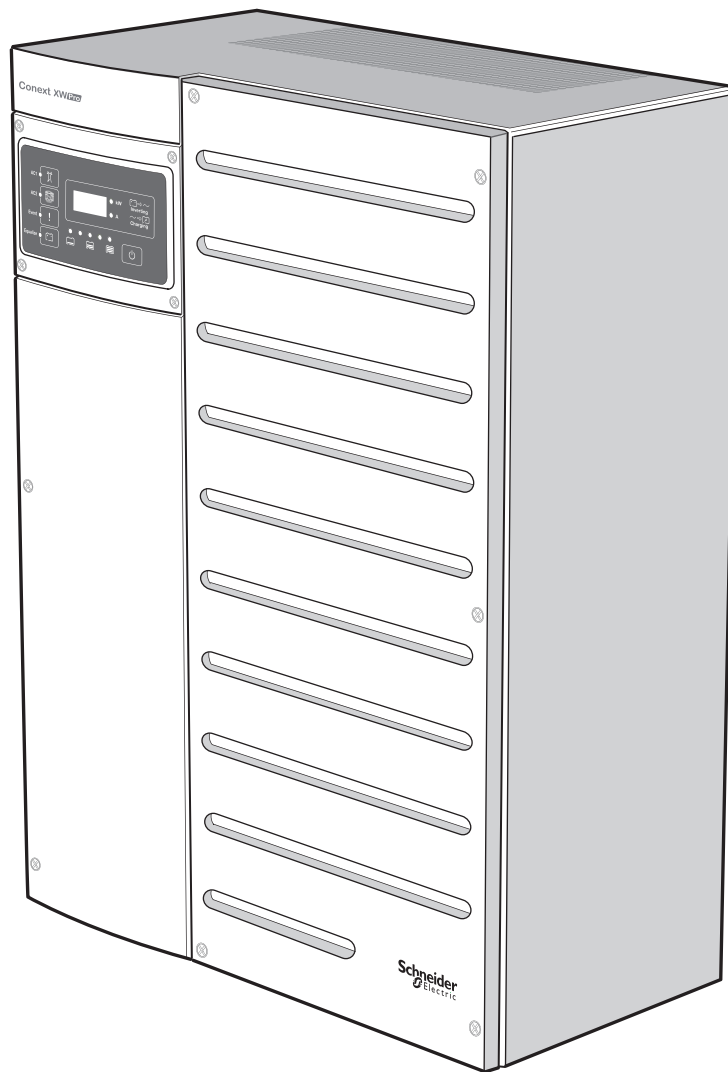

Copyright © 2019 Schneider Electric. All Rights Reserved.

Trademarks are owned by Schneider Electric Industries SAS or its affiliated companies. Other trademarks are owned by their respective companies.

Exclusion for Documentation

UNLESS SPECIFICALLY AGREED TO IN WRITING, SELLER

(A) MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN ITS MANUALS OR OTHER DOCUMENTATION;

(B) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSSES, DAMAGES, COSTS OR EXPENSES, WHETHER SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK; AND

(C) REMINDS YOU THAT IF THIS MANUAL IS IN ANY LANGUAGE OTHER THAN ENGLISH, ALTHOUGH STEPS HAVE BEEN TAKEN TO MAINTAIN THE ACCURACY OF THE TRANSLATION, THE ACCURACY CANNOT BE GUARANTEED. APPROVED CONTENT IS CONTAINED WITH THE ENGLISH LANGUAGE VERSION WHICH IS POSTED AT <https://solar.schneider-electric.com>.

Document Number: 975-0801-01-02

Date: August 2019

Product Part Number:

XW Pro 6848 NA

865-6848-21

Contact Information

For country-specific details, please contact your local Schneider Electric Sales Representative or visit the Schneider Electric Solar Business website at: <https://solar.schneider-electric.com>

Information About Your System

As soon as you open your product, record the following information and be sure to keep your proof of purchase.

Serial Number	_____
Product Number	_____
Purchased From	_____
Purchase Date	_____

READ AND SAVE THESE INSTRUCTIONS

Safety Information

Important Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved. For more information, see *Audience*.

Label Symbols

NOTE: The term "ground" is equivalent to "earth", and the use of these terms depends on local codes and standards. This document uses the term "ground" throughout.

The following symbols appear on labels on or in the inverter.



Hazardous voltage



Hot surface



5 mins

Stored energy hazard discharge time



 
Refer to the Installation or Operation instructions



Protective (grounding) conductor terminal



Direct current



Alternating current

Product Labels

The Conext XW Pro inverter has different product labels designed to provide information on product ratings and specifications, provide safety information, and identify parts and functions of the inverter.

Table 1 Product labels

1	Main product ratings label
2	Front panel label
3	Main product safety label

Main Product Ratings Label

The main product ratings label contains the inverter's product ratings and technical specifications. **Do not remove, cover, deface, or alter the main product label.** A localized main product label is available to install on the product.

Figure 1 Main product ratings label example

1	Schneider Electric Conext™ XW60 6848 NA Inverter/Charger <input type="checkbox"/>	
2	Charger Mode (25°C) Nominal Input Voltage 120/240V 120V ~ Max. Input Current 48A 48A ~ Input Power Factor >0.98 >0.98 ~ Input Frequency Range 52-68Hz 52-68Hz ~ Output Voltage Range 40-64V 40-64V ~ Nominal Output Voltage 48.0V 48.0V ~ Max. Output Current 140A 120A ~	
3	Inverter Mode (25°C) Nominal Output Voltage 120/240V 120V ~ Nominal Output Frequency 60Hz 60Hz ~ Max. Continuous Output Current 28A 48A ~ Max. Continuous Output Power 6.8kVA 5.76kVA ~ Input Voltage Range 42-60V 42-60V ~ Max. Input Current 180A 180A ~	
4	Grid Interactive Mode (40°C) Nominal Grid Voltage 120/240V 120V ~ Grid Voltage Range 211-264V 105.6-132V ~ Nominal Frequency 60Hz 60Hz ~ Output Power Factor >0.98 >0.98 ~ Max. Continuous Output Current 27A 48A ~ Max. Continuous Output Power 6.0kVA 5.76kVA ~ Input Voltage Range 47-58V 47-58V ~ Max. Continuous Input Current 160A 160A ~ Certified for use with 75°C copper conductors	
5	Operating Temperature Range -25°C to +70°C Part Number 865-6848-21	
6	Serial number	
7	Date of Manufacture	
8	This Class B device complies with Part 15 of the FCC Rules and all requirements of the Canadian interference causing equipment regulations. Operation is subject to the following two conditions: 1. This device may not cause harmful interference. 2. This device must accept any interference received, including interference that may cause undesired operation. Factory Configuration 120/240V, 3 Wire Optional Configuration 120V, 2 Wire <input type="checkbox"/>	
9	UL 1741 ENEC 1051 MC 15949 CE IP20 Type 1, Indoor Use Only	
	All trademarks are owned by Schneider Electric Industries SAS or its affiliated companies. www.schneider-electric.com Designed in Canada Made in Philippines	


NOTE: This is for illustration purposes only. Actual ratings vary for each model.

1	Name of the product and model number
2	Charger ratings
3	Inverter ratings
4	Grid interactive ratings
5	Product part number and operating temperature range
6	Product serial number information
7	Product date of manufacture information
8	Regulatory markings
9	Enclosure rating

Front Panel Label

The front panel label contains the LCD display and LED indicators. It also identifies the various buttons used in inverter operation. For information on the indicators and control button, see the *Figure 9 on page 31*.

Figure 2 Inverter Information Panel

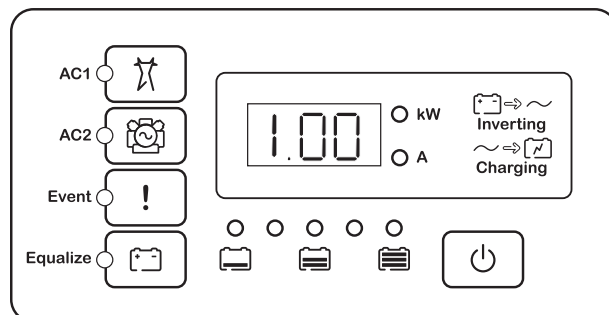

Main Product Safety Label

The main product safety label is the main safety label for the inverter which lists general hazards and instructions on avoiding them. The label is applied on the exterior of the inverter.

Do not remove, cover, deface, or alter the main product safety label. A localized label is available to install on the product.

For information on the symbols appearing in the label, see *Label Symbols on page 4*.

Other Safety Labels

Other safety labels appear on many areas of the equipment to warn of potential hazards within those areas of the inverter or to call attention to information that clarifies or simplifies a procedure. Read and follow all safety labels before proceeding.

Do not remove, cover, deface, or alter safety labels. Localized safety labels are available to install on the product.

For information on the symbols appearing in the label, see *Label Symbols on page 4*.

Radio Frequency Interference Notices

Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Audience

This guide is intended for use by anyone needs to operate, configure, and troubleshoot the Conext XW Pro inverter/charger. Certain configuration tasks should only be performed by qualified personnel in consultation with your local utility and/or an authorized dealer. Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. Keep unqualified personnel away from batteries. Servicing of batteries must only be performed or supervised by qualified personnel with knowledge of batteries and their required precautions. Qualified personnel have training, knowledge, and experience in

- Installing electrical equipment.
- Applying all applicable installation codes.
- Analyzing and reducing the hazards involved in performing electrical work.
- Installing and configuring batteries.
- Selecting and using Personal Protective Equipment (PPE).

This guide does not contain information regarding servicing or de-energization for servicing. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

About

Purpose

This guide provides explanations and procedures for operating the Schneider Electric Conext XW Pro inverter/charger.

- Installation instructions are available in the *Conext XW Pro Installation Guide* (document number 975-0800-01-01)
- Instructions for configuring inverter settings are available in this guide.

For explanations and procedures related to other products, please contact the manufacturer of those products.

Scope

This guide provides safety guidelines and information about operating the Conext XW Pro inverter/charger.

The Owner's Guide provides safety guidelines and information about operating the Conext XW Pro inverter/charger and related system components. It does not provide details about installation, maintenance, or servicing. See the Operation Guide or Owner's Guide of each device for this information. This Owner's Guide does not provide details about particular brands of batteries, photoelectric cells, or generators. Consult individual battery manufacturers for this information.

Abbreviations and Acronyms

CEC	California Energy Commission
CSA	Canadian Standards Association
GT	Grid Tie
LCD	Liquid Crystal Display
LED	Light Emitting Diode
MPPT	Maximum Power Point Tracking
NEC	US National Electrical Code NFPA-70
PV	Photovoltaic
PVGFP	PV Ground Fault Protection
UL	Underwriters Laboratories
VAC	Volts Alternating Current
VDC	Volts Direct Current

Related Information

Find more information about Schneider Electric, as well as its products and services at:
www.schneider-electric.com.

For specific information about Schneider Electric Solar products, visit:
<https://solar.schneider-electric.com>.

For available accessories, see the *Conext XW Pro Installation Guide* (document number 975-0800-01-01).

Product Safety Information

IMPORTANT: Remember to read and follow all product safety information in this document.

General Safety Instructions

Before using the inverter/charger, read all instructions and cautionary markings on the unit, the batteries, and all appropriate sections of this manual.

- Use of accessories not recommended or sold by the manufacturer may result in a risk of fire, electric shock, or injury to persons.
- The inverter/charger is designed to be permanently connected to your AC and DC electrical systems. The manufacturer recommends that all wiring be done by a certified technician or electrician to ensure adherence to the local and national electrical codes applicable in your jurisdiction.
- To avoid a risk of fire and electric shock, make sure that existing wiring is in good condition and that wire is not undersized. Do not operate the inverter/charger with damaged or substandard wiring.
- Do not operate the inverter/charger if it has been damaged in any way.
- Most of the parts in this unit are not user-serviceable parts.¹ Do not disassemble the inverter/charger except where noted for connecting wiring and cabling. See your warranty for instructions on obtaining service. Attempting to service the unit yourself may result in a risk of electrical shock or fire. Internal capacitors remain charged after all power is disconnected.
- To reduce the risk of electrical shock, disconnect both AC and DC power from the inverter/charger before attempting any maintenance or cleaning or working on any components connected to the inverter/charger. Putting the unit in Standby mode will not reduce this risk.
- The inverter/charger must be provided with an equipment-grounding conductor connected to the AC input ground.
- Do not expose this unit to rain, snow, or liquids of any type. This product is designed for indoor use only. Damp environments will significantly shorten the life of this product and corrosion caused by dampness will not be covered by the product warranty.
- To reduce the chance of short-circuits, always use insulated tools when installing or working with this equipment.
- Remove personal metal items such as rings, bracelets, necklaces, and watches when working with electrical equipment.

¹ The inverter fan and Information Panel can be replaced by qualified personnel.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, ARC FLASH, AND FIRE

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E or CSA Z462.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Never operate energized with covers removed
- Energized from multiple sources. Before removing covers identify all sources, de-energize, lock-out, and tag-out and wait 2 minutes for circuits to discharge
- Always use a properly rated voltage sensing device to confirm all circuits are de-energized.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, ARC FLASH, AND FIRE

- Disconnect negative and positive PV conductors before servicing. PV conductors are to be treated as Hazardous Live and must be disconnected.
- Normally GROUNDED conductors may be UNGROUNDED and ENERGIZED when a GROUND FAULT is indicated on the front panel. Must be serviced by qualified personnel.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, ARC FLASH, AND FIRE

This document is in addition to, and incorporates by reference, the relevant product manuals for Conext XW Pro inverter/charger. Before reviewing this document, you must read the relevant product manuals. Unless specified, information on safety, specifications, installation and operation is as shown in the primary documentation received with the product. Ensure you are familiar with that information before proceeding.

Failure to follow these instructions will result in death or serious injury.

Precautions when Working with Batteries

NOTE: Battery work and maintenance must be done by qualified personnel knowledgeable about batteries to help ensure compliance with battery handling and maintenance safety precautions.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Remove watches, rings, or other metal objects.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Keep sparks and flames away from the batteries.
- Use tools with insulated handles.
- Wear protective glasses, gloves and boots.
- Do not lay tools or other metal parts on top of batteries.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION, OR FIRE

- Battery Circuit Breakers must be installed according to the specifications and requirements defined by Schneider Electric.
- Servicing of batteries must only be performed by qualified personnel knowledgeable about batteries and the required precautions. Keep unqualified personnel away from batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.

Failure to follow these instructions will result in death or serious injury.

Limitations on Use

WARNING

HAZARD DUE TO UNINTENDED USE

The Conext XW Pro inverter is not intended for use in connection with life support systems or other medical equipment or devices. The Conext XW Pro inverter can only be used in grid-interconnected, off grid, and integrated PV systems. It is not suitable for any other application areas.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Explosive Gas Precautions

WARNING

EXPLOSION HAZARD

The Conext XW Pro is not ignition protected. To prevent fire or explosion, do not install this product in locations that require ignition-protected equipment. This includes any space containing gasoline-powered machinery, fuel tanks, as well as joints, fittings, or other connections between components of the fuel system.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Working in the vicinity of lead acid batteries is dangerous. Batteries generate explosive gases during normal operation. Therefore, you must read this Owner's Guide and follow the instructions exactly before installing or using your inverter/charger.

To reduce the risk of battery explosion, follow these instructions and those published by the battery manufacturer and the manufacturer of the equipment in which the battery is installed.

Contents

Safety Information	3
Label Symbols	4
Product Labels	5
Radio Frequency Interference Notices	8
Audience	9
About	10
Purpose	10
Scope	10
Abbreviations and Acronyms	10
Related Information	11
Product Safety Information	12
General Safety Instructions	12
Precautions when Working with Batteries	14
Limitations on Use	14
Explosive Gas Precautions	15
Introduction	21
Features	22
Performance Highlights	22
Distinguishing Features	22
Available Conext XW Pro Accessories	23
Regulatory Certification	23
Operation	24
Bidirectional Theory of Operation	24
Surge Performance	27
Islanding Protection	27
AC Coupling	28
Multi-unit Operation	29
Auxiliary Output	30
Transfer Relay	30
K1 and K2 relay	30
Monitoring the Conext XW Pro	31
Conext XW Pro Information Panel	31
Conext SCP (System Control Panel)	32
Conext Gateway	32
Conext Configuration Tool	32
Monitoring Operation	33

Monitoring Operation with the Inverter Information Panel	34
Monitoring AC Input Status	34
Monitoring Conext XW Pro Status	35
Monitoring Charger Status	36
Monitoring Events	36
Equalizing Batteries	36
Using Startup/Shutdown/Standby Modes	38
Monitoring Battery Level	40
Reading the Display Screen	41
Monitoring Operation with the Conext SCP	42
Conext SCP Features	42
Using the Standby Button	43
Conext SCP Navigation	44
Reading the System Status Screen	46
Reading the Conext XW Pro Home Screen	48
Reading the Meters Screen	51
Configuration	53
Using the Conext SCP	55
Conext XW Pro Setup Menu	55
Setting the Time and Date	57
Using the Setup Menus	58
Basic menu	58
Advanced menu	58
Inverter Settings Menu	61
Using the Low Battery Cut Out and LBCO Delay Settings	62
Using Search Mode	62
Charger Settings Menu	64
Battery Charger Functions	65
Multi-Unit Charger Settings	66
Multi-Stage Charging Process	67
Equalize Charging	72
Custom and Lithium Ion Battery Settings Sub Menus	75
AC Input Settings	79
Grid Support Settings	81
Prioritizing and Managing Energy Sources with Advanced Features	82
Grid Support	82
Charger Block	84
Peak Load Shaving (PLS)	85

Generator Support Settings	88
Auxiliary Output Settings	90
Trigger Source Descriptions	91
Multi-Unit Config Menu	93
Setting the Device Name	95
Setting the Device Number	95
Connections Menu	96
Copying Settings From Another Unit	98
Resetting the Conext XW Pro to Default Settings	100
Using the Advanced Features	101
Troubleshooting	103
General Troubleshooting Guidelines	104
Inverter Applications	105
Resistive Loads	105
Motor Loads	105
Problem Loads	105
Inverter Troubleshooting	107
Battery Charger Troubleshooting	111
Faults and Warnings	116
Warning Messages	116
Fault Messages	119
Specifications	131
Appendix A: Specifications	132
Electrical Specifications	132
Regulatory Approvals	133
Response to Abnormal Grid Conditions	140
Conext XW Pro Overload Capability	141
Output Power Versus Ambient Temperature	142
Conext XW Pro Efficiency	143
Mechanical Specifications	145
Default Settings	147

1 Introduction

What's in This Chapter?

Features	22
Performance Highlights	22
Distinguishing Features	22
Available Conext XW Pro Accessories	23
Regulatory Certification	23
Operation	24
Bidirectional Theory of Operation	24
Surge Performance	27
Islanding Protection	27
AC Coupling	28
Multi-unit Operation	29
Auxiliary Output	30
Transfer Relay	30
K1 and K2 relay	30
Monitoring the Conext XW Pro	31
Conext XW Pro Information Panel	31
Conext SCP (System Control Panel)	32
Conext Gateway	32
Conext Configuration Tool	32

Features

The Conext XW Pro is a modular building block sine-wave inverter/charger that can be used for residential and commercial battery based off-grid, grid backup, and grid interactive applications.

The Conext XW Pro is a self-contained DC to AC inverter, battery charger, and integrated AC transfer switch. It is configurable in a hybrid system to operate with generators and renewable energy sources. These configurations are capable of extending battery based off-grid/backup autonomy.

Performance Highlights

- High-capacity motor load starting with high 30-minute and 5-second power.
- Off-grid AC Coupling with PV inverters using frequency power curtailment method.
- Operation in hot environments up to 40°C without derating.
- Conversion of DC energy to AC energy for export to the utility grid.
- Power factor corrected charging minimizes AC current required for charging.
- Very low distortion sine wave output.

Distinguishing Features

- Grid-interactive feature set enables time management and prioritization of energy sources and power conversion to support advanced modes of operation such as load shifting, self consumption and peak load shaving.
- Dual AC input connections with 60 A automatic transfer switch integrates both utility grid and generator.
- Generator Support functionality assists small generators with heavy loads.
- Auxiliary port assist with relay switching of external devices such as battery room fans, diversion loads and generators.
- Configurable battery parameters for customized battery charging.
- Field serviceable boards and components.

Xanbus™ Network Communications Protocol

The Conext XW Pro uses Xanbus™, a network communications protocol developed by Schneider to communicate with other Xanbus-enabled devices. You can configure and monitor the Conext XW Pro and other Xanbus-enabled devices in the system using the System Control Panel (part number 865-1050-01).

Available Conext XW Pro Accessories

Accessory	Part Number
Conext XW Pro Power Distribution Panel	865-1015-01
Conext XW Pro Power Distribution Panel (Without AC Breakers)	865-1014-01
Conext XW Pro Conduit Box	865-1025-01
Conext XW Pro PDP 120/240V 60A Breaker Kit	865-1215-01
Conext Gateway	865-0329
Conext Configuration Tool (required for Rule 21 settings)	865-1155-01
Conext SCP System Control Panel	865-1050-01
Conext AGS Automatic Generator Start	865-1060-01
Conext MPPT solar charge controller MPPT 60 150	865-1030-1
Conext MPPT solar charge controller MPPT 80 600	865-1032
Conext Battery Monitor	865-1080-01

Regulatory Certification

The Conext XW Pro is California tariff Rule 21-compliant and certified to UL1741SA and for IEEE 1547 - 2005. For a list of features, see *California Electric Rule 21 on page 133*.

Operation

Bidirectional Theory of Operation

The Conext XW Pro is a grid forming device consisting of a bidirectional inverter/charger. It is capable of inverting DC power into AC power and controlling the voltage and frequency of its inverter output. It will power external loads attached to AC OUT (See *on page 22*).

The Conext XW Pro is also capable of charging external batteries by converting AC power into DC power (See *on page 22*). The Conext XW Pro accepts AC power through connection AC2 for charging batteries, usually from a generator (See *on page 22*).

The Conext XW Pro will convert externally sourced DC power into AC power for export to the utility grid attached to its AC1 connection (See *on page 22*).

The Conext XW Pro has an internal automatic transfer switch (K1, K2) which allows either AC1 or AC2 to be connected to the inverter input, but not both at the same time (See *Figure 3 on page 24*). This allows shared AC energy during charging or to directly passthrough from AC1, or AC2, to AC Out.

Through firmware control over power conversion and the management of K1 and K2, Conext XW Pro can facilitate advanced interaction with the utility grid to optimize the utilization of renewable and non-renewable energy sources. Because the Conext XW Pro is a device capable of forming an AC grid signal (AC voltage and frequency) it is also ideal for use off-grid.

The red arrows in the diagrams below represent the direction of power flow in the respective modes of operation. These modes and other special functions will be explained throughout this manual.

Figure 3 Connection Points and Major Power Conversion Components of Conext XW Pro

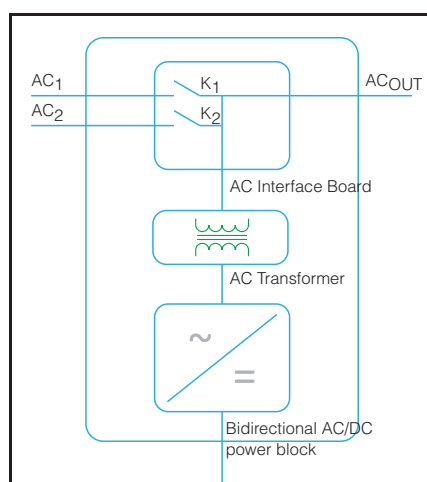


Figure 4 Inverting of DC to AC Connected to AC OUT

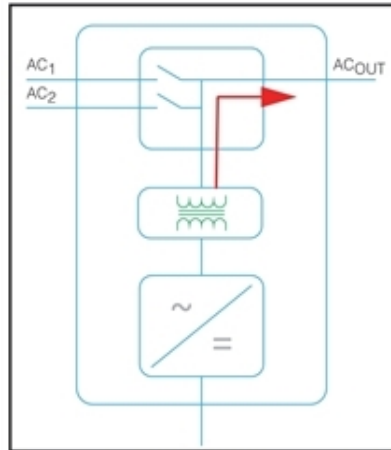


Figure 5 Charging External Batteries and Supplying AC Out with AC Passthrough from AC1 Grid

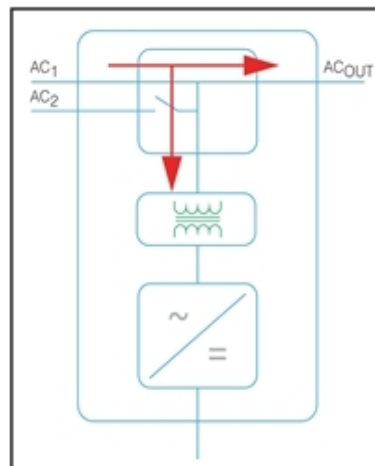


Figure 6 Charging External Batteries and Supplying AC Out with AC Passthrough from AC2 Generator

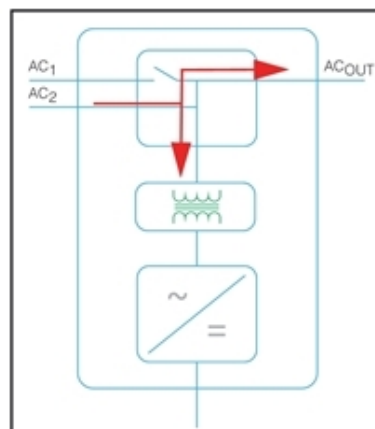


Figure 7 Converting Excess Available DC power for Export to Utility Grid (AC1) and AC Out


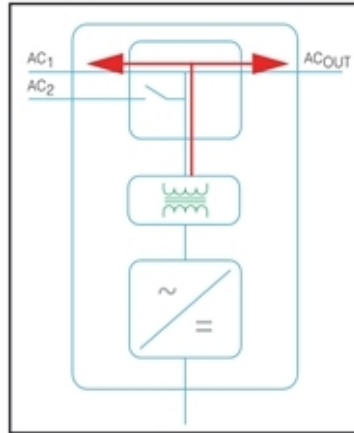


Figure 8 AC Passthrough

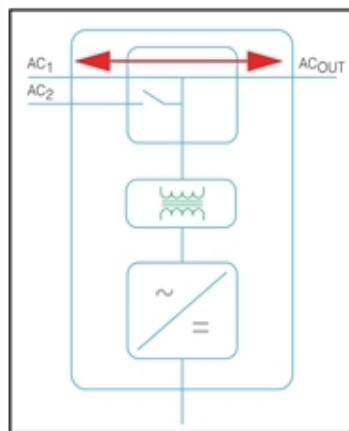

Surge Performance

Unlike many other inverters, the Conext XW Pro helps stop voltage from sagging dramatically during surge conditions. The Conext XW Pro handles surges of over twice its rated output power with only a minimal drop in output voltage for limited periods of time.

Islanding Protection

Islanding protection is an essential safety feature that helps reduce harm to those working on the utility grid from a distributed energy source such as the Conext XW Pro. Islanding protection also helps to prevent loads connected to the Conext XW Pro from being damaged by a fluctuating utility grid input. The Conext XW Pro uses proprietary positive feedback control to achieve anti-islanding operation while maintaining low total harmonic distortion at the grid connection. Default software settings are programmed into each Conext XW Pro at the factory so that they comply with applicable safety regulations (such as IEEE 1547 and UL 1741 in North America).

In some instances it may be desirable from both a utility and a customer point of view to adjust the default anti-islanding settings. For example, the Conext XW Pro may experience “nuisance trips” if the grid is weak and the voltage falls outside the allowable range specified by regulations. It may be difficult for a utility to adjust the grid to stop this problem. With permission from the utility, the factory settings may be changed to allow the Conext XW Pro to operate over a wider grid voltage range. These settings must only be changed by qualified service personnel using a special software application (Conext XW Pro Configuration Tool, Order # 865-1155-01) provided by the manufacturer.

While exporting energy, the Conext XW Pro continuously monitors the utility grid voltage and frequency. If the grid voltage or frequency move beyond the Conext XW Pro default ranges (for example, during a power surge or outage) the Conext XW Pro stops exporting energy through AC1 and disconnects from the utility. If disconnected due to a grid voltage disturbance, five minutes is the non-adjustable minimum reconnect time during which the Conext XW Pro does not export energy through AC1 to the grid. The Event LED on the Conext XW Pro information panel will indicate a utility fault. No fault code appears on the three-character display because the fault is with the utility grid, not with the Conext XW Pro.

In addition to the information panel, the Conext SCP indicates a utility fault with the Event/Warning LED and also displays a fault message on screen (faults F23 to F40 are utility faults—see *Figure 4-6, “Fault Messages” on page 4-19*). The faults cannot be manually cleared. Utility faults will clear automatically when the utility grid voltage and frequency return to within the ranges programmed into the Conext XW Pro. If grid support is enabled and the utility voltage and frequency come back within tolerance, the Conext XW Pro information panel displays a countdown timer for five minutes until the Conext XW Pro can start interacting with the grid again.

AC Coupling

Off-grid AC Coupled system architecture is often used to create a stand-alone grid. Commonly this means that PV inverters are connected to the output of a battery-based inverter/charger putting both on the same AC bus along with the AC loads. In this scenario, the battery powered inverter charger provides the necessary frequency and voltage to enable the PV inverter to produce power. This type of system must be able to maintain power generation in balance with power consumption at all times. If there is more power being generated than can be consumed by the loads, power will flow to the inverter/charger and be converted to DC power which flows into the battery. Once the battery reaches capacity, power generation by the PV inverter must be curtailed to maintain the balance between generation and consumption. As the battery bank reaches capacity, Conext XW Pro curtails PV inverter generation by raising the AC line frequency causing compatible PV inverters to reduce their power output in an orderly manner. This is called Active Frequency Shift Power Curtailment.

During a grid outage even a home with a grid-tie PV inverter system will be without power because PV inverters cannot produce power without the presence of a reference voltage and frequency. To enable the PV inverter to provide power during a grid outage the Conext XW Pro is retrofitted in front of the PV inverter. The PV inverter is rewired from the grid connection to a critical load (sub) panel and is AC Coupled to the Conext XW Pro AC Output port. When the grid is present, PV inverter power feeds the loads and any excess is exported by Conext XW Pro to the grid using AC1 (where permitted by the local utility). During a grid outage, Conext XW Pro anti-islanding protection helps to prevent power from being exported to grid on AC1. Conext XW Pro then uses Active Frequency Shift Power Curtailment to reduce the power output of compatible PV inverters, maintaining the balance of generation and consumption.

Consult the manufacturer's specifications to determine if your PV inverter is compatible with Active Frequency Shift Power Curtailment. Conext XW Pro AC coupling function is enabled by default (Advanced Features Menu).

NOTICE

AC COUPLED PV INVERTER COMPATIBILITY

AC power generated by AC coupling PV inverters with Conext XW Pro must be consumed by AC loads or used to charge batteries. As an alternative, the excess power produced from a PV inverter can be routed to dump loads. Do not AC couple PV inverters with the Conext XW Pro that are unable to reduce, derate or cease the excess PV inverter power in response to the changes in AC line frequency controlled by the Conext XW Pro. Consult the manufacturer's specifications of your PV inverter and confirm compatibility.

Failure to follow these instructions can result in equipment damage.

The AC coupling advanced setting should remain enabled except in cases when the DC voltage level is allowed to have large variations and the line frequency needs to remain constant.

Further details about AC Coupling can be found in the document *AC Coupling of Inverters Solutions Guide* (975-0240-01-01) available at <http://solar.schneider-electric.com>.

Multi-unit Operation

Important: An external transfer switch may be required to protect the internal relays from the combined loads of the system. For more information, see the *Conext XW Multi-Unit Power System Design Guide* (975-0739-01-01).

Up to three Conext XW Pro units can be installed together in a split phase configuration with the Conext XW Pro PDP (Power Distribution Panel). The PDP is an ideal optional companion for managing AC connections and integrating a battery bank and other DC connections.

Multiple Conext XW Pro units and other Xanbus devices with common connections to battery banks, PV arrays, the utility grid or a generator require programming during commissioning to enable correct operation.

Inverting

For multiple units, the master Conext XW Pro synchronizes operation of other connected units using the same Xanbus network. When AC loads are present, all units produce power. Refer to the *Conext XW Multi-Unit Power System Design Guide* (975-0739-01-01) for total system surge ratings.

Parallel Charging

Multiple Conext XW Pro units on the same Xanbus network synchronize their charging stages to help provide efficient charging of the battery bank. When a single unit transitions from bulk to absorption, so do all other units. In absorption, all units must complete the absorption stage before any of them transition to the next stage. Note that units stop sharing charge current just before completing the bulk stage and only share charging load during the bulk stage.

Each Conext XW Pro unit provides a maximum charging current set by the `Max Charge Rate` setting. The maximum current may be decreased, subject to the internal operating temperature.

When one or more Conext Solar Charge Controllers are installed and operating in the system, Conext XW Pro units synchronize only their bulk charging stage with the charge controllers.

Note: Equalization is device specific. Only the device(s) on which equalization was initiated will perform the equalization. Other devices will stay in float or no-float depending on their settings.

AC Transfer

Multiple Conext XW Pro units monitor each other to determine the quality of AC input. If AC input is deemed to be bad by any of the paralleled units, no transfer to AC Out occurs and the AC LED continues to flash on each unit's information panel until the AC is

qualified by all. If the system was in passthrough and AC fails on any unit, all units transfer to invert simultaneously.

Faults

When the Conext XW Pro detects a fault condition, the fault is displayed on the Conext XW Pro. The Conext XW Pro also turns on the Event LED on the Conext XW Pro and inverter information panel. A fault affects the operation of the unit. See “Fault Types” on page 4–14 for an explanation of the different fault types.

When a single Conext XW Pro slave unit in a multi-unit system has a fault, only the affected device shuts down.

When a master unit has an invert mode fault that causes it to stop inverting, it is considered a system-wide fault and all units shut down. Invert mode faults on slave units only shut down the affected slave unit.

All units shut down when there is a battery-related fault such as battery over-temperature or over-voltage.

Independent Operation of Features

Each Conext XW Pro grid-interactive feature (e.g. enhanced grid support, grid sell, load shave and generator support) operates independently. This enables Conext XW Pro units in a multi-unit system to be configured to perform multiple functions independently and allows greater flexibility in operating the entire system.

Auxiliary Output

Each Conext XW Pro has one programmable 12 V, 0.25 A auxiliary output that is able to run a small fan or operate an external relay to perform other functions. Examples include remotely starting a two-wire start generator in cases where the Xanbus-enabled Conext XW Pro AGS is not used, disconnecting external non-critical loads, or turning on a diversion load for battery voltage regulation. See “*Auxiliary Output Settings*” on page 3–37 for programming parameters.

Transfer Relay

The built-in transfer relay is rated for 60 amps. When an external AC source is detected and qualified on either of the AC1 or AC2 inputs, the relay transfers loads from the Conext XW Pro to the external power source, and then activates the battery charger. Multi-unit systems of three or more require the use of an external AC contactor to manage the AC bus.

K1 and K2 relay

The Conext XW Pro design does not allow the K1 and K2 relays to close simultaneously. This design helps stop the generator input (AC2) from back feeding to the utility grid (AC1).

Monitoring the Conext XW Pro


Operation of the Conext XW Pro can be monitored using the factory-installed inverter information panel or the optional Conext SCP. To configure the Conext XW Pro, the Conext SCP and Conext Gateway must be used.

Conext XW Pro Information Panel

The Conext XW Pro information panel features:

- Buttons for Conext XW Pro Startup/Shutdown/Standby control, clearing faults and warnings, and battery equalization.
- A three-character display to indicate power output, charge current, anti-islanding countdown or troubleshooting information.
- LEDs to indicate AC input status, output status, battery condition, and system warnings/faults.

Figure 9 Conext XW Pro Information Panel

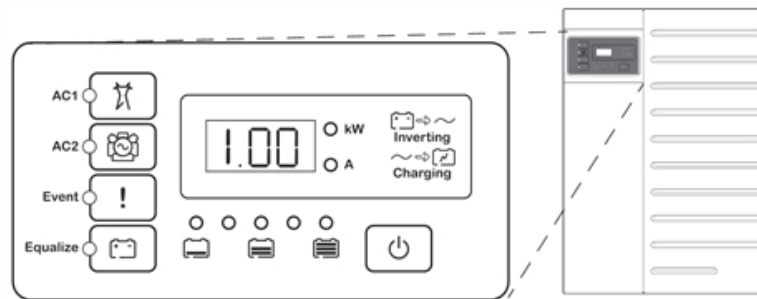


Conext SCP (System Control Panel)

The Conext SCP is required for configuring the Conext XW Pro and other Xanbus-enabled system components.

The Conext SCP features:

- A liquid crystal display which provides graphics and text describing real time operation and status information.
- An Event/Warning LED indicator.
- Internal clock which is used to control time-dependent Conext XW Pro functions.
- Buttons to select configuration menus, customize Conext XW Pro functions and clear faults and warnings.

Figure 10 Conext SCP

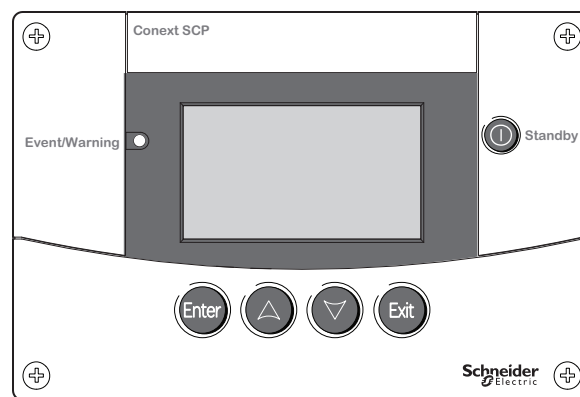

Conext Gateway

The Conext Gateway is a multi-function communication device that provides an overall view of system performance for residential power monitoring systems. It also provides a communications gateway between a network of Xanbus™-enabled devices and Modbus devices.

Conext Configuration Tool

The Conext Configuration Tool is used by system installers to simplify the task of system configuration and reduce installation time. It is a PC-based software tool that works on Conext series devices and peripherals.

2 Monitoring Operation


What's in This Chapter?

Monitoring Operation with the Inverter Information Panel	34
Monitoring AC Input Status	34
Monitoring Conext XW Pro Status	35
Monitoring Charger Status	36
Monitoring Events	36
Equalizing Batteries	36
Using Startup/Shutdown/Standby Modes	38
Monitoring Battery Level	40
Reading the Display Screen	41
Monitoring Operation with the Conext SCP	42
Conext SCP Features	42
Using the Standby Button	43
Conext SCP Navigation	44
Reading the System Status Screen	46
Reading the Conext XW Pro Home Screen	48
Reading the Meters Screen	51

Monitoring Operation with the Inverter Information Panel

The inverter information panel on each Conext XW Pro monitors a single Conext XW Pro. The Conext XW Pro information panel displays basic information and performs start up, shut down, equalization and standby functions. LEDs on the information panel indicate AC input status, Conext XW Pro status, battery condition, and charging and equalization status. The Conext XW Pro LEDs and three-character display screen indicate warning and event conditions.

Figure 11 Inverter Information Panel

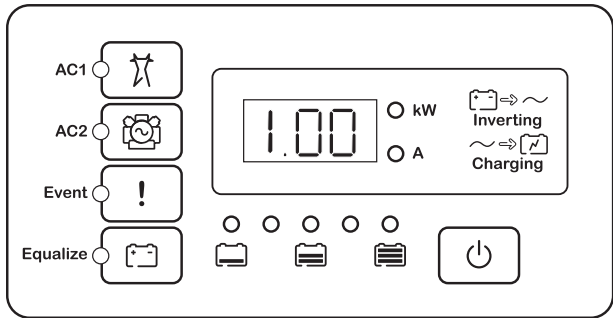

Monitoring AC Input Status


Grid (AC1)

The green Grid (AC1) LED indicates the presence and status of the AC source connected to the AC1 input.

Symbol	LED On	LED Flashing	LED Off
	AC input is present and qualified. The Conext XW Pro is ready to charge batteries, pass AC through to the loads, or interact with the grid.	AC input is present and is being qualified.	The Conext XW Pro is not connected to the grid. AC input is not present, or AC input is present but not within qualifying range.

Gen (AC2)


The green Gen (AC2) LED indicates the presence and status of a generator or other auxiliary AC source on the AC2 input.

Symbol	LED On	LED Flashing	LED Off
 <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-left: 10px;">NOTE: Traced from a TIFF</div>	<p>The AC source is present and AC input is qualified. The Conext XW Pro is ready to charge batteries and pass power through to the loads.</p>	AC input is present and is being qualified.	AC input is not present, or AC input is present but not within qualifying range.

When one AC input LED is on and the other AC input LED is flashing, AC input is present on both AC1 and AC2. However, the Conext XW Pro can qualify and receive AC input from only one source at a time. The qualified source is represented by the steadily lit LED. When two sources of AC input are present, the Conext XW Pro uses the source selected under AC Priority in the AC Settings menu.

Monitoring Conext XW Pro Status

The Green kW LED indicates the Conext XW Pro is inverting DC input to AC output. When this LED is on or flashing, the display screen shows Conext XW Pro output power in kilowatts.

Symbol	LED On	LED Flashing	LED Off
	The Conext XW Pro is inverting and generating an AC output. Display screen shows output power in kW.	The Conext XW Pro is in Grid Support mode. Display screen shows output power in kW.	The Conext XW Pro is not inverting.

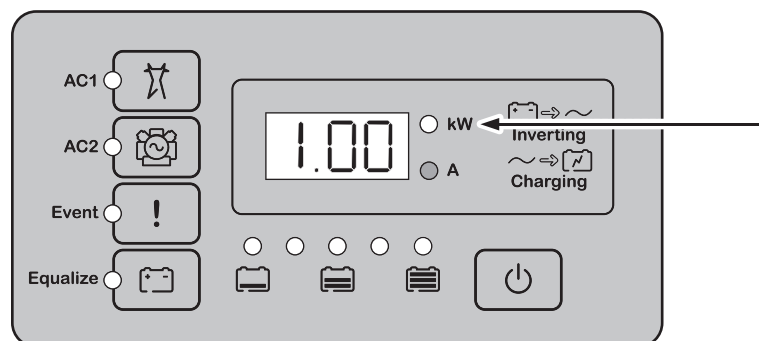



Figure 12 Inverter Information Panel When Inverting

Monitoring Charger Status


The green LED labelled “A” indicates the Conext XW Pro is charging the battery bank. When this LED is on, the numeric display screen shows battery charging current in amps.

Symbol	LED On	LED Flashing	LED Off
	The Conext XW Pro is charging the battery bank. The numeric display screen shows battery charging current in amps.	AC coupled charging is occurring ^a . May flash in AC coupled mode where reverse current greater than 3 A is present. Multiple units are connected in parallel under no load.	The Conext XW Pro is not in charge mode.

When a charge cycle ends or charging is manually disabled, the Conext XW Pro does not leave charge mode immediately, and the charging LED remains on for 60 seconds.


Monitoring Events

The Red Event LED indicates the presence of a fault or warning in the system. To clear active events, briefly press and release the STARTUP/SHUTDOWN button.

Symbol	LED On	LED Flashing
	The Conext XW Pro has stopped charging or inverting due to a event. The LED also turns on steadily if the unit has both a fault and a warning.	The Conext XW Pro has a warning. A warning may escalate to a fault if the warning condition does not go away.

Equalizing Batteries

Button

Pressing the Equalize button ( symbol) for five seconds initiates a battery equalization cycle. This cycle is used to restore battery capacity when battery life has deteriorated due to sulphation. After the button is pressed the Conext XW Pro begins a full charge cycle, which is automatically followed by an equalization cycle. Equalization functions only when AC is present and qualified and the charger is enabled. Otherwise the Conext XW Pro generates a Cannot Equalize warning (W96).

^aSee the document “AC Coupling of Inverters Solutions Guide” available at <http://solar.schneider-electric.com> for more information about AC coupling.

WARNING

EQUALIZATION HAZARD

- Only flooded lead acid batteries should be equalize charged. Hydrogen and oxygen gases are produced when batteries are equalized and can potentially cause an explosion if ignited. Corrosive battery acid can escape.
- Provide adequate ventilation and remove all sources of ignition, such as open flames, sparks, electric motors, relays, light switches, etc.
- Equalization voltage is significantly higher than nominal battery voltage. Detach electronics that can be damaged by high DC voltage.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

WARNING

BATTERY TYPE AND SETUP HAZARDS

- Incorrect battery configurations or settings for battery types can lead to dangerously high battery temperature, fire and explosion. To avoid damaging your batteries during charging or equalization, and to minimize the risk of fire or explosion consult battery manufacturer's documentation before setting battery parameters and follow the battery manufacturer's recommended settings.
- Always use and connect the Battery Temperature Sensor (BTS).
- Always verify that the configured battery type matches the battery type being used.
- Custom battery settings should be configured by qualified personnel only.
- When using Lithium-Ion batteries, ensure that the battery pack being used includes a Battery Management System (BMS) with safety controls.


Failure to follow these instructions can result in death, serious injury, or equipment damage.

In a system where more than one device is capable of equalizing batteries (such as a system including multiple Conext XW Pro units and/or Conext XW Pro Solar Charge Controllers), there is no system-wide equalization command for all devices. To equalize with multiple devices, each would have to be enabled individually. Alternatively, equalization can be performed using only the selected device. During the equalization process, one device applies the equalization charge while the other devices continue to operate in synchronized charge mode, typically in float (three-stage charging) or no-float (two-stage charging).

For more information, see *Using the Conext SCP on page 55*.

LED

The yellow Equalize LED indicates that the Conext XW Pro is equalizing batteries.

Symbol	LED On	LED Flashing
	The Conext XW Pro has begun equalizing the batteries.	Equalization has been requested but has not begun. The Conext XW Pro must complete a charge cycle before applying the equalization charge.

Using Startup/Shutdown/Standby Modes

Startup/Shutdown control

When the Conext XW Pro is operating, pressing and holding the STARTUP/SHUTDOWN button for five seconds shuts down the unit. To return the unit to its operating state, press the STARTUP/SHUTDOWN button again.

While the Conext XW Pro is turning off, the other inverter information panel buttons stop working. The shutdown process cannot be cancelled. The Conext XW Pro can only be restarted once the display is blank.

Standby mode

In Standby mode, the Conext XW Pro stops charging and inverting. Also in Standby mode, the Conext XW Pro disconnects its internal transfer switches which stops AC to pass through to the AC output. However, the unit remains powered and present on the Xanbus network. Lastly, in Standby mode, Conext XW Pro basic and advanced settings can be changed and put into effect.

To put the Conext XW Pro into Standby mode, press and hold the STARTUP/SHUTDOWN button and the Equalize button simultaneously for about five seconds. The display shows Stb. To return the Conext XW Pro to operating mode, press the STARTUP/SHUTDOWN button momentarily.

Pressing the STARTUP/SHUTDOWN button momentarily while the Conext XW Pro is operating clears active faults and warnings.

Single-unit installations

In a single-unit installation, when the Conext XW Pro is shut down using the STARTUP/SHUTDOWN button, Xanbus network power is off. When Xanbus network power is off, network-connected accessories such as the Automatic Generator Start (Conext AGS) and Conext SCP could lose power and stop operating. Conext MPPT solar charge controllers continue to operate if Xanbus network power is removed, but they do not continue to communicate with each other.

If the STARTUP/SHUTDOWN button is pressed and held on a Conext XW Pro and a Conext AGS is installed in the system, the unit stops inverting or charging immediately and shuts down completely in 120 seconds. During this time, the display shows OFF. This interval allows the Conext AGS to stop the generator after a cool down period. During the 120 second shutdown time, all network communication is blocked and the unit sends a shutdown command to all other devices in the system. As well, the inverter information panel buttons stop working. The shutdown process cannot be canceled. The Conext XW Pro can only be restarted again once the display is blank.

Multiple-unit installations

If the STARTUP/SHUTDOWN power button is pressed and held on a master Conext XW Pro (see “Inverter Mode” on the *Using the Conext SCP on page 55*) and a Conext AGS is installed in the system, the unit stops inverting or charging immediately and turns off completely in 120 seconds. During this time, the display shows OFF. This interval allows the Conext AGS to stop the generator after a cool down period. During the 120 second shutdown time, the master unit stops network communication and the slave units issue an external sync fault (F69) or a system configuration fault (F66). As well, the inverter information panel buttons stop working. The shutdown process cannot be cancelled. The Conext XW Pro can only be restarted once the display is blank.

In a multiple-unit installation, when a slave Conext XW Pro is shut down, other Conext XW Pro units continue to supply Xanbus network power and the Conext AGS and Conext SCP continue to operate.

Monitoring Battery Level

When the Conext XW Pro is inverting, the row of five LEDs indicates the approximate available SOC (State of Charge) of the batteries connected to the system. This capacity reading is based on battery voltage.

The battery LEDs can retrieve information from various sources depending on the devices installed in the system. SOC information is reported from one of the following devices, listed in order of priority:

1. Conext Battery Monitor (If installed)
2. Conext MPPT solar charge controller (When operating)
3. Conext XW Pro

When the Conext XW Pro is reporting, there are four battery states from empty to full. When the available battery state is empty, no LEDs are lit. The battery is considered empty when its depth of discharge exceeds approximately 50 per cent. When the battery capacity is low, the two leftmost LEDs are lit. When the battery is at medium capacity, the four leftmost LEDs are lit. When the battery capacity is full, all five LEDs are lit. When the Conext Battery Monitor or Conext MPPT solar charge controller devices are reporting, the true SOC will be indicated on the battery level LEDs and all LEDs will be utilized.


 
NOTE: The battery LEDs are not a precise indicator of battery level. They are to be considered a general guideline rather than an exact measurement. For greatest accuracy, install the Conext Battery Monitor (Part # 865-1080-01).



Figure 13 Battery Level LEDs

Reading the Display Screen

The numeric display screen shows the following information about the operational state of the Conext XW Pro:

- Output power in kilowatts (when the  (kW) LED is lit).
- Battery charger current in Amps (when the  (A) charging LED is lit).
- Stb when the Conext XW Pro is in Standby mode.
- Sch when the Conext XW Pro is in Search mode. See *Using the Conext SCP* on page 55.
- OFF when the STARTUP/SHUTDOWN button is pressed and held for five seconds. OFF is displayed briefly before the unit turns off.
- “—” appears when the Conext XW Pro is in transition between modes, when inverter selection is disabled via the Conext SCP, or operating in AC passthrough mode.
- En appears momentarily when the Conext XW Pro is enabled.
- dIS appears momentarily when the Conext XW Pro is disabled.
- 5 minute countdown timer value may appear if there is no other more significant information to display after grid interruption during energy export operation.


Monitoring Operation with the Conext SCP

The (Conext SCP provides remote configuration and monitoring capability for the Conext XW Pro and all other Xanbus-enabled devices in the network.

You can monitor Conext XW Pro operation on the Conext SCP using the:

- System Status screen (see "Reading the System Status Screen" on page 46)
- Conext XW Pro Home screen (see "Reading the Conext XW Pro Home Screen" on page 48)
- Conext XW Pro Meters Menu (see "Reading the Meters Screen" on page 51).

Conext SCP Features

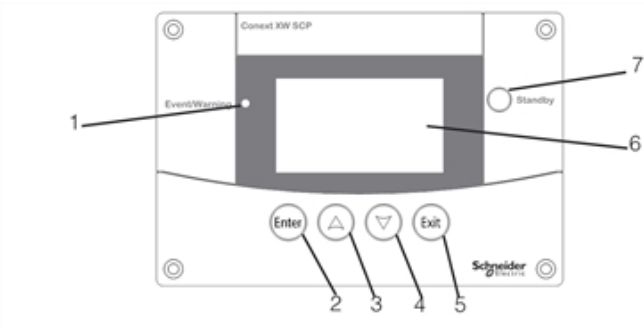

Feature	Description
1	Event/Warning LED indicates a device on the system has a fault or warning condition and requires attention. The LED flashes when a warning occurs and turns on steadily when a fault occurs.
2	Enter button confirms selection of a menu item or displays the next screen.
3	Up arrow button scrolls upwards through screen text or increases a selected value.
4	Down arrow button scrolls downwards through screen text or decreases a selected value.
5	Exit button cancels selection of a menu item or displays the previous screen.
6	Display shows menus, settings, and system information.
7	Standby button disables inverting and charging on all Conext XW Pro units in the system when pressed for one to two seconds. To enable inverting and charging, press the Standby button again.

Using the Standby Button

The Standby button has two functions. First, the Standby button can disable inverting and charging for the Conext XW Pro units in the system. Second, when pressed simultaneously with the Exit button, the Standby button can put the entire system into Standby mode. When in Standby mode, whether for the Conext XW Pro or all system devices, settings can be changed and put into effect. This means that any changes in the settings made during Standby mode will take effect once the devices go back to Operating mode.

Pressing the Standby button produces the same result as disabling Invert and AC Charge in the System Settings menu. Pressing the Standby button momentarily affects only Conext XW Pro units and only the inverter/charger operation; it does not affect Conext MPPT solar charge controller operation and AC passthrough. After disabling inverting and charging with the Standby button, the system continues to pass through AC power to the loads, and “—” is displayed on the inverter information panel.

Pressing the Exit and Standby buttons at the same time puts the entire Conext power system (including Conext MPPT solar charge controllers) into Standby mode. In Standby mode, the Conext XW Pro units stop passing AC power through to the loads, and Stb is displayed on the inverter information panel.

If a Conext AGS is installed and a generator is running, the system commands the generator through a cool down and shut down cycle. This operation cannot be interrupted and may take up to 120 seconds.

Conext SCP Navigation

This section describes the different types of screens and menus on the Conext SCP that are useful for monitoring or controlling Conext XW Pro operation.

Viewing the Conext SCP Home Screens

The top level screens on the Conext SCP are the startup screen, the System Status screen and the device Home screen. Whenever power is applied the startup screen appears, followed by the System Status screen. Press the up or down key to view the device Home screen for any system connected Xanbus devices. See *Figure 14 on page 44*.

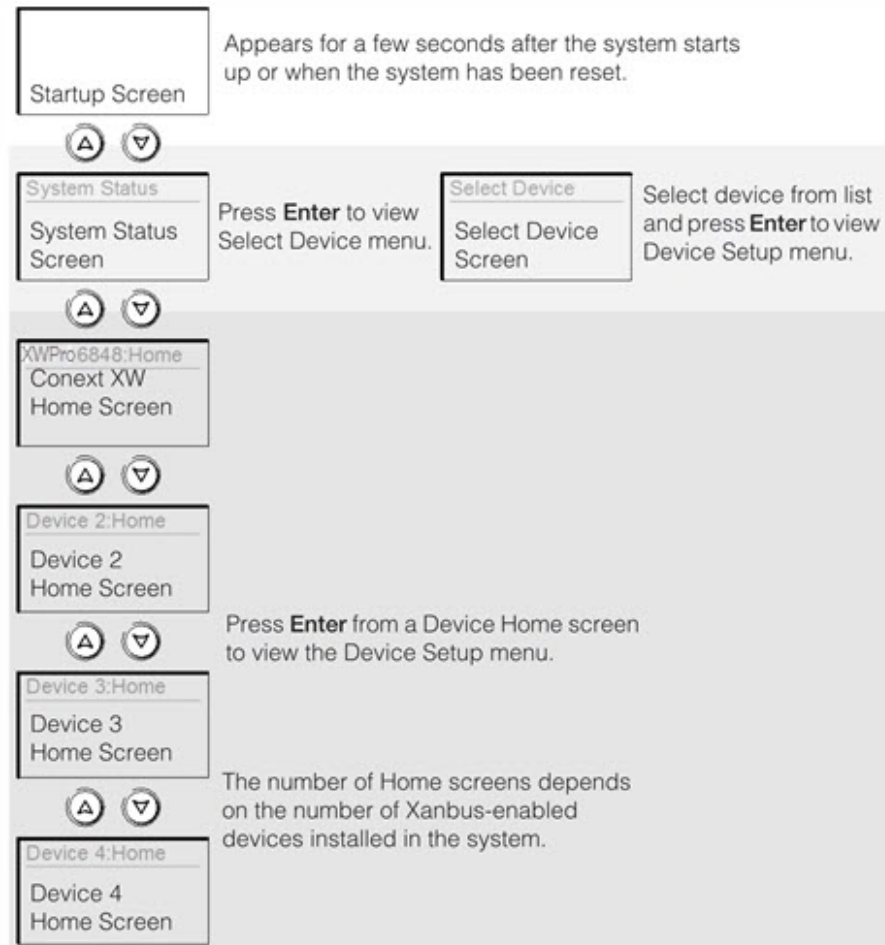


Figure 14 Conext SCP Top Level Screens

System Status Screen

The System Status screen appears after the startup screen. It displays aggregated status information for the entire power system. For example, a system might have three Xanbus network-connected Conext XW Pros, two Conext MPPT solar charge controllers, one Conext AGS module, and one Conext SCP connected to a single battery bank, a single generator, and a common utility grid.

The System Status screen features a Menu arrow pointing to the Enter button. Pressing **Enter** takes you to the Select Device menu. For more information, see *Reading the System Status Screen on page 46*.

Note: If you are uncertain as to which Conext SCP screen or menu you are viewing, you can return to the starting point—the System Status screen—by pressing **Exit** repeatedly until the screens stop changing.

Conext XW Pro Home Screen

The Conext XW Pro Home screen is the first of the device Home screens. Each Conext XW Pro installed in the system has its own Home screen.

The Conext XW Pro Home screen displays status information for the Conext XW Pro. The screen appearance varies with the status of the Conext XW Pro (standby, inverting, etc.) For more information, see *Reading the Conext XW Pro Home Screen on page 48*.

To display the Conext XW Pro Home screen:

- While viewing the System Status screen, press the down arrow key.

Viewing Other Screens

This section describes the next level of screens and menus on the Conext SCP.

Select Device Menu

The Select Device menu displays a list of Xanbus-enabled devices in the system, including the Conext XW Pro and the Conext SCP. From this menu you can access the Setup menus for each device in the system.

The Select Device menu also contains the Clock menu (where the time and date are set) and the System Settings menu (where system-level settings can be configured). These menus and the Conext SCP menu are available from the Select Device menu, regardless of the number of Xanbus-enabled devices installed.

To display the Select Device menu:

- While viewing the System Status screen, press **Enter**.

Device Setup Menus

Device Setup menus display status information (on the Meters screen) and changeable settings. Changeable settings are identified by the square brackets [] around values in the right-hand column.

To display the Setup menu for a device:

- Highlight the device name on the Select Device menu and press **Enter**.

Alternatively, from the device Home screen, press **Enter**.

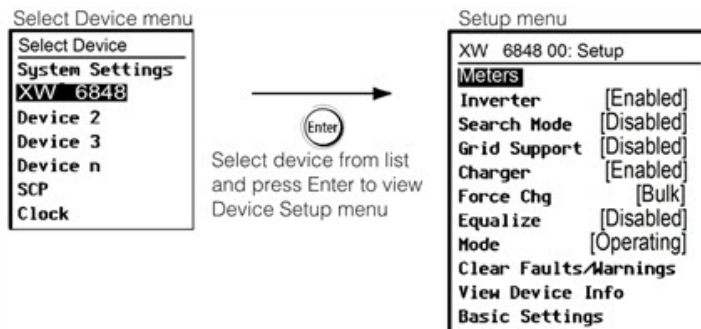


Figure 15 Selecting a Device Setup Menu

Reading the System Status Screen

The System Status screen displays:

- Qualified AC source (if applicable) and total power to and from the source.
- Battery voltage and capacity level.
- Net battery input or output current.
- Total inverter loading.
- Time and date.

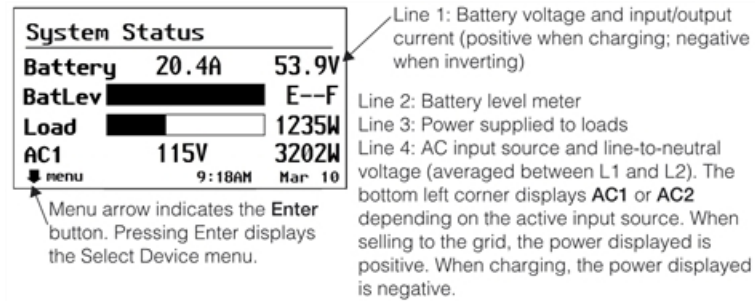


Figure 16 System Status Screen

Reading the Conext XW Pro Home Screen

The Conext XW Pro Home screen displays real-time operational data specific to the Conext XW Pro. The Conext XW Pro status changes according to the states described in *Conext XW Pro Home Screen States on page 48*.

To view the Conext XW Pro Home screen:

On the system Home screen, press the down arrow button until the Conext XW Pro Home screen appears.

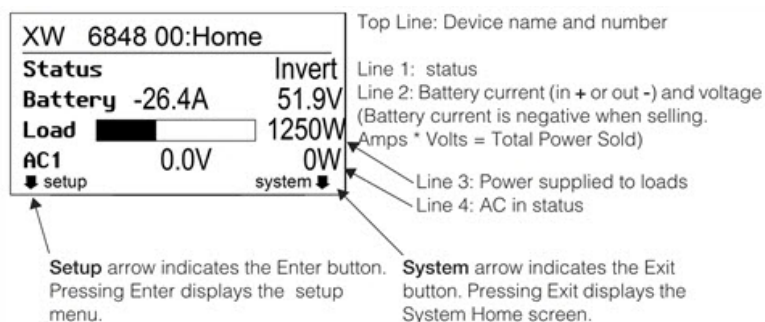


Figure 17 Conext XW Pro Home Screen

- Press the down arrow button from the Conext XW Pro Home screen to display the Home screens for other units and other Xanbus-enabled devices in the system.

Table 2 Conext XW Pro Home Screen States

Status	Displayed When...
Invert	The Conext XW Pro is supplying power to loads on AC OUT by inverting power from the batteries. AC input from the utility (AC1) or generator (AC2) is absent or out of nominal range.
Qualifying AC	The Conext XW Pro is determining if AC input on AC1 or AC2 is within a usable voltage and frequency range. Qualifying AC is also displayed when the Conext XW Pro is awaiting application of AC power or a command to enable invert mode.
Charging	The Conext XW Pro is charging the batteries from qualified AC input from the utility grid (AC1) or a generator (AC2). The charge state is in transition to either bulk, absorption, float, or equalize. AC input is also passed through to the load while charging.
Bulk	The Conext XW Pro is bulk charging the batteries from qualified AC input from the utility grid (AC1) or a generator (AC2). AC input is also passed through to the load while bulk charging.
Absorption	The Conext XW Pro is absorption charging the batteries from qualified AC input from the utility grid (AC1) or a generator (AC2). AC input is also passed through to the load while absorption charging.

Status	Displayed When...
ABS Finish	The Conext XW Pro has completed the absorption stage and is waiting for other Conext XW Pro units in the system to complete absorption. This status can occur only when there is another Conext XW Pro also charging the battery.
Float	The Conext XW Pro is float charging the batteries from qualified AC input from the utility grid (AC1) or a generator (AC2). The Conext XW Pro is set for three-stage charging. AC input is also passed through to the load while float charging.
CHG Finish	The Conext XW Pro has completed charging or the charge cycle has been interrupted and is transitioning to the next state. This stage lasts about one minute, while the battery is allowed to settle and battery voltage to drop back to normal. The delay keeps the Conext XW Pro from unnecessarily transitioning to grid support (if enabled) due to the high battery voltage after a charge cycle.
Fault	The Conext XW Pro has an active fault. The Event/Warning LED on the Conext SCP is on.
Gen Support	<p>There is AC input from the generator on AC2, and the Conext XW Pro is supporting the generator by supplying additional power to the loads attached to AC Out.</p> <p>The Conext XW Pro supports the generator (or other power source connected to the generator [default AC2] input) when the AC load current drawn from the generator exceeds the GenSup Amps setting for 1 to 2 seconds.</p> <p>The Conext XW Pro uses stored battery energy to load share with the generator until the total AC load current (generator plus Conext XW Pro output) drops by 2 amps plus 10 per cent of the GenSup Amps setting for 0.5 seconds.</p> <p>For example, if GenSup Amps is set to 10 amps, the Conext XW Pro starts to support when the load exceeds 10 amps for 2 seconds and stops when it drops more than 3 amps below the GenSup Amps setting, or 7 amps (2 amps plus 10 per cent of 10 amps = 3 amps).</p> <p>The system can enter this state if the battery voltage is above Low Batt Cut Out +2V and generator support is enabled. See <i>Using the Conext SCP on page 55</i>.</p>
Grid Support	<p>There is AC input from the utility grid on AC1, however the priority for the Conext XW Pro is to supply energy converted from external DC sources to the critical loads on AC Out.</p> <p>The Conext XW Pro enters this state only when Grid Support is set to ON and battery voltage is above the Grid Supp Volts setting. See <i>Using the Conext SCP on page 55</i>.</p>

Status	Displayed When...
APF Mode	APF (Active Power Frequency) mode is active. APF mode automatically injects or reduces active power to the grid based on a predefined frequency to power relationship. APF settings are only available through the Conext Configuration Tool. For further details, see the <i>Conext Configuration Tool Owner's Guide</i> .
Load Shaving	<p>The Conext XW Pro supports the utility grid when there is AC input on AC1 and the current required to power the loads rises above the Load Shave Amps setting between the Load Shave Start and Load Shave Stop times set on the Grid Support menu. However, AC charging including force charging is disabled during these times. AC charging is enabled when battery voltage falls below [LBCO + 1V]. For an illustration, see <i>"Using the Conext SCP" on page 55</i>.</p> <p>When load shaving, the Conext XW Pro uses stored battery energy to reduce the peak load on the AC1 input by providing the difference between the actual load current and the Load Shave Amps setting. The Conext XW Pro enters this state only when Grid Support is enabled, the load shave time window is valid and the load draw exceeds the Load Shave Amps setting. The battery voltage must also be between ReCharge Volts +0.5 V and the Grid Supp Volts setting. See <i>Using the Conext SCP on page 55</i>.</p>
Search	Search mode is enabled and the Conext XW Pro is standing by, waiting to begin inverting. See <i>Using the Conext SCP on page 55</i> .
SellToGrid	The Conext XW Pro is grid-tied and is exporting energy to the utility grid on AC1. Both Grid Support and Sell must be enabled in order to sell power back to the utility. See <i>Using the Conext SCP on page 55</i> and <i>Using the Conext SCP on page 55</i> . All configurations must comply with local and national electrical codes.
Standby	The unit has been placed in standby mode using the Mode setting on the Conext SCP Setup menu, the Standby button on the Conext SCP, or the Standby key press (STARTUP/SHUTDOWN and Equalization) on the inverter information panel.
Passthru	The AC connected to the AC1 or AC2 input is passing directly through the Conext XW Pro to the loads attached to AC Out. The batteries are not being charged in this state.
Equalize	Equalization has been turned on and the Conext XW Pro is equalizing the batteries after completing a full charge cycle.

Reading the Meters Screen

The Meters screen displays total system power production, grid voltage and current status, and load voltage and current status.

To view the Meters screen:

On the Conext XW Pro setup menu, highlight **Meters** and press **Enter**.

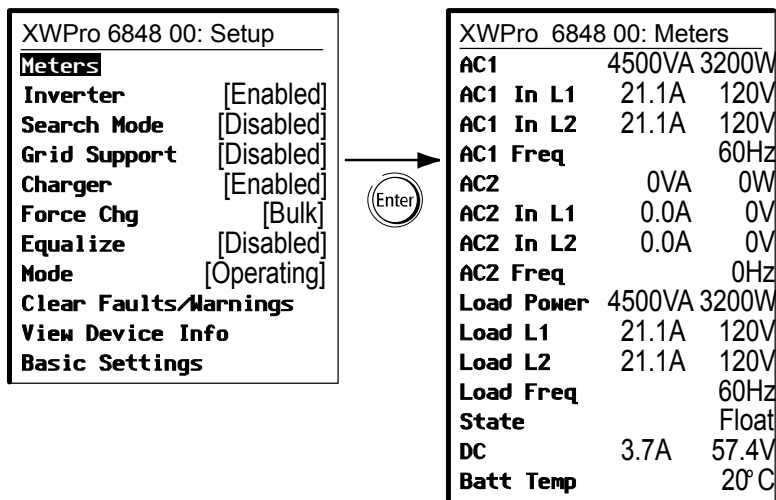


Figure 18 Viewing the Meters Screen

Table 3 Meters Screen

Screen Item	Description
AC1	AC input power connected to the Conext XW Pro AC1 terminals, in volt-amps and watts. AC1 is assumed to be connected to the utility grid, but can be connected to any other AC source.
AC1 in L1	AC input voltage and current connected to the Conext XW Pro AC1 L1 terminals. This input voltage display may drift slightly before the Conext XW Pro has synchronized to the grid.
AC1 in L2	AC input voltage and current connected to the Conext XW Pro AC1 L2 terminals. This input voltage display may drift slightly before the Conext XW Pro has synchronized to the grid.
AC1 Freq	AC frequency connected to the Conext XW Pro AC1 terminals.
AC2	AC input power connected to the Conext XW Pro AC2 terminals, in volt-amps and watts. AC2 is assumed to be connected to a generator, but can be connected to any other AC source.
AC2 in L1	AC input voltage and current supplied to the Conext XW Pro from the AC2 L1 input. This meter indicates the Conext XW Pro is drawing power from the generator to charge the battery or power the AC loads.

Screen Item	Description
AC2 in L2	AC input voltage and current supplied to the Conext XW Pro from the AC2 L2 input. This meter indicates the Conext XW Pro is drawing power from the generator to charge the battery or power the AC loads.
AC2 Freq	AC frequency connected to the Conext XW Pro AC2 terminals.
Load Power	Power consumed by the AC loads attached to AC OUT, in volt-amps and watts.
Load L1	AC voltage and current supplied from L1 to the AC loads on AC OUT.
Load L2	AC voltage and current supplied from L2 to the AC loads on AC OUT.
Load Freq	AC frequency supplied to the AC loads on AC OUT.
State	Operating state of the Conext XW Pro. For more information, see <i>Conext XW Pro Home Screen States on page 48</i> .
DC	Charging current and battery voltage.
Batt Temp	<p>Battery temperature as read by the BTS, connected to the Conext XW Pro. If the BTS is connected to a different device on the Xanbus network, please see the Meters screen for that device for temperature data. All Xanbus devices on the Xanbus network will share temperature data for temperature compensated charging. However, the temperature is only displayed on the meters screen for the device with the BTS installed. The BTS which is monitoring the device displaying the highest temperature will take priority. If the BTS is not installed, it shows NotAvailable.</p> <p>NOTE: If other battery-based power conversion Xanbus-enabled devices are connected to the network, a BTS must be separately installed for each of those devices. See the installation guide of the device for instructions.</p>

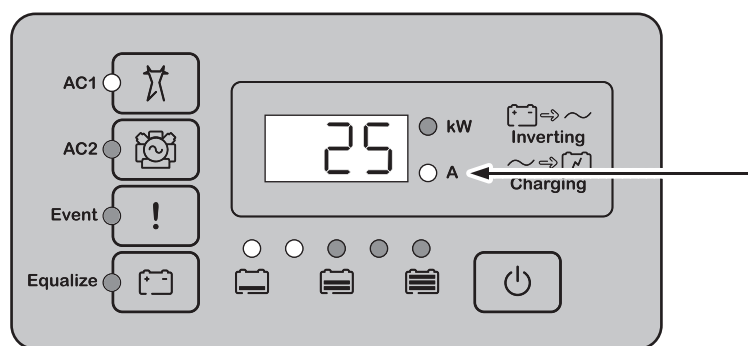


Figure 19 Inverter Information Panel When Charging Battery

3 Configuration

What's in This Chapter?

Using the Conext SCP	55
Conext XW Pro Setup Menu	55
Setting the Time and Date	57
Using the Setup Menus	58
Basic menu	58
Advanced menu	58
Inverter Settings Menu	61
Using the Low Battery Cut Out and LBCO Delay Settings	62
Using Search Mode	62
Charger Settings Menu	64
Battery Charger Functions	65
Multi-Unit Charger Settings	66
Multi-Stage Charging Process	67
Equalize Charging	72
Custom and Lithium Ion Battery Settings Sub Menus	75
AC Input Settings	79
Grid Support Settings	81
Prioritizing and Managing Energy Sources with Advanced Features	82
Grid Support	82
Charger Block	84
Peak Load Shaving (PLS)	85
Generator Support Settings	88
Auxiliary Output Settings	90
Trigger Source Descriptions	91
Multi-Unit Config Menu	93
Setting the Device Name	95
Setting the Device Number	95
Connections Menu	96

Copying Settings From Another Unit98

Resetting the Conext XW Pro to Default Settings100

Using the Advanced Features 101

Using the Conext SCP

The Conext XW Pro is configured using the Conext SCP . The Conext SCP provides access to settings relating to AC input and output, battery charging, and grid-tie operation.

NOTICE

EQUIPMENT DAMAGE

Any configuration (change in settings) made when the Conext XW Pro is in Operating mode will not be saved unless the Conext XW Pro is put in Standby and then back to Operating mode. It is recommended to put the Conext XW Pro in Standby mode prior to changing basic or advanced settings. Then return to Operating mode for the settings to take effect.

Failure to follow these instructions can result in equipment damage.

Conext XW Pro Setup Menu

The Conext XW Pro Setup menu is accessible either from the system Home screen or from the Conext XW Pro Home screen.

To navigate to the Conext XW Pro Setup menu:

1. From the system Home screen, press **Enter** to view the Select Device menu. Or from the Conext XW Pro Home screen, press **Enter**. The Conext XW Pro Setup menu appears. Go to step 2.
2. Highlight the Conext XW Pro device name, then press **Enter**.

Figure 20 Setup Menu

XWPro6848 00: Setup	
Meters	
Inverter	[Enabled]
Search Mode	[Disabled]
Grid Support	[Disabled]
Charger	[Enabled]
Force Chg	[None]
Equalize	[Disabled]
Mode	[Operating]
Clear Faults/Warnings	
View Device Info	
Basic Settings	

NOTE: The Conext SCP only displays four lines of the Setup menu at once. To view additional settings, press the Down arrow button.

Table 4 Conext XW Pro Setup Menu

Menu Item	Description
Meters	Displays the Meters screen.
Inverter	Enables or disables the inverter.
Search Mode	Turns Search Mode on and off. See <i>Using the Conext SCP on page 55</i> .
Grid Support	Enables or disables grid-interactive Conext XW Pro features, such as grid support and grid sell mode. See <i>Using the Conext SCP on page 55</i> . To allow grid support to function after battery charging has completed, it is recommended to set the Charge Cycle to 2-Stage. The MPPT controllers must still be set to 3-stage. See <i>Using the Conext SCP on page 55</i> . When using load shave, turning ON Sell and setting Sell Amps to 0.0 is a way to make the net power flow to the grid zero. If sell is not enabled, there will be a net purchase of as much as 2.0 - 3.0 kWh per day due to the current control loop not allowing any outgoing current. If you wish to further reduce grid draw using this function, enable sell mode even if you do not wish to export power and set Max Sell Amps to a value of 0.
Charger	Enables or disables the charger.
Force Chg	Manually changes the charge stage to either bulk or float (when 3-Stage cycle is selected) or bulk or no float (when 2-Stage cycle is selected). This command has no effect if load shaving is enabled. For more information, see <i>Load Shaving on page 50</i> .
Equalize	Enables or disables battery equalization. This option is only available if the battery type is set to Flooded or is set to Custom with Equalize Support enabled.
Mode	Selects the Conext XW Pro operating mode: Operating or Standby. The red Standby button on the Conext SCP has similar functionality (see <i>Conext SCP Features on page 42</i>).
Clear Faults/Warnings	Clears any active faults or warnings. If the fault or warning condition is still present, the fault or warning message may reappear.
View Device Info	Displays the Device Info screen where you can view the warning, fault, and event logs.
Basic Settings	Select to display and/or adjust the basic Conext XW Pro settings. See <i>Using the Conext SCP on page 55</i> . See NOTICE in the beginning of this section.

Setting the Time and Date

Conext XW Pro advanced features such as peak load shaving, charger block, and time-stamped events (faults, warnings, and logged historical data) require that the system be set to the correct time. The SCP has an internal clock that controls the time for the Xanbus-enabled devices in the system. You can set the time, time format, and date on the Clock menu. The Clock menu is accessible on the Select Device menu.

For more information, see “Setting the Time” and “Setting the Date” in the *SCP Owner's Guide*.

Using the Setup Menus

Basic menu

The Conext XW Pro configuration settings can be viewed in basic and advanced formats (see *on page 55*). The basic settings include configuration items you may have to adjust routinely, or as part of initial setup.

Advanced menu

The advanced settings option gives you access to the full range of Conext XW Pro settings, including everything displayed on the basic menu. As a safeguard against unintended advanced configuration, the SCP displays the basic settings by default. To view the advanced settings, you must perform a special keypress.

WARNING

ADVANCED CONFIGURATION HAZARD

- Advanced menu settings should be used by qualified personnel only.
- Three phase operation should be configured by qualified personnel only.
- Consult with the local utility before enabling Conext XW Pro sell mode or grid support functions.
- Do not change these settings unless you are under the supervision and direction of qualified personnel.
- Do not configure Conext XW Pro inverters remotely. To avoid losing power to the Conext Gateway and the network router connected to the Gateway, connect them to an assured power source during configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

To select the Advanced settings:

1. On the Select Device menu, select a Conext XW Pro.
2. Press and release **Enter + up arrow + down arrow** at the same time.

NOTE: This keypress enables the advanced settings for every device in the system. After performing the keypress, Advanced Settings appears at the top of the Setup menu. When the keypress is performed again, the Setup menu displays Basic Settings as the last item on the menu. See *NOTICE* in the beginning of this section.

The Conext XW Pro advanced settings include menus for configuring:

- Inverter settings (see *"Using the Conext SCP" on page 55*)
- Charger settings (see *"Using the Conext SCP" on page 55*)
- AC transfer limit settings (see *"Using the Conext SCP" on page 55*)
- Grid support and peak load shaving settings (see *"Using the Conext SCP" on page 55*)


- Generator support settings (see *"Using the Conext SCP" on page 55*)
- Auxiliary output settings (see *"Using the Conext SCP" on page 55*).
- Multi-unit operation, including customizing the default model name of the Conext XW Pro and setting its network device number. Setting the device number is important when multiple Conext XW Pro units are on the Xanbus network and sharing connections such as AC loads, utility grid, and generator. The device number is also used when configuring paralleled Conext XW Pro units for master-slave operation (see *Using the Conext SCP on page 55*).

In the advanced settings you can also copy another unit's settings using the Copy from command.

To view the advanced or basic settings:

- From the Setup menu, with Basic Settings or Advanced Settings highlighted, press **Enter**. See *on page 55*.

Figure 21 Selecting Advanced Settings

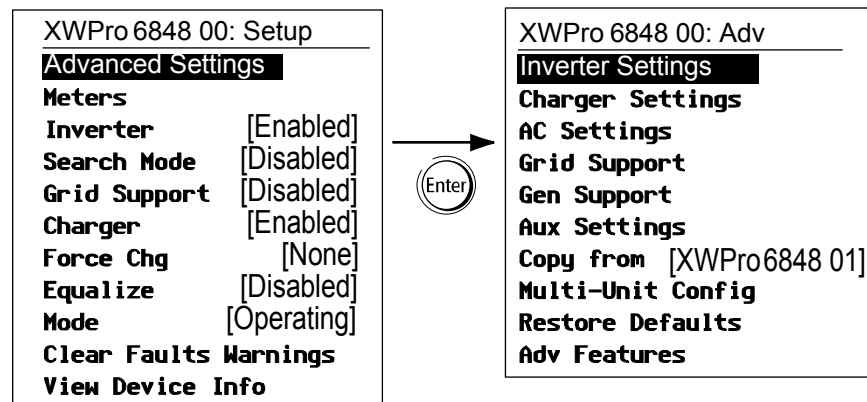


To select and change a configurable setting:

1. On the desired configuration menu, press the up arrow or down arrow button to highlight the setting you want to change.
2. Press **Enter** to highlight the current value of the setting.
3. Press the up arrow or the down arrow button to change the value.
Hold down the button to scroll through a large range of values quickly. The previously set value appears with an asterisk (*) beside it.
4. Press **Enter** to select the value.
If you have another setting to change, return to step 1. Or if you have no more settings to change, press **Exit** until the SCP displays the desired screen or menu.

Note: If you have no more settings to change, it is recommended to leave the Setup menu in the basic settings format to help prevent unintended configuration. If the Setup menu displays Advanced Settings, press **Enter + up arrow + down arrow** at the same time. The Setup menu should then display Basic Settings as the last item on the menu.

Figure 22 Basic and Advanced Settings

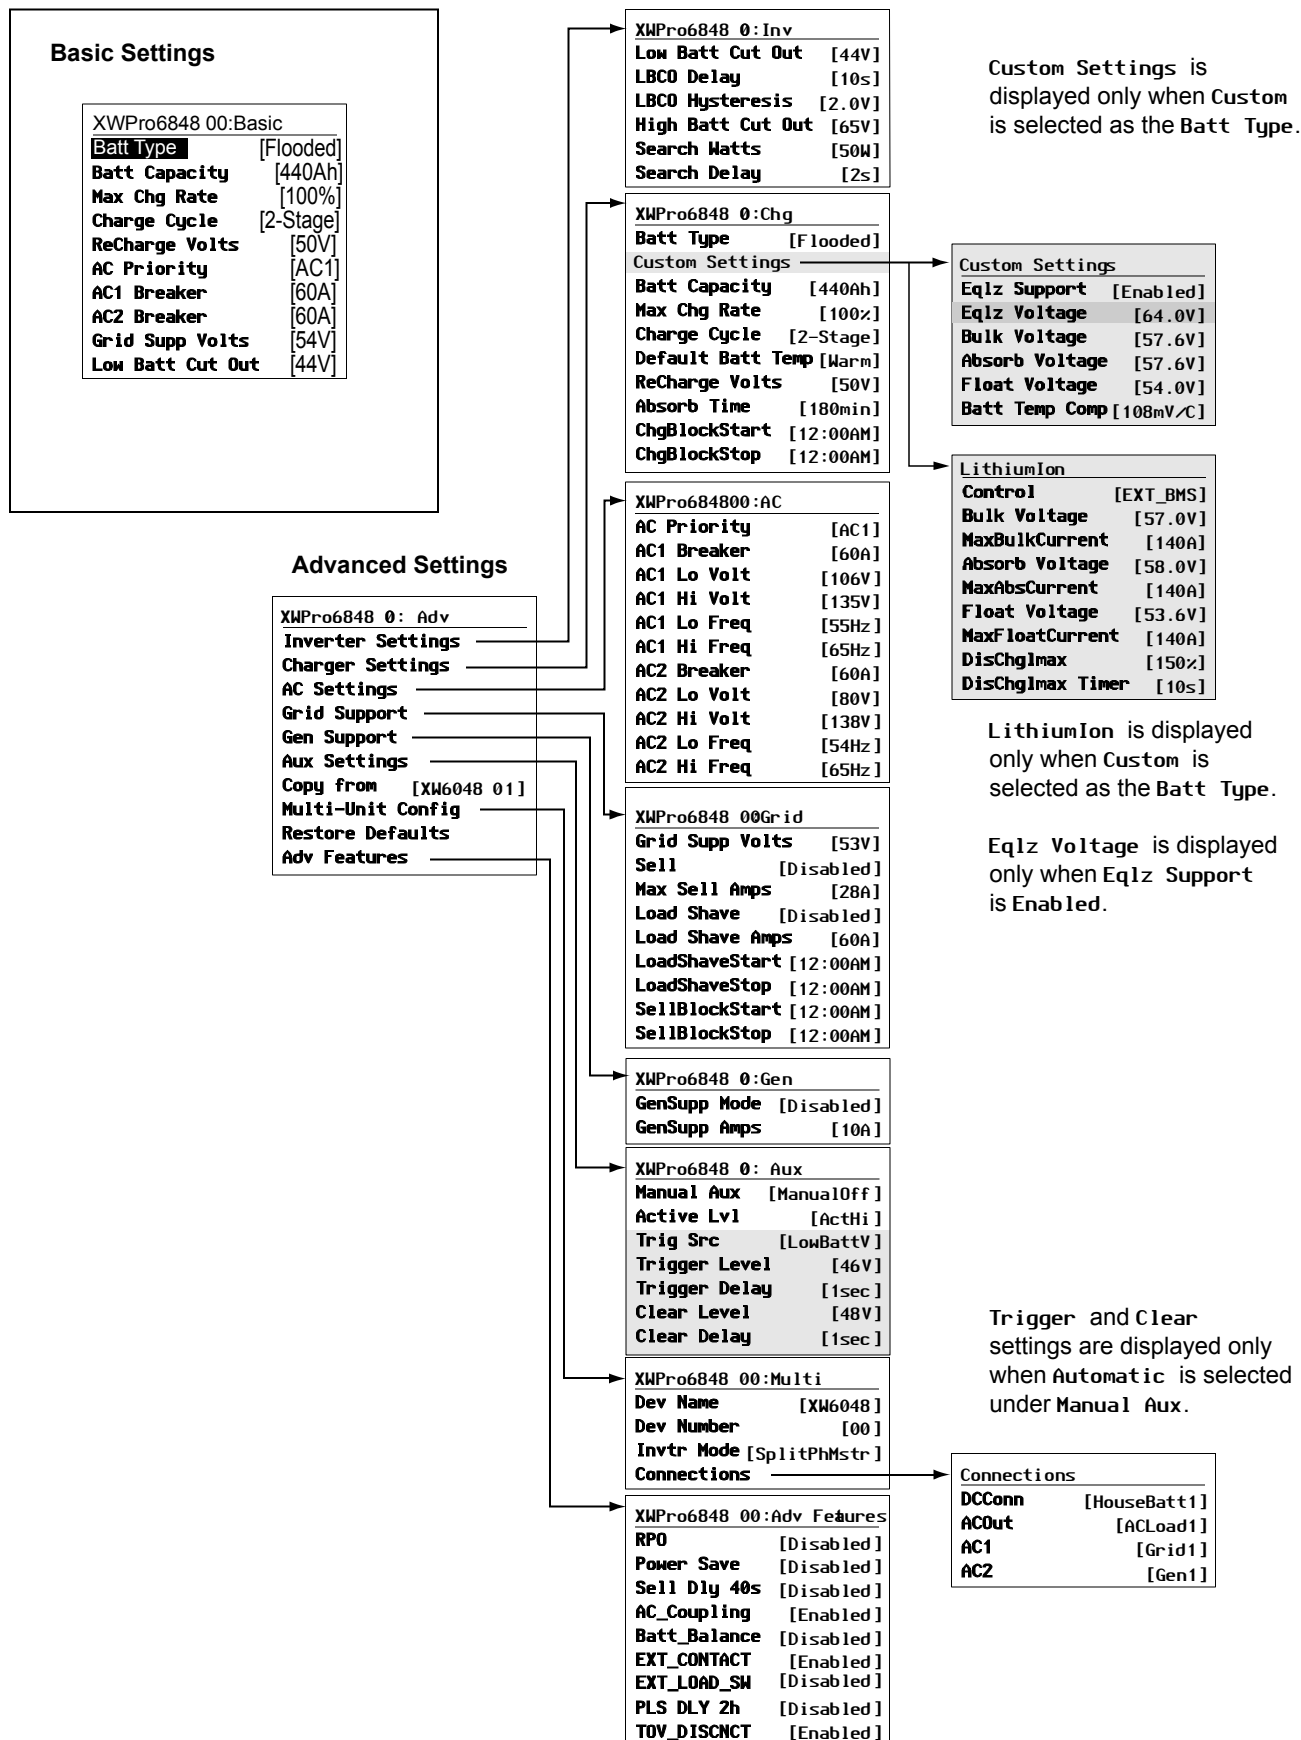

Inverter Settings Menu

The Inverter Settings menu contains settings that control when the Conext XW Pro starts and stops producing AC output.

Table 5 Inverter Settings Menu

Item	Description
Low Batt Cut Out	Low Batt Cut Out controls when the inverter stops producing AC output due to a low battery voltage condition. The inverter will stop producing AC output only after this level has been reached for the period of time set by the LBCO Delay. This setting is not temperature compensated.
LBCO Delay	LBCO Delay controls how long the inverter is allowed to operate at or below the Low Batt Cut Out level before turning off due to a low battery voltage condition. The inverter will stop producing AC output only after the Low Batt Cut Out level has been reached for this uninterrupted period of time. Once the inverter has shut off, the battery voltage must rise 4 volts above the Low Batt Cut Out setting for inverter operation to resume.
High Batt Cut Out	High Batt Cut Out sets the maximum battery voltage at which the inverter will operate. If the battery voltage exceeds this limit for more than 1 minute, the Conext XW Pro displays a fault message (F49) and shuts down. The inverter will not support AC loads when in this condition. If a qualified AC source is present, the unit passes AC through to the loads. The inverter automatically restarts when the voltage drops to 6 volts below the High Batt Cut Out setting. If battery voltage continues to rise after shutdown, an external charger may still be charging the batteries. The Conext XW Pro cannot control how external chargers operate.
Search Watts	Search Watts sets search sensitivity for the Conext XW Pro when search mode is enabled. When a load larger than this setting is present on AC OUT, the inverter starts producing AC output from battery power. Enabling search mode from the Setup menu (see <i>"Using the Conext SCP" on page 55</i>) can minimize power draw from the battery during periods of low demand from loads. Also see <i>Using the Conext SCP on page 55</i> . Note that energy-efficient light bulbs may not provide enough power to wake the inverter from Search mode.
Search Delay	Search Delay sets the time between search pulses. When searching for loads, the Conext XW Pro sends out search pulses on AC OUT to determine the presence of a load above Search Watts. Conext XW Pro power draw while in search mode decreases when Search Delay is increased, but the Conext XW Pro response time to active loads is slower.

For default settings, see *Inverter Settings Menu on page 149*.

Using the Low Battery Cut Out and LBCO Delay Settings

WARNING

ADVANCED CONFIGURATION HAZARD

- Advanced menu settings should be used by qualified personnel only.
- Three phase operation should be configured by qualified personnel only.
- Consult with the local utility before enabling Conext XW Pro sell mode or grid support functions.
- Do not change these settings unless you are under the supervision and direction of qualified personnel.
- Do not configure Conext XW Pro inverters remotely. To avoid losing power to the Conext Gateway and the network router connected to the Gateway, connect them to an assured power source during configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The Low Batt Cut Out setting is the lowest battery voltage level acceptable for use by the inverter. When the batteries discharge to the Low Batt Cut Out setting, and are held at or below this level for the LBCO Delay time, the inverter output shuts down and connects any available AC source (AC1 or AC2) to the charger to bring the battery level back above the Low Batt Cut Out setting. After shutdown, the inverter does not support loads on AC OUT, and AC loads must be powered by either a generator (AC2) or grid power (AC1). If the battery voltage stays below the LBCO voltage for more than 24 hours, the Conext XW Pro shuts down.

If using the Conext Automatic Generator Start system, it is recommended to set the AGS voltage trigger setting higher than the Conext XW Pro Low Batt Cut Out voltage.

Although not recommended, if using the Conext Automatic Generator Start system with the start trigger set to the same voltage as the LBCO voltage, do not set the LBCO Delay for less than the amount of time it takes the generator to start and connect.

Otherwise – in both of the scenarios above – inverter output turns off before the generator automatically starts, causing the battery voltage to recover slightly. This may then stop the AGS from starting the generator or result in the Conext XW Pro cycling on and off multiple times before the generator automatically starts.

Using Search Mode

Why use Search mode?

Search mode allows the inverter to selectively power only items that draw more than a certain amount of power, which can result in energy savings. The Conext XW Pro has a no-load power draw of about 28 watts. Enabling search mode reduces this power draw to less than 8 watts. Search mode operates differently in single-unit and multi-unit installations.

Single units

When a single Conext XW Pro has search mode enabled, the inverter sends electrical search pulses through its AC output. These search pulses look for connected AC loads. The delay between search pulses is set using the Search Delay setting. After a load larger than the Search Watts setting is detected, the inverter starts producing AC output.

Multiple units

It is not recommended to use search mode for Conext XW Pro inverters in a multi-unit configuration.

When to set up Search mode

The search mode feature is only valuable if the inverter can spend a fair amount of time “sleeping” each day. Therefore, if search mode is to be used it must be adjusted properly. The initial adjustment should be made so that the Conext XW Pro comes on only when needed.

Certain types of loads can cause search mode to work improperly. These types of loads are described in *General Troubleshooting Guidelines on page 104*. If these kinds of loads are in the system, follow the suggestions given to resolve the problem.

If the problem loads cannot be resolved, there are two workaround solutions:

Disable search mode from the main Conext XW Pro Setup menu, causing the inverter to remain at full output voltage.

Use a search friendly companion load whose only purpose is to be switched on to wake up the inverter to power the load that is unable to bring the inverter out of search mode.

NOTE: Search mode, by function, cannot work with clocks and timers or devices that need power 24 hours a day. Examples of devices with timers include video recorders, coffee makers with brew timers, refrigerators, and freezers with defrost timers. Examples of devices that need power 24 hours a day include telephone answering machines, alarm systems, motion detection lights, and some thermostats.

When the inverter is searching the output for loads, lights that have a wattage lower than this setting may flash momentarily.

Charger Settings Menu

The Charger Settings menu provides options for configuring the Conext XW Pro to operate from your battery bank.

Table 6 Charger Settings Menu

Item	Description
Batt Type	Sets the system battery chemistry and type: Flooded (default), AGM, Gel, and Custom. Selecting Custom displays the Custom Settings sub menu item which allows you to adjust the settings for each charging stage and LithiumIon sub menu item which allows you to adjust lithium ion settings.
Custom Settings	Displays the Cust sub menu, where you can adjust settings specific to your battery type and installation. It is displayed if Custom is selected as the Batt Type. See "Custom and Lithium Ion Battery Settings Sub Menu Items" on page 3–19.
LithiumIon	Displays the LithiumIon sub menu, where you can adjust settings specific to lithium ion. It is displayed if LithiumIon is selected as the Batt Type. See "Custom and Lithium Ion Battery Settings Sub Menu Items" on page 3–19.
Batt Capacity	Selects the system battery capacity in Ah (amp hours). Setting the Batt Capacity to 0 resets the charging current to its default values. Zero Ah battery capacity implies there is no absorption exit current criteria and absorption only exits when the absorption timer (default 3 hours, range 1 minute-8 hours) expires.
Max Chg Rate	<p>Sets the percentage of the maximum DC output current that is available to the charger. The maximum DC output current for different models is:</p> <ul style="list-style-type: none"> ■ XW Pro 6848 NA—140 A <p>If multiple Conext XW Pros are charging the same battery bank, set each inverter's Max Chg Rate to 1/n of the desired charge rate (where n is the number of inverter/chargers).</p> <p>Always refer to the battery manufacturer's specifications before setting the Max Chg Rate. Do not set the Max Chg Rate above these specifications.</p>
Charge Cycle	Sets the charging method: 3-Stage (bulk, absorption, float) or 2-Stage (bulk, absorption, no float).
Default Batt Temp	Selects the battery temperature charging compensation if a battery temperature sensor is not installed. In the absence of a battery temperature sensor, the charger uses one of three settings: Cool (5 °C/41 °F), Warm (25 °C/77 °F), or Hot (40 °C/104 °F).

Item	Description
ReCharge Volts	When charger is set for 2-stage operation, sets the battery voltage level at which a new charge cycle begins. ReCharge Volts is automatically temperature compensated to be consistent with the charge voltage (also temperature compensated).
Absorb Time	Sets the maximum time spent in the absorption stage, before transitioning to float or no float.
Chg Block Start	Sets the time to halt charging on AC1 (Grid). The AC2 (Gen) port is unaffected by the Conext XW Pro block settings. The charger block start and stop settings allow you to select when the charger stops charging on AC1. To disable the charger block function, set Chg Block Start and Chg Block Stop to the same time. See <i>Using the Conext SCP on page 55</i> .
Chg Block Stop	Sets the time that charging on AC1 can resume. At the Chg Block Stop time, charging on AC1 is enabled again.

For default settings, see *Charger Settings Menu on page 149*.

Battery Charger Functions

When AC power is available, the Conext XW Pro can operate as a battery charger. Different battery types and chemistries require different charging voltage levels. Not charging batteries at the required levels can shorten battery life or damage the batteries. The Conext XW Pro is configured at the factory to work with the battery types recommended for inverter applications. If the default settings do not work for your specific installation, you can adjust the charge stage settings (as recommended by the battery manufacturer) on the Custom Battery Settings menu (see *"Using the Conext SCP" on page 55*).

NOTE: This information is provided for guidance only. Variations in battery chemistry and site-specific environmental considerations mean that you should consult your system designer or battery manufacturer for specific recommendations for appropriate battery voltage and current settings.

Multi-Unit Charger Settings

NOTICE

DAMAGE FROM HAVING DIFFERENT CHARGER SETTINGS

- Make sure that all Conext XW Pro units in the multi-unit setup have the same Charger Settings. For example, if one unit has a Battery Type of Flooded, all Conext XW Pro units **must have** the same Battery Type. To copy the settings to one unit from another, see *Using the Conext SCP on page 55*.
- Make sure that all Xanbus devices in the same network, such as connected MPPT solar charge controllers and the Battery Monitor, have the same Charger settings. Refer to each device's owner's guide for information on how to change the charger settings.

Failure to follow these instructions can result in battery damage.


NOTE: Using the Conext Conext SCP, make sure that every Conext XW Pro unit in the multi-unit configuration is set to Charger = Enabled under the *Setup* menu for each inverter.

NOTE: If Cascading is Enabled in Conext SCP, the charger settings will cascade to other Conext XW Pro units with the same DC Associations. However, they will not cascade to other device types such as MPPT solar charge controllers and the Battery Monitor even if they have the same DC associations. Make sure that the charger settings are configured correctly on the other device types.

Multi-Stage Charging Process

The charging cycle is a multi-stage process. Whenever qualified AC power is present at the AC1 or AC2 input, power runs through to the connected load and begins charging the batteries in parallel.

Figure 23 Three-Stage Battery Charging Cycle

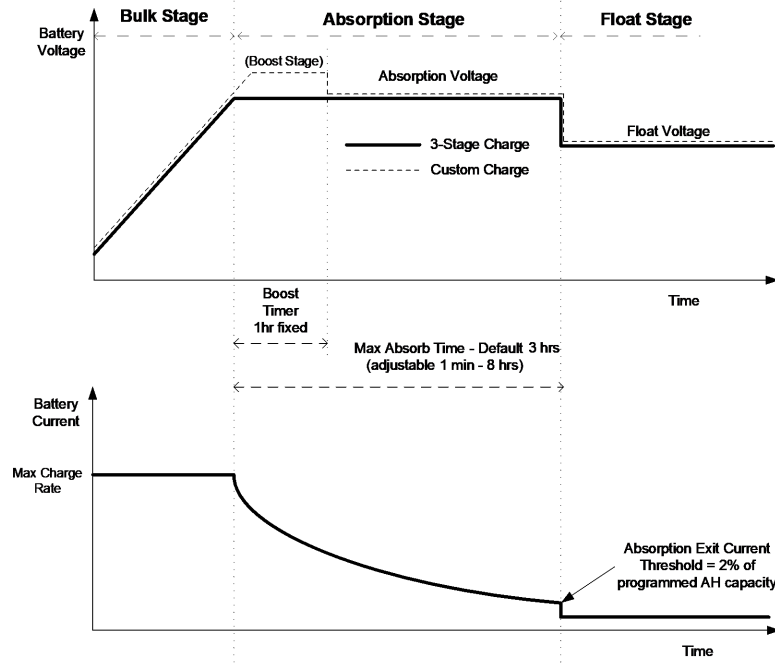

NOTES:

- When the charge cycle is interrupted, the charger will restart charging at the beginning of the multi-stage algorithm.
- Exit Current Threshold can be effectively disabled by programming the amp-hour capacity to 0. In this case, absorption will only exit once the Max Absorption timer expires.
- Charge current during equalize state (optional state not shown here) is normally limited to 10% of the programmed amp-hour capacity setting. If this setting is programmed to 0 Ah, the charge current during equalize is instead limited to whatever is programmed for the maximum current limit of the unit (the default current limit in equalize mode is 60 A).
- Synchronized charge states are active when more than one charging device (Conext XW Pro or Conext MPPT solar charge controller) is connected in the system via the Xanbus network.
- The first Conext XW Pro or Conext MPPT solar charge controller to enter bulk, causes the other chargers to enter bulk.
- The first Conext XW Pro to enter absorption causes the other chargers to enter absorption.

- The last Conext XW Pro ready to exit absorption triggers the rest to exit absorption and exit charge. The Conext XW Pro will not wait for any connected Conext MPPT solar charge controllers to transition to absorption or float.

Bulk Stage

Bulk charge is the first stage in the charging process and provides the batteries with a controlled, constant current. Once the battery voltage rises to the bulk voltage threshold, the charger switches to the absorption stage.

Absorption Stage

During the absorption stage, the Conext XW Pro begins operating in constant voltage mode and the DC charge current falls gradually as energy is returned to the battery. For the first 60 minutes of the absorption stage, the Conext XW Pro regulates the battery voltage at the Bulk Voltage setting. The voltage limit used for the remaining time in this stage is the Absorption Voltage setting. By default, the bulk and absorption voltage settings are the same for each battery type. The voltage limit settings for bulk and absorption can be adjusted independently if the battery type is set to Custom. The Conext XW Pro transitions to the float stage if either one of the following two conditions are met:

The charge current allowed by the batteries falls below the exit current threshold, which is equal to 2% of the programmed battery capacity (for a 500 Ah battery bank, this would be 10 A), for three minutes.

The Conext XW Pro has been in absorption for the programmed maximum absorption time limit. The default is 3 hours, but the time limit is programmable from 1 minute to 8 hours. The timer begins when the battery voltage is above the bulk termination voltage for three minutes.

NOTE: If there are DC loads on the batteries, the charger's current may not decrease to a level to transition to the next stage of charging. In this case, the charger stays in absorption until the Absorb Time setting is reached.

To avoid having the charger remain in absorption for too long, adjust Absorb Time on the Charger Settings menu. The timer begins at the start of the absorption stage and terminates absorption charging if the charge current does not decrease to below 2 per cent of the battery capacity before the Absorb Time setting expires. The Absorb Time setting may be increased if the charge cycle continually runs the complete Absorb Time in the absence of DC loads. This is an indication of too large a battery bank for the selected Absorb Time setting.

Boost Charging

- Boost charging allows for better utilization of flooded lead acid batteries under moderate cycling in off-grid or grid support applications. Boost charging encourages a short duration charging voltage—above the gassing voltage—at the beginning of the absorption charge state. Testing has shown that boost charging improves battery performance by providing a regular mixing of the liquid electrolyte. Boost charging specifically discourages capacity robbing acid stratification and plate sulfation.
- Boost mode charging can be enabled by selecting the Custom battery type and by setting the bulk voltage higher than the absorption voltage. The multi-stage charge algorithm then attempts to use the higher voltage for the first hour of the absorption stage, unless it is interrupted by the max absorption timer or exit current threshold.
- Boost charging encourages gassing of flooded lead acid batteries.
- Boost charging is NOT recommended for AGM, GEL or any other electrolyte-limited and/or valve-regulated sealed battery application.
- Boost charging may result in higher than normal water consumption. However, the benefits of boost charging are likely to be greater than the extra watering effort. Check battery water levels at least once per month.
- Boost charging has maximum benefit when used on batteries that experience moderate cycling. An unoccupied cottage, for example, where batteries are full the majority of the time may not benefit from boost charging, especially if battery watering is difficult.
- For equalize charging, a custom Boost charge profile can be configured if the equalize method is not periodically used. Boost charging occurs in the first hour of the absorption stage. It allows for a higher constant voltage than absorption voltage to encourage a “mini equalize” each time the battery is charged.
- The boost voltage is defined by the Bulk Voltage setting. The Conext system will still allow manual equalize charging when the boost absorption voltage is implemented. This is for advanced users only who pay strict attention to battery maintenance and have an appropriately vented and protected battery installation. Consult your battery manufacturer for appropriate voltages.

Float Stage

Float charge maintains the batteries slightly above the self discharge voltage of the batteries. The charge current in float is the current necessary to maintain the batteries at the Float Voltage setting, limited only by the inverter's capability or other settings that limit the inverter's maximum charge rate. Float charging reduces battery gassing, minimizes watering requirements (for flooded batteries), and helps the batteries remain in a constant state of readiness. When three-stage charging is selected, the charger automatically switches to the float stage after the batteries have received a bulk and absorption charge (see *on page 55*). The batteries are maintained at the default float voltage level for the selected battery type or the voltage selected under Float Voltage on the Custom Battery Settings menu.

NOTE: The battery voltage can increase above the float voltage when using an external charging device such as charge controllers attached to PV arrays, wind turbines, and micro-hydro generators. Be sure to include appropriate charge management equipment with all external DC sources.

Two-Stage


Two-stage (or no float) mode differs from an ordinary three-stage charge mode in that it does not continuously maintain the battery at float voltage. Instead, the Conext XW Pro begins charging the battery in bulk mode whenever the battery voltage drops below the recharge level. While the battery voltage is above the recharge level the inverter's AC transfer switch continues to pass through power from the utility grid to the loads, but does not actively charge the batteries.

Two-stage mode increases efficiency of utility connected systems by reducing the amount of power consumed by the inverter and batteries compared to when the battery is continuously maintained at Float Voltage. This feature can extend the life of many batteries.

To allow grid support and sell mode to function after battery charging has completed, it is recommended to set Charge Cycle to 2-stage.

NOTE: If the AC input stops or drops below the lower VAC limit (as set in AC Settings), the complete multi-stage charge cycle (bulk, absorption, float/no float) restarts once the source AC recovers to within the acceptable range. If the batteries are already nearly full, the charge cycle will take little time to complete.

Figure 24 Two-Stage Charging Cycle

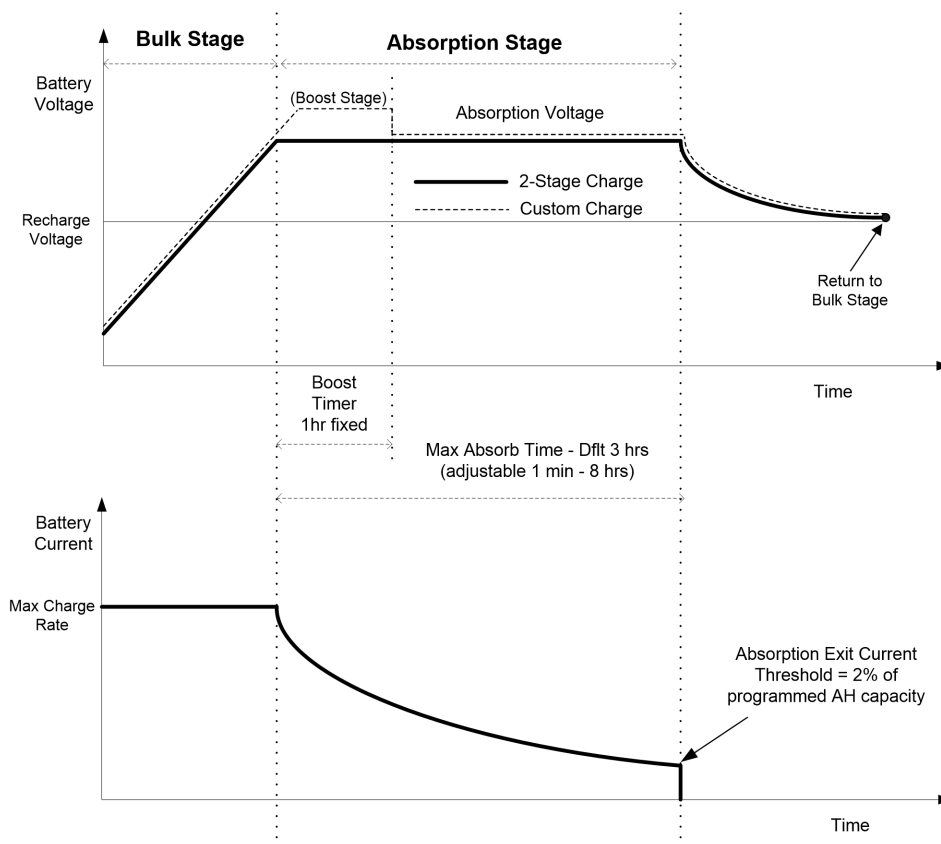

When the charge cycle is interrupted, the charger will restart charging at the beginning of the multi-stage algorithm.

Exit Current Threshold can be effectively disabled by programming the amp-hour capacity to 0. In this case, absorption will only exit once the Max Absorption timer expires.

Charge current during equalize state (optional state not shown in graph) is normally limited to 10% of the programmed amp-hour capacity setting. If this setting is programmed to 0 Ah, the charge current during equalize is limited to whatever is programmed for the max current limit of the unit (the default current limit in equalize mode is 60 A).

Synchronized charge states are active when more than one charging device (Conext XW Pro or Conext MPPT solar charge controller) is connected in the system via the Xanbus network.

The first unit (Conext XW Pro or Conext MPPT solar charge controller) to enter bulk, causes the other chargers to enter bulk.

The first Conext XW Pro to enter absorption causes the others to enter absorption.

The last Conext XW Pro ready to exit absorption triggers the others to exit absorption and exit charge. The Conext XW Pro will not wait for any connected Conext MPPT solar charge controllers to transition to absorption or float.

Equalize Charging

Many lead acid battery manufacturers recommend periodic equalize charging to counter cell charge imbalance and capacity robbing sulphation. Equalizing helps to improve battery performance and lifespan by encouraging more of the battery material to become active.

Battery equalization is a controlled overcharging method that reduces sulphation and mixes up stratified electrolyte and reactivates unused areas of the plate material. Periodic equalizing can help to regularly restore flooded lead acid batteries to a healthy state of charge.

Consult the battery manufacturer's recommendation for equalize charging settings. Sealed lead acid, gel, AGM, and lithium ion batteries should not be equalized unless recommended by the battery manufacturer. Consult the battery manufacturer for optimal charging procedures when using sealed batteries.

When Equalize mode is enabled, the battery is charged from bulk to absorption, and then to the equalize phase. The Conext XW Pro will transition from the absorption phase to equalize if:

- The DC charge current is below 2% of the configured battery capacity (for example, 8.8 A for 440 Ah).
- The absorption time is exceeded (for example, 180 minutes).


After absorption, the maximum charge DC current is set to 10% of battery capacity (for example, 44 A for 440 Ah). See *on page 55*. This constant current charge will continue until the voltage has increased to the equalize voltage at which point the battery will be regulated at the temperature compensated equalize voltage.

If the battery capacity is set to zero, the equalize charge current is fixed at maximum 44 A (Ah=0 effectively disables the exit current criteria for the absorption charge stage, making the absorption stage defined by time only).

Equalization duration is fixed at one hour.

NOTE: The graphs below apply only to flooded battery types.

Figure 25 Equalize Charging Grid-tie Sell Mode

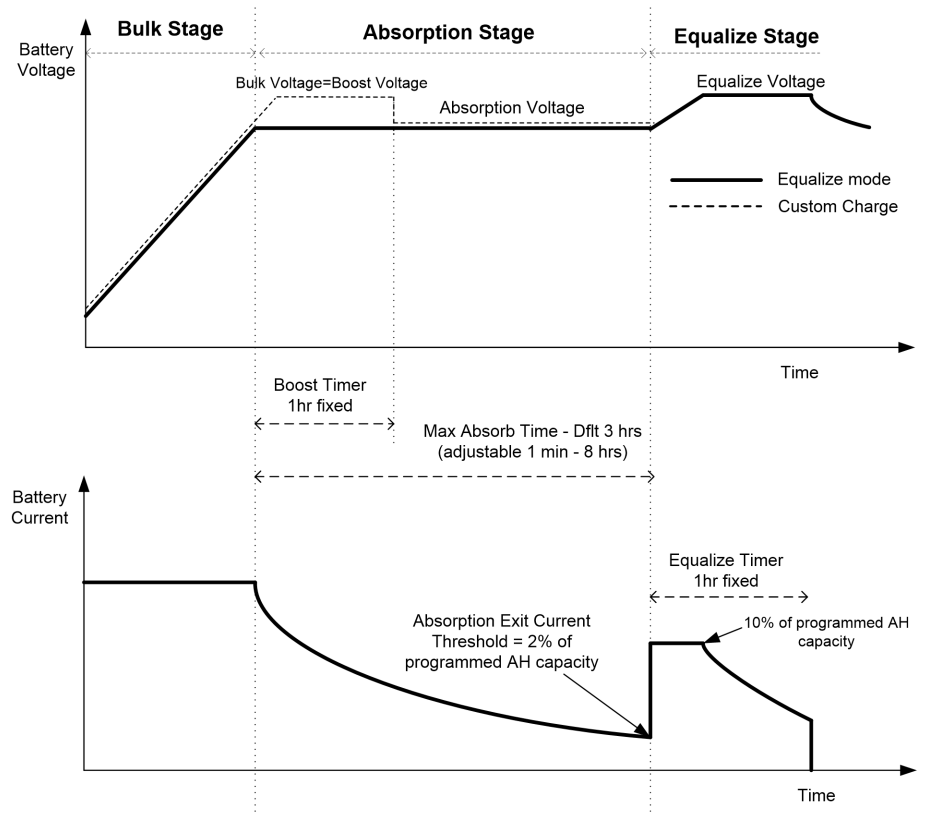

Equalization Procedure

To start equalizing the batteries, do one of the following:

1. On the Conext Setup menu, highlight Equalize and select Enable.
2. Press the Equalize button on the inverter information panel for five seconds.

If the Conext XW Pro will not perform the equalization, see Warning W96 “Cannot Equalize” in *General Troubleshooting Guidelines* on page 104.

WARNING

EQUALIZATION HAZARD

Only flooded lead acid batteries should be equalize charged. Hydrogen and oxygen gases are produced when batteries are equalized and can potentially cause an explosion if ignited. Corrosive battery acid can escape.

- Provide adequate ventilation and remove all sources of ignition, such as open flames, sparks, electric motors, relays, light switches, etc.
- Equalization voltage is significantly higher than nominal battery voltage. Detach electronics that can be damaged by high DC voltage.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

NOTE: In a system where more than one device is capable of equalizing batteries (such as a system including multiple Conext XW Pro units and Conext MPPT solar charge controllers, there is no system-wide equalization command for all devices. To equalize with multiple devices, each would have to be enabled individually. Alternatively, equalization can be performed using only one device. During the equalization process, one device applies the equalization charge while the other devices continue to operate in synchronized charge mode, typically in float (three-stage charging) or no-float (two-stage charging).

Custom and Lithium Ion Battery Settings Sub Menus

WARNING

BATTERY TYPE AND SETUP HAZARDS

- Incorrect battery configurations or settings for battery types can lead to dangerously high battery temperature, fire and explosion. To avoid damaging your batteries during charging or equalization, and to minimize the risk of fire or explosion consult battery manufacturer's documentation before setting battery parameters and follow the battery manufacturer's recommended settings.
- Always use and connect the Battery Temperature Sensor (BTS).
- Always verify that the configured battery type matches the battery type being used.
- Custom battery settings should be configured by qualified personnel only.
- When using Lithium-Ion batteries, ensure that the battery pack being used includes a certified Battery Management System (BMS) with safety controls.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

WARNING

ADVANCED CONFIGURATION HAZARD

- Advanced menu settings should be used by qualified personnel only.
- Three phase operation should be configured by qualified personnel only.
- Consult with the local utility before enabling Conext XW Pro sell mode or grid support functions.
- Do not change these settings unless you are under the supervision and direction of qualified personnel.
- Do not configure Conext XW Pro inverters remotely. To avoid losing power to the Conext Gateway and the network router connected to the Gateway, connect them to an assured power source during configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The Custom Settings sub menu can be viewed if Custom is selected as the Batt Type. This menu allows you to adjust charging and equalization voltage for batteries with specifications that fall outside the default settings for the battery types the Conext XW Pro offers. You can also adjust the temperature compensation constant for the battery temperature sensor on this menu.

NOTE: The default settings for configuring a custom battery type are based on the default settings for a flooded battery type.

The LithiumIon sub menu can be viewed if LithiumIon is selected as the Batt Type. This menu allows you to select an external BMS or adjust charging specifications for lithium

ion batteries that fall outside the default settings for the battery types the Conext XW Pro offers.

Using the Conext SCP on page 55 describes the items on the Custom Battery Settings menu.

Table 7 Custom Battery Settings Menu

Item	Description
Custom Settings ^a	This sub menu contains the following settings: Eqlz Support, Eqlz Voltage, Bulk Voltage, Absorb Voltage, Float Voltage, and Batt Temp Comp.
Eqlz Support	Enables or disables the ability to enter an equalization cycle. Refer to the battery manufacturer's specifications to determine whether equalization is recommended.
Eqlz Voltage ^b	Selects the equalization voltage. Consult your battery manufacturer for equalization voltage setting.
Bulk Voltage	Sets the bulk voltage for a custom battery type.
Absorb Voltage	Sets the absorption voltage for a custom battery type.
Float Voltage	Sets the float voltage for a custom battery type.
Batt Temp Comp	<p>Battery temperature compensation for a custom battery type. This setting is the reference that the BTS uses to adjust the charging voltage when the temperature is above or below 25 °C (77 °F).</p> <p>The following voltage thresholds are not temperature compensated:</p> <ul style="list-style-type: none"> ■ Grid Support entry voltage ■ Grid Support exit voltage ■ Low Battery Cut-Out trigger voltage ■ Low Battery Cut-Out condition clear voltage <p>The following battery voltage set points are temperature compensated:</p> <ul style="list-style-type: none"> ■ Float exit voltage ■ Bulk exit voltage ■ Float and Gassing voltages used in Constant Voltage exit criteria ■ Recharge Volts ■ Charge Control target voltage
Lithiumlon ^c	This sub menu contains the following settings: Control and the voltage and current settings in the shaded rows below.

^aCustom Settings is displayed when Batt Type is set to Custom.

^bThe Eqlz Voltage setting is displayed when Eqlz Support is set to Enabled.

^cLithiumlon is displayed when Batt Type is set to Lithiumlon.

Item	Description
Control	Configures the Battery Management System (BMS) for Lithium Ion. Contains three options namely: EXT_BMS, 2StageNoFloat, and 3Stage (see descriptions below).
EXT_BMS	Used for an external BMS. When selected, all subsequent voltage and current settings disappear (shaded rows). Battery charging is controlled by the BMS.
2StageNoFloat	Used for 2-Stage Lithium Ion charging. Allows for Bulk Voltage, Bulk Term Voltage, Max Bulk Current, DisChgImax, and DisChgImax Timer settings (in shaded rows).
3Stage	Used for 3-Stage Lithium Ion charging. Allows for Bulk Voltage, Bulk Term Voltage, Max Bulk Current, Absorb Voltage, Max Absorb Current, Float Voltage, Max Float Current, DisChgImax, and DisChgImax Timer settings (in shaded rows).
Bulk Voltage	Appears only when the Control is set to 2StageNoFloat and 3Stage. Sets the bulk voltage limit for a lithium ion battery when in Bulk Charge Mode.
Max Bulk Current	Appears only when the Control is set to 2StageNoFloat and 3Stage. Sets the bulk current for a lithium ion battery type. This configures the current limit when the Conext XW Pro is in Bulk Charge Mode. However, between the maximum charge current (Max Chg Rate × maximum DC output current) [see <i>Using the Conext SCP on page 55</i>] and the value set here, the Conext XW Pro charger will charge at the lesser of these two values.
Absorb Voltage	Appears only when the Control is set to 3Stage. Sets the absorb voltage limit for a lithium ion battery when in Absorption Charge Mode.
Max Abs Current	Appears only when the Control is set to 3Stage. Sets the absorb current for a lithium ion battery type. This configures the current limit when the Conext XW Pro is in Absorption Charge Mode. However, between the maximum charge current (Max Chg Rate × maximum DC output current) [see <i>Using the Conext SCP on page 55</i>] and the value set here, the Conext XW Pro charger will charge at the lesser of these two values.
Float Voltage	Appears only when the Control is set to 3Stage. Sets the float voltage limit for a lithium ion battery when in Float Charge Mode.

Item	Description
Max Float Current	Appears only when the Control is set to 3Stage. Sets the float current for a lithium ion battery type. This configures the current limit when the Conext XW Pro is in Float Charge Mode. However, between the maximum charge current (Max Chg Rate × maximum DC output current) [see <i>Using the Conext SCP on page 55</i>] and the value set here, the Conext XW Pro charger will charge at the lesser of these two values.
DisChglmax	Each Lithium Ion battery has an internal contactor and over load protection which is based on maximum current. If exceeded, the contactor may open, resulting in complete isolation of the battery pack, thus removing power to the Conext XW Pro. In this case the Xanbus communication as well as devices powered from the Conext XW Pro could become unusable. When the Conext XW Pro current draw exceeds the set value for a period defined in DisChglmax Timer, the Conext XW Pro disables INV output. Appears only when the Control is set to 2StageNoFloat and 3Stage.
DisChglmax Timer	Allows the Conext XW Pro current in Invert mode to exceed the DisChglmax limit for inrush periods to startup loads such as pumps/motors. When the timer expires, the Conext XW Pro disables INV output. Appears only when the Control is set to 2StageNoFloat and 3Stage.

For default settings, see *Custom Settings Submenu on page 150*.

AC Input Settings

WARNING

ADVANCED CONFIGURATION HAZARD

- Advanced menu settings should be used by qualified personnel only.
- Three phase operation should be configured by qualified personnel only.
- Consult with the local utility before enabling Conext XW Pro sell mode or grid support functions.
- Do not change these settings unless you are under the supervision and direction of qualified personnel.
- Do not configure Conext XW Pro inverters remotely. To avoid losing power to the Conext Gateway and the network router connected to the Gateway, connect them to an assured power source during configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The AC Settings menu configures the voltage and frequency limits for AC port 1 (Grid) and AC port 2 (Gen). These are the limits at which the Conext XW Pro considers AC input voltage qualified—that is, suitable for charging batteries or passing through to loads attached to AC OUT. If the input voltage is not qualified according to these settings, the Conext XW Pro reverts to inverting external DC energy to AC energy for loads on AC OUT.

NOTICE

THREE-PHASE CONFIGURATION COMPATIBILITY

The Conext XW Pro is configured from the factory as a split-phase inverter. In order to qualify the input, the AC input to the inverter must be split phase: $V_{\text{Line1-Neutral}} + V_{\text{Line2-Neutral}} = V_{\text{Line1-Line2}}$. The Conext XW Pro can be converted and configured for single-phase operation (120 V only). A split-phase Conext XW Pro cannot accept input from a three-phase source, so the inverter must be converted to single-phase operation and connected to a 120 V leg.

Failure to follow these instructions can result in equipment damage.

Table 8 AC Settings Menu

Item	Description
AC Priority	<p>Sets the priority for the AC input source (AC1 or AC2) for qualification and transfer.</p> <p>In systems that use both utility grid (AC1) and generator (AC2) input, it is recommended that you set AC Priority to AC1. Assuming the generator is intended for occasional use only, the Conext XW Pro will use utility power. It will use the generator only if AC1 is unavailable, and if the generator is running.</p>

Item	Description
AC1 Breaker	<p>Sets the AC1 (Grid) breaker size, based on the size of the breaker installed upstream from the AC1 connection port. The installed breaker size must not exceed the capacity of the upstream distribution panel. The Conext XW Pro helps to limit the maximum current draw on AC1 by derating its charging current to an equivalent of 80% of the AC1 breaker setting.</p> <p>However, if the connected loads on AC OUT exceed the AC1 breaker setting, the upstream AC breaker trips. The breaker may not trip if grid support is enabled and battery voltage is above the Grid Supp Volts setting, or if peak load shave is enabled and the load shave time window is active.</p>
AC1 Lo Volt	Minimum acceptable input voltage level from the utility grid.
AC1 Hi Volt	Maximum acceptable input voltage level from the utility grid.
AC1 Lo Freq	Minimum acceptable utility grid input frequency.
AC1 Hi Freq	Maximum acceptable utility grid input frequency.
AC2 Breaker	<p>Sets the AC2 (Gen) breaker size, based on the size of the installed AC breaker upstream from the AC2 connection port. The installed upstream breaker and the AC2 breaker set point must not exceed the capacity of the generator. The Conext XW Pro helps to limit the maximum current draw on AC2 by derating its charging current to an equivalent of 80% of the AC2 breaker setting.</p> <p>However, if the connected loads on AC OUT exceed the AC2 breaker setting, the upstream AC breaker trips. The breaker may not trip if Gen Support is enabled and Gen Amps is configured not to exceed the generator's rated output current.</p>
AC2 Lo Volt	Minimum acceptable input voltage level from the generator.
AC2 Hi Volt	Maximum acceptable input voltage level from the generator.
AC2 Lo Freq	Minimum acceptable generator input frequency.
AC2 Hi Freq	Maximum acceptable generator input frequency.

For default settings, see *AC Menu on page 151*.

Grid Support Settings

The Grid Support Settings menu contains configuration options for grid-tie operation. To enable these settings, Grid Support must be enabled in the Setup menu (see *Conext XW Pro Setup Menu on page 55*).

In grid support mode, the Conext XW Pro supports the utility grid by limiting the power drawn from the utility to close to zero. This mode is desirable for using excess energy from auxiliary DC sources like PV, while still maintaining a charged battery bank. No power is sold to the utility in this mode.


NOTE: Grid support and sell functions are modes of operation that are subject to local and/or national grid interconnection requirements in most jurisdictions. It is the responsibility of the installer and system operator to ensure that all applicable procedures and technical requirements are complied with before turning on either of these modes. The interconnect codes and standards with which the Conext XW Pro complies are listed in the Specifications section on .

NOTE: Upon startup, the Conext XW Pro does not enable grid support functions for five minutes (300 seconds). During this period the Conext XW Pro connects to AC input and determines whether the utility grid voltage and frequency are stable and within nominal range. If Grid Support is enabled, the inverter information panel also displays a 300 second countdown during this period. For more information, see *"Islanding Protection" on page 1–7*.

NOTE: In grid support mode, the Conext XW Pro should not draw a large amount of current from the grid. If the Conext XW Pro is drawing more than expected, it is important to note that it cannot distinguish between real power and reactive power. Large current draw will only affect reactive power and not real power, and utility companies generally only charge by real power consumed.

For default settings, see *Grid Support Menu on page 151*.

Figure 26 Load Shave Mode

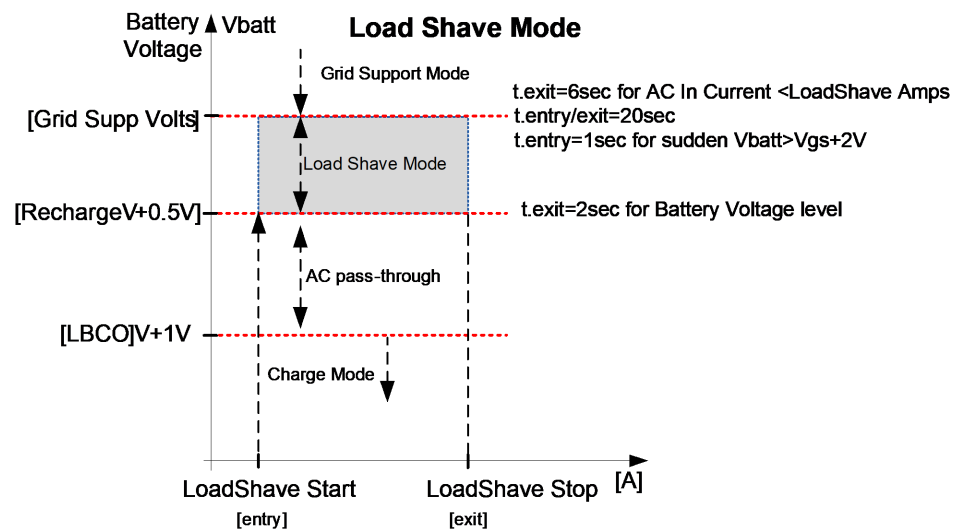

Prioritizing and Managing Energy Sources with Advanced Features

The Conext XW Pro can be programmed to control how and when to use utility power as well as external DC sources of energy such as batteries and solar charge controllers. Advanced features allow management of peak loads, time-of-use billing and self consumption.

Grid Support

WARNING

ADVANCED CONFIGURATION HAZARD

- Advanced menu settings should be used by qualified personnel only.
- Three phase operation should be configured by qualified personnel only.
- Consult with the local utility before enabling Conext XW Pro sell mode or grid support functions.
- Do not change these settings unless you are under the supervision and direction of qualified personnel.
- Do not configure Conext XW Pro inverters remotely. To avoid losing power to the Conext Gateway and the network router connected to the Gateway, connect them to an assured power source during configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

NOTE: Grid support and sell functions are modes of operation that are subject to local and/or national grid interconnection requirements in most jurisdictions. It is the responsibility of the installer and system operator to ensure that all applicable procedures and technical requirements are complied with before turning on either of these modes. The interconnect codes and standards with which the Conext XW Pro complies are listed in *Specifications*.

The grid support mode allows the Conext XW Pro to support local loads by converting excess capacity from external DC sources connected to its battery bank. Examples of external DC sources are solar charge controllers and batteries.

For Grid Support to function, Grid Support must be enabled on the Setup menu and the battery voltage must be above the Grid Supp Volts setting.

There are two modes of operation within Grid Support.

Grid Support enabled, Sell disabled

In this mode, available excess DC power is converted and used to power local loads. No power is exported to the utility. If the local load demand exceeds the available power from the external DC sources, power is then drawn from the utility to support the load. However, if the local load demand is less than the power available from external DC sources, the net excess power from the external DC sources is not converted and hence not used.

Grid Support enabled, Sell enabled

In this mode, all available excess DC power is first used to power local loads. Any remaining power is exported to the utility grid.

Note: To comply with anti-islanding requirements, in a grid tied AC coupled system, change the AC1 Transfer Delay setting under AC Transfer Configuration to 300 seconds using the Conext Configuration Tool (product number 865-1155-01).

Sell Block

The sell block feature halts the export of energy to the grid connected to AC1 for a period of time each day. This period of time is defined by the Sell Block Start and Sell Block Stop settings. Sell Block can be useful in managing the self consumption of renewable energy.

Note: Sell block will not block selling from an AC coupled inverter.

Grid Support and Battery Charging

Charge Cycle settings

With the charger enabled, the Conext XW Pro enters grid support mode only after completing a charge cycle when it is first powered up or reconnected to the grid. Set the Conext XW Pro Charge Cycle to two-stage (default) to allow grid support to function immediately after the absorption charge stage is completed. See *Using the Conext SCP on page 55*.

NOTE: Only the Conext XW Pro needs to be set to two-stage charging. The Conext MPPT solar charge controllers can remain set for three-stage charging. The Conext XW Pro should be set in two-stage charging and the charge controllers set in three-stage for solar charging to occur properly. Alternately, charger block can be used to for correct charging. See *Using the Conext SCP on page 55* for further information.

Grid Support modes

Grid Support can be configured to operate in one of two modes:

- Grid Support with DC Sources Not Communicating Over Xanbus
- Enhanced Grid Support with Conext MPPT Solar Charge Controllers

Grid Support with DC Sources Not Communicating Over Xanbus

This setup is suitable for use with DC sources (such as wind turbines, DC generator sets, fuel cells, and so on) that do not communicate with the Conext XW Pro through Xanbus or for mixed systems which have both Xanbus-connected Conext Solar Charge Controllers and other DC sources (such as those listed above). Grid Supp Volts is set 0.5 volts below the voltage provided by the DC source (typically the float voltage setting of the DC source or charge controller). See *Figure 25 on page 73*. Schneider does not provide support for these energy sources.

In a 'fixed' battery voltage system configuration, the Conext XW Pro manages the battery voltage to the Grid Supp Volts setting. This is done by converting the available DC power to AC power to support the AC loads attached to the inverter output or exports


to the utility grid (AC1). Because the battery bank voltage may not reach bulk/absorption voltages in this mode, it is recommended to occasionally force a full charge cycle by either temporarily disabling grid support or forcing a bulk charge cycle from the grid (see “Force Chg” on the *Conext XW Pro Setup Menu* on page 55.)

Enhanced Grid Support with Conext MPPT Solar Charge Controllers

This setup is suitable for Conext Systems with only Conext MPPT Solar Charge Controller(s) networked to Conext XW Pro units through Xanbus. In this configuration, Grid Supp Volts is set above the charge controller's Equalization voltage (for example, 64 volts).

In an enhanced grid support set up the Conext XW Pro automatically tracks the Conext MPPT Solar Charge Controller voltage as it transitions through charge states (from bulk to absorption to float). This allows the system to execute a complete battery charge cycle while still converting excess DC power to AC power to support the AC loads or be exported to the utility grid. In doing so, the Conext XW Pro only uses excess DC not required by the battery or used to support local AC loads and sells it to the grid, thereby maximizing the use of the PV array. Since this set up allows the battery bank voltage to reach absorption levels (when PV harvest is adequate), the state of health of the battery is improved. The sell entry and regulation voltage level is 1 V below absorption and float of the Conext Solar Charge Controller set points. The exit from sell is 1.5 V below absorption and float of the Conext Solar Charge Controller set points.

Figure 27 Charger Block

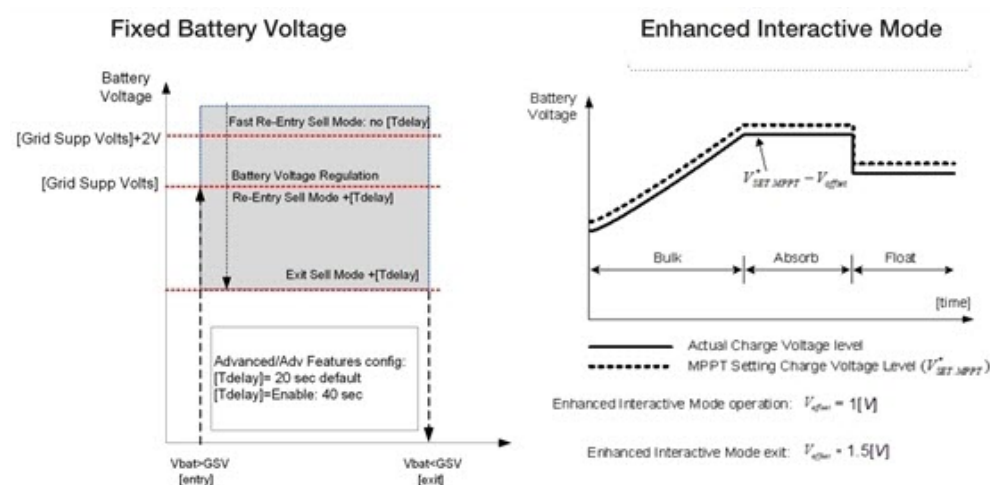

NOTE: [Tdelay] is an entry/exit transition time delay to/from grid support and sell mode. If the battery voltage has higher fluctuations due to DC renewable sources (e.g. charge controllers, wind turbines, and so on), then the time delay can be increased by setting Sell Dly 40s to enabled (*Using the Conext SCP* on page 55). If the battery voltage has a sudden increase change greater than Grid Support Volts + 2 V, then the Conext XW Pro will override the delay and enter grid support or sell mode immediately.

Charger Block

The charger block feature halts charging on AC1 (Grid) for a period of time each day. This period of time is defined by the Chg Block Start and Chg Block Stop settings. In areas

where the utility charges variable rates for electricity, it is preferable to use utility power for charging only during non-peak hours. Charger block can prevent utility power from being used for battery charging during peak billing periods.

During the time period set between Chg Block Start and Chg Block Stop, AC1 (Grid) input continues to be passed through to the loads. Inverter operation remains unaffected during the charger block period.

During the charger block period, no charging on AC1 occurs even if the batteries discharge below ReCharge Volts setting. However, a generator connected to AC2 (in the absence of utility/AC1 power) or a Conext MPPT solar charge controller may charge batteries during the charger block period. AC priority must be set to AC2 to charge batteries with a generator connected to AC2 during the charger block period.

If the charger is operating (that is, in float, absorption, bulk, or equalize stage) at the Chg Block Start time, charging on AC1 stops immediately and the charger enters an idle state identical to no float (see *Using the Conext SCP on page 55*). When the charger block period is over, the charger does not resume the charge stage that was interrupted. Instead, if the batteries are above the ReCharge Volts setting, the charger remains idle.

If the battery voltage falls below the ReCharge Volts setting during the charger block period, the Conext XW Pro begins a new charge cycle with the bulk stage after the charger block period has expired (at the Chg Block Stop time).

For example, charger block is set to start at 5:00 PM and end at 8:00 PM. If the Conext XW Pro is charging from AC1, charging stops at 5:00. When charger block ends at 8:00, the Conext XW Pro does not automatically resume charging. The unit first measures the battery voltage. If the voltage is below the ReCharge Volts setting, then the Conext XW Pro starts a new charge cycle from bulk. If the battery voltage is above the ReCharge Volts setting, the Conext XW Pro remains idle and continues passing through AC to the loads. The Conext XW Pro also keeps measuring the battery voltage as before to determine whether to start a new charge cycle.

Peak Load Shaving (PLS)

Many utilities impose a surcharge on their customers based on the peak load used by a facility. To reduce utility peak demand charges, the inverter can be configured (using the Load Shave Amps setting) to help limit the maximum draw the AC loads place on the utility. The inverter can be programmed to provide power above a specified level to avoid the surcharge. When the utility current draw reaches the maximum level, the inverter assists by sourcing power from the batteries to the loads.

For PLS to be effective, all loads must be connected to the inverter. For large loads, multiple (or stacked) inverters may be required.

To help the batteries supplement the power requirements of the connected load, an additional source of power (solar, wind, or hydroelectric) is recommended.

The default PLS setting for Time in Float is zero. In this case, PLS is only entered/exited as programmed within the time window.

When the Time in Float is different than zero, PLS shall start only if the battery amperage remained at the specified level for the configured time.

Example Settings

Load Shave=Enabled, Load Shave Amps=10 A,
LoadShaveStart=6:00pm, LoadShaveStop=9:00pm, Time in Float=60
min, PLS Dly 2h= Enabled

With these example settings, the Conext XW Pro would enter PLS within the configured window of time only if the battery was charged from MPPT in Float (including Absorption) for 2 hours.

NOTE: When actively operating, the Conext XW Pro compensates for active power as a reference for controlling the total current as specified in the Load Shave Amps setting. However, there is also reactive power that is not compensated for by the Conext XW Pro. For example, if Load Shave Amps is set to 10A, the inverter will only start drawing power from the batteries at a current level which would measure approximately 11A which is 1A higher than the Load Shave Amps value to meet the demand of the loads.

Time-of-Use Metering

Utilities use time-of-use metering to determine utility charges during peak usage hours and to impose a surcharge. The Conext XW Pro can be configured (using the Load Shave Start, Load Shave Stop and Charger Block settings) to overcome these peak charges by using utility power to charge the battery bank during the inexpensive energy hours and consuming the battery energy during expensive energy hours.

For example, if Charger Block is set between 9:00 AM and 10:00 PM and Load Shave is set between 6:00 PM and 9:00 PM, charging on AC1 stops at 9:00 AM and continues to pass through utility AC to the loads. If charging is required during the charger block period, and AC Priority is set to AC2, the Conext XW Pro can use any AC source connected to AC2. Loads will transfer to the AC source on AC2 as well. The inverter connects to the utility grid at 6:00 PM and supports loads using the batteries. The inverter continues to run until 9:00 PM. The Conext XW Pro then stops supporting the utility grid and passes utility AC through to the loads. At 10:00 PM utility AC begins maintaining the batteries based on the battery charger settings.

The above example allows an external renewable energy source to be utilized as a primary charging source during a desired time window. The charger (using utility AC connected to AC1) can then be used to supplement the battery charging when the utility rates are low.

When using the system for time-of-use metering, the system should be designed with a battery capacity large enough to support loads during the entire peak rate period without reaching the Low Batt Cut Out setting.

NOTE: If the batteries reach the Low Battery Cut Out setting, the Conext XW Pro automatically reconnects to the utility grid to maintain the connected load.

Self-Consumption

PLS can also be used with time-of-use metering to support self-consumption. In the self-consumption mode of operation, the Conext XW Pro delays Peak Load Shave mode by a fixed time of 2 hours. This is done by allowing a priority for the MPPT solar charge controller to charge the battery bank.

This configuration can be selected under the Conext XW Pro menu by selecting Advanced Settings/Advanced Features/PLS DLY 2H=Enabled. The default setting for PLS DLY 2H is Disabled.

Generator Support Settings

WARNING

ADVANCED CONFIGURATION HAZARD

- Advanced menu settings should be used by qualified personnel only.
- Three phase operation should be configured by qualified personnel only.
- Consult with the local utility before enabling Conext XW Pro sell mode or grid support functions.
- Do not change these settings unless you are under the supervision and direction of qualified personnel.
- Do not configure Conext XW Pro inverters remotely. To avoid losing power to the Conext Gateway and the network router connected to the Gateway, connect them to an assured power source during configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Generator support allows power to be automatically drawn from the batteries to assist an AC generator on AC2 to support heavy loads on AC OUT (loads that exceed the available power from the generator).

Generators have a limited output current and it is possible to reach this limit when operating heavy loads. The Conext XW Pro is designed to assist the generator when heavy current demands load down the generator by supplying additional power from the batteries.


In addition, the battery charger can reduce its charging current to the batteries so the combined AC current required for charging and the total load current do not exceed the capacity of the generator or trip its output breakers or fuses.

For imbalanced loads and small generators, the generator support feature may be used. When GenSupp Plus is enabled, the Conext XW Pro will connect the center of its transformer to the AC2 input neutral to act as a load balancing transformer. This feature will attempt to balance the load between L1 and L2. Generator support is most effective for generators under 5 kW. See *Using the Conext SCP on page 55*.

NOTE: The passthrough running and startup (peak) currents of generators attached to AC2 are limited to the maximum current limits of the Conext XW Pro.

NOTE: If generator support is used with generators larger than 5 kW, it is possible for current to recirculate. In this case, the efficiency losses would outweigh the benefit of generator support.

Figure 28 Gen Support Mode Graph

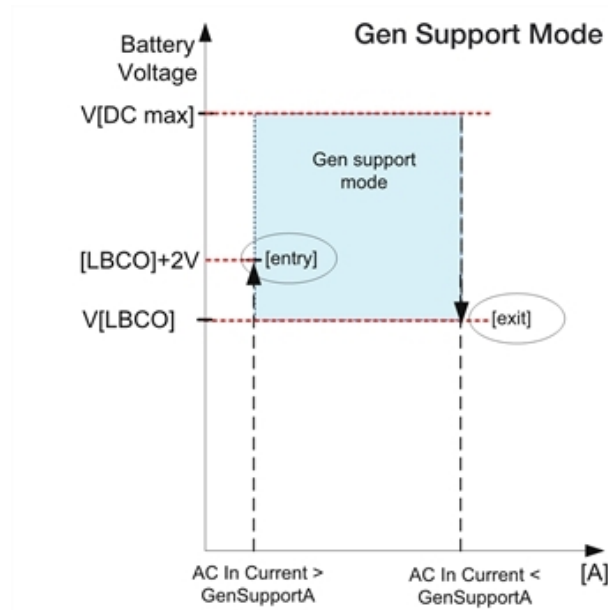

Ensure that the battery bank has sufficient energy to support your loads for the anticipated time period, otherwise draining the battery to LBCO may put the system in Fault mode.

Table 9 Gen Support Menu Values

Setting	Description
GenSupp Mode	Turns the Generator Support feature on and off.
GenSupp Amps	Sets the generator load level at which the Conext XW Pro supplies power from the batteries to support the generator.

NOTE: When GenSupp Mode is enabled and actively operating, the Conext XW Pro compensates for active power as a reference for controlling the total current as specified in the GenSupp Amps setting. However, there is also reactive power that is not compensated for by the Conext XW Pro. For example, if GenSupp Amps is set to 48A, the inverter will only start to assist the generator at a current level which would measure approximately 49A which is 1A higher than the GenSupp Amps value.

For default settings, see *Gen Support Menu* on page 152.

AGS Setting in a Multi-Unit System

The AGS setting Load enables and disables the Load Start and Load Stop triggers. To prevent the generator from nuisance cycling when the multi-unit Conext XW Pro units are installed with an external contactor (that is, the generator starts and stops in a loop) set Load = Disabled under the Cfg Trigger menu.

Auxiliary Output Settings

WARNING

ADVANCED CONFIGURATION HAZARD

- Advanced menu settings should be used by qualified personnel only.
- Three phase operation should be configured by qualified personnel only.
- Consult with the local utility before enabling Conext XW Pro sell mode or grid support functions.
- Do not change these settings unless you are under the supervision and direction of qualified personnel.
- Do not configure Conext XW Pro inverters remotely. To avoid losing power to the Conext Gateway and the network router connected to the Gateway, connect them to an assured power source during configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The Aux menu allows you to enable and set the auxiliary output. The auxiliary output provides 12 volts DC at 250 milliamps to power a relay, indicator light, or alarm.

NOTE: Changing Trigger Level resets the auxiliary output. If an auxiliary output trigger is active, changing the trigger level will clear the trigger.

For default settings, see Aux Menu.

Table 10 Aux Menu Values

Setting	Description
Manual Aux	Sets the state of the auxiliary output. ManualOn or ManualOff allow manual control of the auxiliary output. When set to Automatic, a trigger source can then be selected.
Active Lvl	Sets the mode (polarity) of the auxiliary output. When triggered, the output can be active high (12 V output turns on) or active low (output is high until the trigger turns it off).
Trigger Src	Selects the desired condition (trigger source) to activate the auxiliary output. The trigger source options are LowBattV, HighBattV, LowBattTemp, HighBattTemp, TOD and Fault.
Trigger Level	Sets the voltage or temperature level (depending on the selected trigger source) at which the auxiliary output is activated. If the selected Trigger Src is a battery voltage, the range also varies according to the nominal battery voltage of your system.
Trigger Delay	Sets a delay period between when the trigger occurs and when the auxiliary output is activated.

Setting	Description
Clear Level	Sets the voltage or temperature level (depending on the selected trigger source) at which the auxiliary output becomes inactive.
Clear Delay	Sets a delay period between when the Clear Level setting occurs and when the auxiliary output becomes inactive.
Charge Bulk Exit	Exits charge bulk mode. In charge bulk mode, the Conext XW Pro operates as a constant power source to the battery bank. The aux port clears its state when the inverter exits from Bulk charge stage.
Charge Absorption Exit	Exits charge absorption mode and starts the following mode, depending on whether the unit is set to two or three-stage charge. The aux port clears its state when the inverter exits from Absorption charge stage.
Heatsink temperature	Both high and low end within the heatsink temperature range are configurable. The voltage will be adjusted accordingly when the temperature goes out of range (e.g. the voltage is lowered when the temperature gets too high). The aux port clears its state when the inverter exits from Heatsink temperature.
State of Charge (SoC)	This feature works only in conjunction with the Conext Battery Monitor. A voltage change is triggered when the state of charge falls outside of the range of 25-90% of total battery charge. When triggered, the output can be active high (12 VDC output turns on) or active low (output is high until the trigger turns it off).
TOD (Time of Day)	Time setting. When TOD is selected as a trigger source, the Trig Block Start and Trig Block Stop become available. Both can be set to a value between 12:00 AM and 11:59 PM. Trig Block Start is when the auxiliary output (AUX port) goes into inactive state. Trig Block Stop is when the AUX port goes into active state.

Trigger Source Descriptions

Table 11 Trigger Source Descriptions

Low Batt Voltage	Activates the auxiliary output when the battery voltage falls below Low Batt Voltage after the trigger delay time. The auxiliary output turns off when the battery voltage rises above the clear setting after the Clear Delay time. Use this setting if the auxiliary output needs to control a relay to disconnect loads from a battery or to activate a low battery voltage alarm such as a buzzer or light.
------------------	---

High Batt Voltage	<p>Activates the auxiliary output when the battery voltage rises above Hi Batt Voltage for the trigger delay time. The auxiliary output turns off when the battery voltage falls below the clear setting for the Clear Delay time. This setting is useful for:</p> <ul style="list-style-type: none"> ■ Installations that have another external charging source such as a wind generator or hydro generator connected directly to the batteries. The Conext XW Pro auxiliary output can control a relay to disconnect the external charging source from the battery or control a relay to turn on a diversion load. ■ Activating a high battery voltage alarm such as a buzzer or light. ■ Activating a vent fan to ventilate the battery compartment.
Low Batt Temp	<p>Activates the auxiliary output when the battery temperature falls below Low Batt Temp for the trigger delay time. The auxiliary output turns off when the battery temperature rises above the clear setting for the Clear Delay time. Battery temperature is measured with a battery temperature sensor. Do not use this setting if a battery temperature sensor is not installed.</p>
High Batt Temp	<p>Activates the auxiliary output when the battery temperature rises above Hi Batt Temp for the trigger delay time. The auxiliary output turns off when the battery temperature falls below the clear setting for the Clear Delay time. Battery temperature is measured with a battery temperature sensor. Do not use this setting if a battery temperature sensor is not installed. With this setting, the auxiliary output can turn on a fan to vent the battery compartment.</p>
Fault	<p>Activates the auxiliary output when a fault occurs. The auxiliary output clears when the fault is cleared.</p>
State of Charge (SoC)	<p>This feature works in conjunction with the Conext Battery Monitor. This auxiliary output is triggered when the state of charge falls outside of the range of 25-90% of total battery charge.</p>

Multi-Unit Config Menu

WARNING

ADVANCED CONFIGURATION HAZARD

- Advanced menu settings should be used by qualified personnel only.
- Three phase operation should be configured by qualified personnel only.
- Consult with the local utility before enabling Conext XW Pro sell mode or grid support functions.
- Do not change these settings unless you are under the supervision and direction of qualified personnel.
- Do not configure Conext XW Pro inverters remotely. To avoid losing power to the Conext Gateway and the network router connected to the Gateway, connect them to an assured power source during configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The Multi-Unit Config menu configures the Conext XW Pro to operate as a part of a multi-unit installation.

When installing a multi-unit system, each setting on the Multi-Unit Config menu (except for Dev Name) must be configured for each Conext XW Pro in the system. The settings should be configured in the following order:

- Dev Number
- Inverter Mode
- Connections

NOTE: Accessing this menu automatically places the Conext XW Pro in Standby mode and de-energizes the circuits on inverter output. When entering the Multi-Unit Config menu, the unit identifies itself by flashing the front panel lights. After exiting the Multi-Unit Config menu, the Conext XW Pro returns to operating mode and the front panel lights stop flashing.

Table 12 Multi-Unit Config Menu

Item	Description	Default	Range
Dev Name	Allows customization of the default device name. This setting is optional and does not affect operation. See <i>Using the Conext SCP on page 55</i> .	n/a	n/a
Dev Number	Allows setting of a unique unit number in a multiple-unit system. See <i>Using the Conext SCP on page 55</i> .	00	00–31

Item	Description	Default	Range
Inverter Mode	For a split-phase system: For a multi-unit system to operate, one Conext XW Pro must be configured to SplitPhMaster and the rest as SplitPhSlave, otherwise a system-wide fault is asserted.	SplitPhMaster	For single-phase, three-wire models: SplitPhMaster, SplitPhSlave
Connections	Select to display the Connections menu. See <i>Using the Conext SCP on page 55</i> .	n/a	n/a

Setting the Device Name

The Dev Name setting allows you to customize the name of the Conext XW Pro as it is displayed on other screens and menus.

The characters available are:

- A to Z
- a to z
- 0 to 9
- space

NOTE: Increasing the number of characters in a device name may cause other text on the same line to run off the edge of the screen. Device names should be limited to 10 characters or less.

To customize the Conext XW Pro name:

1. On the device setup menu, select Advanced Settings.
2. If Basic Settings appears instead of Advanced Settings on the device setup menu, display Advanced Settings by pressing Enter + Up arrow + Down arrow at the same time.
3. Select the Multi-Unit Config menu.
4. Select Dev Name.
5. Press Enter.
6. The last letter of the Conext XW Pro name is highlighted.
7. Begin customizing the device name.
8. To change the character, press the up or down arrow button. Holding down the button causes the characters to scroll more quickly.
9. To delete the character, press Exit.
10. To add characters, press Enter.
11. When the correct character is shown, press Enter to select it.
12. After pressing Enter to select the last character of your customized device name, press Enter again to return to the menu.

NOTE: It is also possible to change the device name using the Conext System Control Panel, Conext Gateway, and the Conext Configuration Tool. Please refer to the respective Owner's Guides of these products for further information.

Setting the Device Number

When several devices of the same type are installed in the Xanbus network, setting the device number is required to give a Xanbus-enabled device a unique identity. When each identical device has a unique number, the SCP can correctly identify and display status information for each device. A device number consists of two digits ranging from 00 (default) to 31.

If only one of each type of device is installed in the networked power system, a device number is not needed. However, setting the device number to a value other than 00 is recommended in case you need to use the Restore Defaults command. This command resets the device number to 00. After performing the command, checking that the device number has returned to 00 indicates that the command was successfully completed.


To set the Conext XW Pro device number:

1. On the Conext XW Pro Setup menu, select Advanced Settings.
2. If Basic Settings appears instead of Advanced Settings on the Setup menu, display Advanced Settings by pressing Enter + Up arrow + Down arrow simultaneously.
3. On the Advanced Settings menu, select Multi-Unit Config and press Enter.
4. On the Multi-Unit Config menu, select Dev Number. See *on page 55*.
5. Press Enter to highlight the instance number.
6. Use the up and down arrow buttons to adjust the two-digit identifier number.
7. Press Enter.

Figure 29 Setting a Device Number

XWPro 6848 01:Multi	
Dev Name	[XW1]
Dev Number	[01]
Invtr Mode	[SplitPhSlave]
Connections	

Connections Menu

 **WARNING**

ADVANCED CONFIGURATION HAZARD

- Advanced menu settings should be used by qualified personnel only.
- Three phase operation should be configured by qualified personnel only.
- Consult with the local utility before enabling Conext XW Pro sell mode or grid support functions.
- Do not change these settings unless you are under the supervision and direction of qualified personnel.
- Do not configure Conext XW Pro inverters remotely. To avoid losing power to the Conext Gateway and the network router connected to the Gateway, connect them to an assured power source during configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The Connections menu contains additional settings to allow the Conext XW Pro to function as part of a multi-unit networked system.

Setting the connections for a Xanbus-enabled device provides a way of identifying non-network associations for Xanbus-enabled devices (see [on page 55](#)) and enhancing networked power system management. When connections are set, devices of different types become associated and can share sources, e.g. a common DC input source, or a common grid/generator source.

In multi-unit networked systems, multiple inverter/chargers can be stacked to produce increased charge current. To achieve this functionality, the devices must be configured to the same DC connection, such as House Battery Bank 1. The units will collaborate on battery charging by communicating with other units on this shared DC connection.


NOTE: When configuring clusters of three Conext XW Pro units (or a grouping of up to six in a grid-tie application), each cluster's DC connections must be set to the same battery bank. If one of the units is set with a different DC connection, a system configuration fault (F66) occurs.

Table 13 Connections Menu

Item	Description
DCConn	DC input and output connection. This is the common DC connection shared between the Conext XW Pro, charge controllers, and referenced by the Conext AGS.
ACOut	AC output connection. This connection specifies a common AC output connection shared between Conext XW Pro units. The AC output connection has to be configured so that the units know if they are connected to the same load or not. If connected to the same load, select the same name on all units; for example, "ACLoad1." If connected to separate load banks, use different names for the AC output connection on each unit; for example, "ACLoad1" on one unit and "ACLoad2" on the other.
AC1	AC1 input connection. This connection specifies a common AC port 1 input for multiple Conext XW Pro units.
AC2	AC2 input connection. This connection specifies a common AC port 2 input for multiple Conext XW Pro units.

For default settings, see *Connections Menu on page 152*.

Figure 30 Conext XW Pro Connections Representation

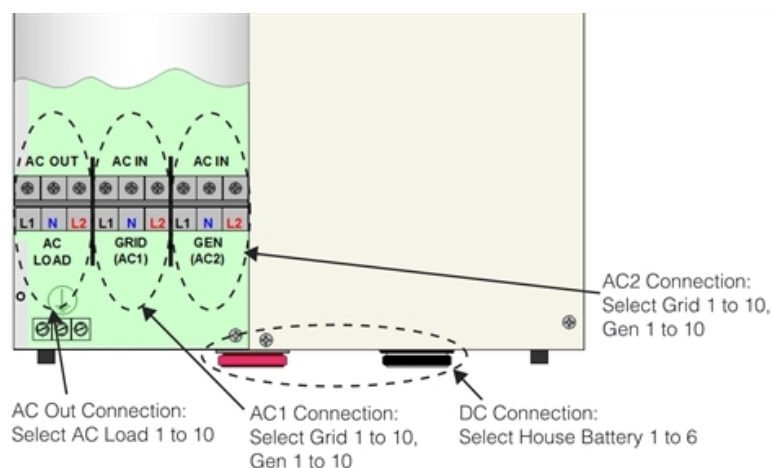

Copying Settings From Another Unit

⚠ WARNING

ADVANCED CONFIGURATION HAZARD

- Advanced menu settings should be used by qualified personnel only.
- Three phase operation should be configured by qualified personnel only.
- Consult with the local utility before enabling Conext XW Pro sell mode or grid support functions.
- Do not change these settings unless you are under the supervision and direction of qualified personnel.
- Do not configure Conext XW Pro inverters remotely. To avoid losing power to the Conext Gateway and the network router connected to the Gateway, connect them to an assured power source during configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The Copy from command allows quick configuration of a Conext XW Pro. After selecting another Conext XW Pro in the system to copy settings from, common parameters are copied from the selected Conext XW Pro to the Conext XW Pro being configured.

The following settings are copied from the selected unit:

- Inverter settings
- Charger settings
- AC settings
- Grid support settings (except the Sell setting)
- Gen support settings
- The following settings are not copied between units:

- Inverter mode
- Device number
- Device name
- Auxiliary output settings

Resetting the Conext XW Pro to Default Settings

WARNING

ADVANCED CONFIGURATION HAZARD

- Advanced menu settings should be used by qualified personnel only.
- Three phase operation should be configured by qualified personnel only.
- Consult with the local utility before enabling Conext XW Pro sell mode or grid support functions.
- Do not change these settings unless you are under the supervision and direction of qualified personnel.
- Do not configure Conext XW Pro inverters remotely. To avoid losing power to the Conext Gateway and the network router connected to the Gateway, connect them to an assured power source during configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The Restore Defaults command returns the Conext XW Pro to factory default settings. After using the Restore Defaults command, the Conext XW Pro is no longer configured for the power system.

NOTICE

RESTORING DEFAULTS

Do not restore defaults while the Conext XW Pro is operating. De-energize the power system and disconnect the Conext XW Pro AC input before restoring defaults. Reconfigure the Conext XW Pro before reconnecting the AC input and re-energizing the power system.

Failure to follow these instructions can result in equipment damage.

To restore Conext XW Pro default settings:

1. On the Advanced Setup menu, select Restore Defaults.
2. Warning W252 appears, asking to confirm the command.
3. To cancel the command, press Exit. To continue with the Restore Defaults command, press Enter.

NOTE: If a warning is already active in the system, selecting Restore Defaults brings up the Warnings list, with warning W252 at the top. Press Enter to view W252 and continue with the restore defaults process.

Using the Advanced Features

WARNING

ADVANCED CONFIGURATION HAZARD

- Advanced menu settings should be used by qualified personnel only.
- Three phase operation should be configured by qualified personnel only.
- Consult with the local utility before enabling Conext XW Pro sell mode or grid support functions.
- Do not change these settings unless you are under the supervision and direction of qualified personnel.
- Do not configure Conext XW Pro inverters remotely. To avoid losing power to the Conext Gateway and the network router connected to the Gateway, connect them to an assured power source during configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Table 14 Advanced Features Menu

Item	Description
RPO	Enables or disables the remote power off function. Enable this setting if an external switch has been connected to the Conext XW Pro auxiliary port. See the <i>Conext XW Pro Installation Guide</i> for more information about the auxiliary port.
Power Save	When enabled, power save mode can reduce tare loss from the battery by reducing output from 240 volts to 220 volts when the loads are less than 100 watts. When the Conext XW Pro detects loads higher than 100 watts, it produces the full 240 volts. Power Save mode is disabled by default.
Sell Dly 40s	<p>When enabled—and other conditions are satisfied—there will be a 40 second delay before the system starts exporting energy to the grid. When disabled, the default value of 20 seconds is used. This feature is useful when the battery voltage is not constant. It also helps avoid power fluctuations during sell.</p> <p>As an exception, there will be zero time delay when the battery voltage suddenly rises to 2 V above Grid Supp Volts. For example, a wind turbine or micro hydro connected to a small battery bank may create a sudden change on the battery voltage. In this case the system will immediately respond to convert the energy from the battery to grid.</p>

Item	Description
AC_Coupling	AC Coupling function is enabled by default (Advanced Features Menu) and should remain enabled except in cases where the DC voltage level is allowed to have large variations and the AC line frequency needs to remain constant.
Batt_Balance	The Battery Balance function is disabled by default and is intended for use with inverters drawing power from a single battery bank. The Battery Balance function should be enabled when Conext XW Pro units are used in multi-unit systems with multiple battery banks. When enabled this feature helps balance the power draw across multiple battery banks.
PLS DLY 2h	When enabled, PLS (Peak Load Shave) mode is delayed by 2 hours to allow the MPPT solar charge controller to charge the battery bank first, then when the timer of 2 hours expires, the unit enters PLS mode for AC load support.
TOV_DISCNCT	<p>The TOV (Transient Over-voltage) disconnect feature is used for utility interconnect requirements (e.g. HECO - Hawaii Electric company, Tariff Rule 14H - Supplemental requirement - Transient Over-voltage fast trip).</p> <p>While in sell mode, the Conext XW Pro will disconnect within one line cycle when the grid voltage is above 120% of its nominal value.</p>

4 Troubleshooting

What's in This Chapter?

General Troubleshooting Guidelines	104
Inverter Applications	105
Resistive Loads	105
Motor Loads	105
Problem Loads	105
Inverter Troubleshooting	107
Battery Charger Troubleshooting	111
Faults and Warnings	116
Warning Messages	116
Fault Messages	119

General Troubleshooting Guidelines

This section will help you narrow down the source of any problem you may encounter. Please read the following troubleshooting steps:

1. Check for a Warning or Fault message on the Conext SCP or a Fault code on the inverter information panel. If a message is displayed, record it immediately.
2. As soon as possible, create a detailed record of the conditions at the time the problem occurred. These details should include, but not be limited to, the following:
 - Loads the Conext XW Pro was running or attempting to run.
 - Battery condition at the time of failure (for example battery voltage or temperature) if known.
 - Recent sequence of events (for example, charging had just finished, utility grid had failed but the inverter did not start up).
 - Any known unusual AC input factors such as low voltage or unstable generator output.
 - Extreme conditions which may have existed at the time (for example, temperature or moisture).
3. Attempt the solution corresponding to the Warning or Fault message in *General Troubleshooting Guidelines on page 104* or *General Troubleshooting Guidelines on page 104*.
4. If the Event LED is not lit up on the front of the inverter information panel or Conext SCP, check the following list to make sure that the present state of the installation allows proper operation of the unit. See also *General Troubleshooting Guidelines on page 104* and *General Troubleshooting Guidelines on page 104*.
 - Is the Conext XW Pro located in a clean, dry, adequately ventilated area?
 - Have the AC input breakers opened? If so, your passthrough load may have exceeded the rating of one or more of the input breakers.
 - Are the battery cables adequately sized and short enough? See the *Conext XW Pro Installation Guide* for more information.
 - Is the battery in good condition and are all DC connections tight?
 - Are the AC input and output connections and wiring in good condition?
 - Are the configuration settings correct for your particular installation?
 - Are the display panel and the communications cable properly connected and undamaged?
 - Are the battery temperature sensor and its cable properly connected and undamaged?
5. Contact Customer Service for further assistance. Please be prepared to describe details of your system installation and provide the model and serial number of the unit. See *page ii* for contact information.

Inverter Applications

The Conext XW Pro performs differently depending on the AC loads connected to it. If you are having problems with any of your loads, read this section.

Resistive Loads

Resistive loads are the easiest and most efficient to drive. Voltage and current are in phase, which means they are in step with one another. Resistive loads generate heat in order to accomplish their tasks. Toasters, coffee pots, and incandescent lights are typical resistive loads. It is usually impractical to run larger resistive loads—such as electric stoves and water heaters—from an inverter due to their high current requirements. Even though the inverter may be able to accommodate the load, the size of battery bank will limit inverter run time.

Motor Loads

Induction motors (AC motors without brushes) require up to six times their running current on startup. The most demanding are those that start under load (for example, compressors and pumps). Of the capacitor start motors (typical in tools such as drill presses and band saws), the largest you can expect to run is 1 horsepower. Universal motors are generally easier to start. Check that the Locked Rotor Amps (LRA) rating of the motor load does not exceed the maximum surge current rating of the inverter. Since motor characteristics vary, only testing will determine whether a specific load can be started and how long it can be run.

If a motor fails to start within a few seconds or loses power after running for a time, it should be turned off. When the inverter attempts to start a load that is greater than it can handle, the inverter may shut down from an AC overload fault.

Problem Loads

Very Small Loads

If the power consumed by a device is less than the threshold of the search mode circuitry, and search mode is enabled, the inverter will not run. Most likely the solution will be to disable Search mode or lower the sense threshold. (See *Using the Conext SCP on page 55*.)

Fluorescent Lights and Power Supplies

Some devices cannot be detected when scanned by search mode circuitry. Small fluorescent lights are the most common example. Some computers and sophisticated electronics have power supplies that do not present a load until line voltage is available. When this occurs, each unit waits for the other to begin. To drive these loads, either a small companion load like a light bulb rated for more than the Search Watts setting must be used to bring the inverter out of search mode, or the inverter may be programmed to remain on by disabling search mode (See *Using the Conext SCP on page 55*).

Clocks

You may notice that your clocks are not accurate. Some of the clocks on your appliances may reset when the Conext XW Pro is in search mode. Disabling search mode will resolve this issue (See *Using the Conext SCP on page 55*).

Searching

When the inverter is in search mode, it may fail to start some loads even though the rated wattage on the load is more than the Search Watts setting. Disable search or apply an additional load (companion load) to make the inverter exit search mode.

Inverter Troubleshooting

To determine the cause of an inverter error condition, refer to the troubleshooting table below for possible solutions.

Table 15 Troubleshooting Common Problems

Problem	Possible cause	Solution(s)
Unit will not power on (no LEDs are on) and the inverter information panel is blank or off.	Unit was turned off using STARTUP/SHUTDOWN button on front panel.	Turn the unit on again.
	DC voltage on the inverter's DC terminals is incorrect.	Check the battery voltage, fuses or breakers and DC cable connections to the inverter. If the DC voltage on the inverter's DC terminals is correct, have unit serviced.
Unit goes into invert mode and starts producing AC output, but stops quickly (several attempts made).	Excessive load on output.	Reduce loads.
	Unit is in over-temperature protection and needs to cool down.	Stop inverting by putting the inverter into Standby mode, and then allow the unit to cool and increase ventilation. If necessary, replace the foam air filter on the bottom of the unit.
	Remote Power Off signal is present.	Release or reset the Remote Power Off switch.

Problem	Possible cause	Solution(s)
<p>No AC power output.</p> <p>The inverter information panel displays <i>5ch</i>.</p>	<p>Open AC output breakers or fuses and bad output wire connections.</p> <p>Inverter is disabled. Re-enable inverter.</p>	<p>Check the Load AC Voltage status on the SCP Meters screen and check AC voltage on the inverter AC Out terminal block.</p> <p>If the Meters screen shows correct AC voltage but there is no AC voltage on the inverter AC Out terminal block, check for loose connections on the inverter terminal block. If connections are not loose, the inverter may need to be serviced.</p> <p>If there is correct AC voltage on the Meters screen and on the inverter AC terminal block, check for open AC output breakers or fuses and bad output wire connections.</p> <p>If AC voltage on the Meters screen or inverter AC terminal block is incorrect, have unit serviced.</p>
<p>No AC power output.</p> <p>INVERT LED is flashing.</p>	<p>AC load too small for search mode circuit to detect.</p>	<p>Reduce Search Watts setting, increase load above Search Watts setting, or disable Search on the Setup menu.</p> <p>If the AC1 LED is on, check inverter output connections and voltage.</p>
<p>Low AC power output or low surge power. INVERT LED is on.</p> <p>AC inductive loads are not running at full speed.</p>	<p>Insufficient DC current being provided to the inverter to operate the AC loads.</p>	<p>Check the battery voltage, fuses or breakers and cable connections.</p> <p>Make sure the battery bank is sufficient (check for low DC voltage while running the load).</p> <p>Make sure the cable length and size is correct (see the <i>Conext XW Pro Installation Guide</i> for correct cable). Tie the battery cables together to reduce inductance.</p> <p>Apply a load greater than 100 W or disable Power Save (see <i>Using the Conext SCP on page 55</i>).</p>

Problem	Possible cause	Solution(s)
Inverter goes into invert mode and starts producing AC output and then stops or does not start at all.	<p>Search Watts setting is too low or high.</p> <p>Potential problem loads for search mode:</p> <p>Incandescent lights have a higher starting wattage when the filament is cold than the continuous rating of the bulb.</p> <p>Fluorescent bulbs draw little power until the mercury vapor begins to conduct enough current to light the tube.</p> <p>Other loads: Some appliances draw power even when turned off: TVs with instant-on circuits and VCRs, for example.</p>	<p>If the search sensitivity is set higher than the combined loads, then connect an auxiliary load to bring the inverter out of search mode before the appliances can be turned on.</p> <p>If the sensitivity is set lower than the combination of the loads, the loads will remain on and excess battery drain will occur since the inverter won't ever idle.</p> <p>Another solution is to turn the item off at the wall, use an extension cord with a rocker switch, a switch at the outlet, or an appropriate circuit breaker.</p>
The utility grid is not dropping out, but the unit is disconnecting from the grid.	The AC voltage or frequency provided to the inverter input is outside the AC Setting voltage or frequency range.	Adjust the AC1 voltage and frequency settings (see <i>Using the Conext SCP on page 55</i>). Raise the high voltage and frequency settings, and lower the low voltage and frequency settings. If Grid support is enabled, these limits are over-ridden by the default anti-islanding AC parameters.

Problem	Possible cause	Solution(s)
The inverter connects to the grid and can charge normally. In a grid interactive mode (Grid Support enabled), the unit is experiencing excessive anti-islanding faults during periods of high sell amperage.	The impedance of the AC connection to the inverter is too high for the power being sold to the grid. The impedance may be on the high end if the installation is too far from the utility point of common connection or if the wires are too small between the Conext XW Pro and the main service panel.	Measure the grid voltage at the service panel (meter base). It is important to measure L1-N, L2-N, L1-L2, and N-Ground. If these measurements are not within the voltage range for sell mode (see <i>Electrical Specifications on page 1</i>), contact your utility for resolution. If these measurements are within the voltage range for sell mode (see <i>Electrical Specifications on page 1</i>), the most likely event is that the AC wiring between the inverter and the meter base is not sized appropriately. It should be sized for a 1 to 1.5% maximum voltage drop. Alternately, the Max Sell Amps can be reduced until the unit stops disconnecting.

Battery Charger Troubleshooting

To determine the cause of a charger error condition, refer to the troubleshooting solutions below to resolve the situation.

Table 16 Troubleshooting Battery Charger Problems

Problem	Possible Cause	Solution
AC1/AC2 LED is on, but will not start charging (allow 40 seconds to synchronize).	1) Charger is disabled on the Setup menu.	1) Enable the charger.
	2) Charger Block is enabled and the Conext XW Pro is inside of the charger block time window.	2) Disable Charger Block if you need to override this feature.
	3) The Conext XW Pro is load shaving.	3) Check the load shave settings. If the load draw from the grid exceeds Load Shave Amps, the charger will not operate.
	4) Charger is set for 2-stage charging and has completed a full charge cycle.	4) No action required. The charger comes on when the battery reaches the ReCharge Volts setting. Otherwise use the Force Chg setting on the device setup menu to force a bulk or float charge.
	5) Battery voltage is below 40 V and AC source could not be qualified.	5) Recharge the batteries with an external battery charger or replace the batteries.
	6) Gen support is enabled and the draw from the loads exceeds the Gen support amps setting.	6) Temporarily disable Gen support mode, or reduce loads below Gen Support Amps setting.

Problem	Possible Cause	Solution
AC1 or AC2 LED is flashing, but will not start charging (allow 40 seconds to synchronize).	AC voltage and frequency at the AC input terminal are within nominal range, but the inverter output is not yet synchronized to the AC source. There are four possible causes: 1) The inverter may already be synchronized to another AC source.	1) The inverter is operating normally.
	2) The AC voltage or frequency applied to the input is outside of the acceptable range of the inverter.	2) Adjust the AC acceptance settings (see <i>Using the Conext SCP on page 55</i>) or possibly service an unstable generator.
	3) AC voltage and frequency at the AC input terminals are within acceptable range, but the inverter is not yet synchronized to the AC source.	3) For 120 V/240 V units, measure voltage in four places on the input of the inverter: L1-N, L2-N, L1-L2, and N-Ground. These readings must be approximately 120, 120, 240, and 0 respectively. Make sure these readings are within the tolerance for AC acceptance and are stable for at least 60 seconds. See <i>Using the Conext SCP on page 55</i> .
	4) A split phase unit may be connected to two legs of three-phase service.	4) Connect the split phase unit to split phase power; use an isolation transformer to create a separately derived neutral; or acquire three or six units, convert them to single phase, and then connect a three-phase system to the three-phase source.

Problem	Possible Cause	Solution
Charger amperage drops off before full charging has finished (no Event LED).	AC frequency at the AC input terminal may be out-of-tolerance (too high or low) or the AC voltage may be outside the Hi AC Volt or Lo AC Volt settings. AC input voltage approaching the low disconnect level.	Check the settings on the AC Settings menu. Check for the correct AC voltage or frequency at the AC input terminal. If the AC source is a generator, adjust the AC voltage or frequency accordingly. Increase the difference between the Hi AC Volt (AC1) and Lo AC Volt (AC1) settings to allow synchronization.
	The charge settings are incorrectly configured for your battery type.	Select the correct battery type or configure a Custom battery type.
	Ambient temperature may be high, causing unit to overheat and ramp down the charging.	Cool the unit down or check for anything preventing air flow around the unit.
	Battery bank has one or more bad cells or inadequate wiring.	Check tightness of battery connections and interconnections. Replace battery.
	Battery Management System on Lithium Ion battery has interrupted charging.	Consult with battery manufacturer for battery compatibility.
Charger stops before full charging (or equalization) has finished. Event LED flashes and AC output drops momentarily.	Cold temperature around batteries with battery temperature sensor (BTS) installed may be causing unit to reach High Batt Cut Out setting.	Disconnect BTS during charging or increase High Batt Cut Out setting.
Charger output is low.	Loose or corroded battery connections.	Check and clean all connections.
	Loose AC input connections.	Check and tighten AC wiring connections.
	Worn out batteries.	Replace batteries.
	Battery cables too small or too long.	Refer to cable and battery recommendations in the <i>Conext XW Pro Installation Guide</i> .

Problem	Possible Cause	Solution
Batteries being charged above the bulk/float settings.	If a BTS (Battery Temperature Sensor) is installed, it may be in a cold area or have fallen off the batteries. Another DC charging source may be on the batteries.	Inspect the BTS. Reduce Batt Temp Comp on Custom Battery Settings menu.
	Battery bank size too small relative to charger output.	Increase battery bank size or decrease max charge rate. Note: To bring batteries that are cold to the correct state of charge may require charging at a higher voltage. This may be normal BTS operation. Unplug the BTS and determine if your voltage returns to the bulk/float voltage.

Faults and Warnings

When a fault or warning message appears on the Conext SCP, you can acknowledge the message to clear the screen. To acknowledge a fault or warning message, press the Enter button. This action does not clear the fault or warning condition - consult *General Troubleshooting Guidelines on page 104* and *General Troubleshooting Guidelines on page 104* for suggested actions after you have acknowledged the message. Refer to the *Conext SCP Owner's Guide* for more information on faults and warnings.

Warning Messages

Warning messages appear on the Conext SCP to alert you to an impending system change. You can view the 20 most recent warning messages using the Conext SCP's warning log, accessible from the View Device Info menu. Each warning has a time stamp to let you know the date and time that the warning appeared.

If several warning messages occur before you can acknowledge or clear them, they are displayed together on a warning list. This list contains messages from every Xanbus-enabled device, not just the Conext XW Pro. You can select a message and view its details from warning list.

To view a message from a warning list:

1. On the list, use the up arrow or down arrow button to highlight the message you want to view.
2. Press Enter. The complete message appears.
3. After viewing the message, you can return to the warning list by pressing Exit or continue to the menu for the device that caused the warning by pressing Enter. Each time you return to the list after viewing a complete message, the viewed message is removed from the list.
4. If you have left the warning list, you can view warnings at any time from the System Settings menu.

To view a warning list:

1. On the Select Device menu, highlight System and press Enter.
2. On the System Settings menu, highlight View Warning List.
3. Press Enter.

Warning Types

There are two types of warnings: automatic and manual. When the Conext XW Pro detects a warning condition, it displays a warning message on the Conext SCP. *General Troubleshooting Guidelines on page 104* describes how their behavior differs and how you can respond to them when they appear on the Conext SCP.

Table 17 Warning Types and Behavior

Warning type	Behavior
Automatic warning	Clear automatically if the warning condition that generated the message goes away. You can also acknowledge automatic warnings without waiting for them to clear automatically.
Manual warning	Require you to acknowledge them before you can proceed with configuring or operating the Conext XW Pro. Manual warnings are usually in the form of a Yes/No question that you may acknowledge by pressing the Enter button on the Conext SCP for Yes and the Exit button for No. Refer to the <i>Conext SCP Owner's Guide</i> for more information.

General Troubleshooting Guidelines on page 104 provides descriptions of the warning messages and solutions.

Table 18 Warning Messages

Warning Number	SCP Message	Warning Type	Cause	Solution
W44	Battery Over Temperature	Automatic	Battery Over Temperature Warning. Battery temperature is over 50 °C (122 °F).	Check battery voltage and battery cable connections. Stop charging, if necessary. Check for excessive ambient temperature and adequate ventilation in the battery compartment
W45	Capacitor over temperature	Automatic	DC Bulk Capacitor over temperature (100 °C/212 °F)	Ensure adequate ventilation around the Conext XW Pro. Reduce the AC loads.
W48	DC Under Voltage	Automatic	Battery voltage is below 47 V.	Check for the correct battery voltage at the inverter's DC input terminals. Check for an external DC load on the batteries. Check condition of batteries and recharge if possible or reduce your Low Batt Cut Out setting.
W49	DC Over Voltage	Automatic	Battery voltage goes within the [High Batt Cut Out – 2V] threshold.	Turn off or check additional charging sources to batteries. Check battery cables. Check for the correct battery voltage at the inverter's DC input terminals. Ensure your DC source is regulated below your high battery cut out or increase your High Batt Cut Out setting.

Warning Number	SCP Message	Warning Type	Cause	Solution
W57	FET1 Over Temperature	Automatic	Internal temperature is over 85 °C (185 °F).	Check for high input AC voltage.
			AC input voltage may be too high while charging.	
			Operating too large of a load for too long while inverting.	Remove excessive loads.
			Ambient temperature may be high.	Let inverter cool down and try restarting.
			Inverter cooling fan may have failed.	Hold a piece of paper to inverter vents to check the fan. If the fan has failed, have the inverter serviced.
			Inverter airflow intake may be blocked.	Increase clearance around the inverter or unclog the fan air intake.
			Charging setting is too high based on ambient temperature around inverter.	Lower the Max Charge Rate setting.
W58	FET2 Over Temperature	Automatic	See W57.	See W57.
W63	AC Overload	Automatic	Excessive load on the AC output.	Check for loads above the inverter's capacity. Turn off some loads if necessary.
W64	AC Overload	Automatic	See W63.	See W63.
W68	Transformer Over Temperature	Automatic	See W57.	See W57.
W70	Synchronization Warning	Manual, AC input is not qualified	1. An AC input voltage phase is lost or out of the AC range in the three-phase.	1. Check the AC voltage presence of each phase at the AC input terminals for each Conext XW Pro.
			2. AC input voltage phases are not synchronized with Conext 3-phase system.	2. Inspect the three-phase wiring to have the correct phase sequence: XW-Phase-A, XW-Phase-B, XW-Phase-C with the same AC input sequence to each unit.

Warning Number	SCP Message	Warning Type	Cause	Solution
W94	Remote Power Off	Automatic	The unit has been turned off with a Remote Power Off switch.	No action required. The unit stops inverting or charging immediately, and shuts down after five seconds. If the unit is configured as a master, it signals other network devices to also shut down.
W95	Equalize Abort	Manual	Equalization terminated abnormally because of interrupted AC input.	Wait until AC input (utility grid) returns to in-tolerance condition.
W96	Cannot Equalize	Manual	The selected battery type should not be equalized.	Change battery type if your batteries should be equalized. Gel or AGM batteries should not be equalized.
			AC input is not qualified or the charge setting is not adequate.	Check for presence of AC. Make sure Charge and Equalize are enabled. Verify the Conext AGS trigger is set to Stop Float. If Stop V is enabled, then the voltage level should be above the Eqlz Voltage level.
W97	Battery temperature sensor failure	Automatic	Battery Temperature Sensor Shorted	Replace battery temperature sensor.
W500	Lost network connection	Automatic	Lost network connection	Check network cables.
W501	Inv/Chg is trying to fix a memory problem	Manual	Non-volatile memory warning	Normal operation may return or may go to fault. Turn Conext XW Pro off and on to resume normal operation.

Fault Messages

When the Conext XW Pro detects a fault condition, the fault is displayed on the Conext SCP. The Conext XW Pro also illuminates the Event/Warning LED on the Conext SCP and inverter information panel. A fault affects the operation of the unit. See *General Troubleshooting Guidelines on page 104* for an explanation of the different fault types.

You can view the 20 most recent fault messages on the Conext SCP by selecting Fault Log from the Device Info menu in the Conext XW Pro Setup Menu.

If several faults occur before you can acknowledge or clear them, they are displayed together on a fault list. This list contains messages from every Xanbus-enabled device, not just the Conext XW Pro. You can select a message and view its details from the fault list.

To view a message from a fault list:

1. On the list, use the up arrow or down arrow button to highlight the message you want to view.
2. Press Enter. The complete message appears.
3. After viewing the message, you can return to the fault list by pressing Exit or continue to the menu for the device that caused the fault by pressing Enter. Each time you return to the list after viewing a complete message, the viewed message is removed from the list.
4. If you have left the fault list, you can view faults at any time from the System Settings menu.

To view a fault list:

1. On the Select Device menu, highlight System Settings and press Enter.
2. On the System Settings menu, highlight View Fault List and press Enter.

Fault Types

There are three types of fault messages: automatic faults, manual faults, and escalating automatic faults. *General Troubleshooting Guidelines on page 104* describes how they differ in their behavior and how you can respond to them when they appear on the Conext SCP.

Table 19 Fault Types and Behaviors

Fault type	Behavior
Automatic faults	Clear automatically if the fault condition that generated the message goes away. You can also acknowledge automatic faults without waiting for them to clear automatically. It is not possible to clear a fault if the cause of the fault is still present.
Manual faults	Require you to clear them by: <ul style="list-style-type: none"> ■ selecting Clear Faults on the Main Conext XW Pro menu or on the menu for the Xanbus-enabled device that generated the fault (if the fault condition still exists, the fault message reappears). ■ correcting the condition that caused the fault.
Escalating automatic faults	Clear automatically if the fault condition goes away, just like an automatic fault. However, if an escalating automatic fault occurs several times within a defined time period, the escalating automatic fault becomes a manual fault, requiring user intervention. For example, if an AC Overload fault occurs three times in five minutes, it will no longer clear itself and become a manual fault. Then you must identify the problem, correct the fault condition, and clear the fault.

Inverter Operation After Faults

Conext XW Pro operation changes when a fault occurs. How the operation changes depends on the operating state of the unit when the fault occurred—inverting, charging, grid or generator support, AC bypass, and so on—and on which fault has occurred.

Table 20 Inverter Operation After Faults

Faults	State when Faults Occur	Action After Faults
F1, F2: AC Output	Inverting	Unit stops inverting and waits for nominal AC output voltage level, or a manual clear from user.
F17 to F22: Relay Welded	Inverting	Unit stops inverting and waits for user to clear fault.
F23 to F40: Anti-Islanding	Grid Support (Peak Load Shaving or Selling)	Unit moves to AC bypass and waits for nominal grid conditions to return for a minimum of five minutes.
F41, F42: Aux power supply voltage	Unit has qualified AC input.	Unit shuts down and waits for nominal AC output voltage level, or a manual clear from user.
F44: Battery Over Temp F45: Capacitor Over Temp	Any state.	If inverting, the unit shuts down and waits for the temperature to return to nominal value. If in any of the AC-interactive states (charging, peak load shaving, sell, gen support), the unit goes into AC bypass mode until the temperature returns to the nominal value. If the unit is not in AC bypass, it shuts down until the temperature returns to nominal value. After these faults clear, the unit returns to its previous operating state.
F47 to F49: DC Under Voltage and Over Voltage	Unit is inverting or has qualified AC input and is preparing to charge.	If inverting, the unit shuts down and waits for nominal voltage. If operating with a qualified AC source, the unit charges if charging is enabled, or remains in AC bypass if charging is disabled.
F63 to F65: AC Overload	Inverting or Grid Support	Unit stops inverting and waits to qualify AC. Unit waits for user to manually clear fault.

General Troubleshooting Guidelines on page 104 provides descriptions of the fault messages and solutions. If you are unable to resolve the problem after referring to this table, contact your dealer or Customer Service.

Fault Number	Message	Fault Type	Cause	Solution
F1	AC Output Under Voltage	Escalating Auto Fault. Must occur 3 times in 2 minutes before becoming a manual fault.	AC under voltage shutdown at 108 V. The inverter has shut down to protect the loads.	Clear the fault and attempt restart. If problem persists, call customer service.
F2	AC Output Over Voltage	Escalating Auto Fault. Must occur 3 times in 30 seconds before becoming a manual fault.	AC over voltage shutdown at 135 V. The inverter has shut down to protect the loads.	Clear the fault and attempt restart. If problem persists, call customer service.
F17	Relay(s) Welded	Manual	The AC1 L1 transfer relay is bad or an AC source was wired directly to the AC output.	Disconnect the inverter's output wiring. If error continues, have unit serviced.
F18	Relay(s) Welded	Manual	The AC1 L2 transfer relay is bad or an AC source was wired directly to the AC output.	Disconnect the inverter's output wiring. If error continues, have unit serviced.
F19	Relay(s) Welded	Manual	The AC2 L1 transfer relay is bad or an AC source was wired directly to the AC output.	Disconnect the inverter's output wiring. If error continues, have unit serviced.

Fault Number	Message	Fault Type	Cause	Solution
F20	Relay(s) Welded	Manual	The AC2 L2 transfer relay is bad or an AC source was wired directly to the AC output.	Disconnect the inverter's output wiring. If error continues, have unit serviced.
F21	Relay(s) Welded	Manual	An unidentified transfer relay is bad or an AC source was wired directly to the AC output.	Disconnect the inverter's output wiring. If error continues, have unit serviced.
F22	Relay(s) Welded	Manual	An unidentified L1 transfer relay is bad or an AC source was wired directly to the AC output.	Disconnect the inverter's output wiring. If error continues, have unit serviced.
F23	AI Over Frequency	Automatic	Over-frequency anti-islanding, caught by the AC qualification limit.	No action required. The inverter stops selling and disconnects from the grid. When the fault clears, a five-minute timer begins counting down. The inverter does not sell again until grid voltage and frequency are within range for five minutes.
F24	AI Under Frequency	Automatic	Under-frequency anti-islanding, caught by the AC qualification limit.	See F23.
F25	AI Over Frequency	Automatic	Over-frequency anti-islanding.	See F23.
F26	AI Under Frequency	Automatic	Under-frequency anti-islanding.	See F23.
F27	AI L1 Over Voltage	Automatic	Over-voltage anti-islanding, fast disconnect, 135 VAC.	See F23.
F28	AI L2 Over Voltage	Automatic	See F27.	See F23.

Fault Number	Message	Fault Type	Cause	Solution
F29	AI L1L2 Over Voltage	Automatic	Over-voltage anti-islanding fault, caught by the qualification limit, voltage difference between L1 and L2.	See F23.
F30	AI L1L2 Over Voltage	Automatic	Over-voltage anti-islanding, fast disconnect, 270 V.	See F23.
F31	AI L1 Over Voltage	Automatic	Over-voltage anti-islanding, slow disconnect, 130 V.	See F23.
F32	AI L2 Over Voltage	Automatic	Over-voltage anti-islanding, slow disconnect, 130 V.	See F23.
F33	AI L1L2 Over Voltage	Automatic	Over-voltage anti-islanding, slow disconnect, 260 V.	See F23.
F34	AI L1 Under Voltage	Automatic	Under-voltage anti-islanding, slow disconnect, 108 V.	See F23.
F35	AI L2 Under Voltage	Automatic	See F34.	See F23.
F36	AI L1L2 Under Voltage	Automatic	See F34.	See F23.
F37	AI L1 Under Voltage	Automatic	Under-voltage anti-islanding, fast disconnect, 66 VAC.	See F23.
F38	AI L2 Under Voltage	Automatic	See F37.	See F23.
F39	AI L1L2 Under Voltage	Automatic	Under-voltage anti-islanding fault, caught by the qualification limit, voltage difference between L1 and L2.	See F23.
F40	AI L1L2 Under Voltage	Automatic	Under-voltage anti-islanding, fast disconnect, 132 V.	See F23.

Fault Number	Message	Fault Type	Cause	Solution
F41	APS Under Voltage	Escalating Auto Fault. Must occur 3 times in 30 seconds before becoming a manual fault.	Auxiliary power supply under-voltage shutdown	Clear the fault and attempt restart. If problem persists, call customer service.
F42	APS Over Voltage	Escalating Auto Fault. Must occur 3 times in 30 seconds before becoming a manual fault.	Auxiliary power supply over-voltage shutdown	Clear the fault and attempt restart. If problem persists, call customer service.
F44	Battery Over Temperature	Automatic	Battery over-temperature shutdown at 60 °C.	Clear the fault and attempt restart. Stop charging, check battery voltage and temperature. Check for excessive ambient temperature and adequate ventilation in the battery compartment. Note: Shutdown temperature is above 60 °C. Recovery occurs at 50 °C where the Conext XW Pro will be enabled again.
F45	Capacitor Over Temperature	Automatic	Capacitor over-temperature shutdown at 105 °C.	Clear the fault and attempt restart. Ensure adequate ventilation around the Conext XW Pro. Reduce AC loads.
F46	Controller fault	Manual	Controller fault	Service required.

Fault Number	Message	Fault Type	Cause	Solution
F47	DC Under Voltage	Automatic	DC under-voltage shutdown (immediate) occurs if DC voltage is below 32 V. The fault clears and the inverter restarts when DC voltage reaches V+4 V.	Check for the correct battery voltage at the inverter's DC input terminals. Check for an external DC load on the batteries. Check condition of batteries and recharge if possible.
F48	DC Under Voltage	Automatic	DC under-voltage shutdown occurs if DC voltage is below voltage level.	See F47.
F49	DC Over Voltage	Escalating Auto Fault.	DC over-voltage shutdown. Occurs if DC voltage goes over the High Batt Cut Out setting. The fault can also occur when batteries are disconnected at the DC breaker while the Conext XW Pro is operating.	Clear the fault and attempt restart. Ensure battery voltage is below 58 VDC at Conext XW Pro terminals. Check all other charging source outputs, battery cables. Ensure that batteries are connected, or that your DC source is regulated below your high battery cut out or increase your Hi Batt Cut Out setting.
F52	EEPROM Error	Manual		No action. Clear fault and resume operating or configuring the unit. If the fault persists, have the unit serviced.
F53	EEPROM Error	Manual		See F52.
F54	EEPROM Error	Manual		See F52.
F55	EEPROM Error	Manual		See F52.
F56	EEPROM Error	Manual		See F52.

Fault Number	Message	Fault Type	Cause	Solution
F57	FET1 Over Temperature Shutdown	Automatic	Internal temperature is over 105 °C.	Fault clears when temperature drops to 75 °C.
			AC input voltage may be too high while charging.	Check for high input AC voltage.
			Operating too large of a load for too long while inverting.	Remove excessive loads.
			Ambient temperature may be high.	Let inverter cool down and try restarting.
			Inverter cooling fan may have failed.	Hold a piece of paper to inverter vents to check the fan. If the fan has failed, have the inverter serviced.
			Inverter airflow intake may be blocked.	Increase clearance around the inverter or unclog the fan air intake.
			Charging setting is too high based on ambient temperature around inverter.	Lower the Max Charge Rate setting.
F58	FET2 Over Temperature Shutdown	Automatic	See F57.	See F57.
F59	GOCFG process failed	Manual	Auto-configuration process failed.	Retry the "Copy From" procedure, or configure the unit manually.

Fault Number	Message	Fault Type	Cause	Solution
F63	AC Overload	Escalating Auto Fault. Must occur 3 times in 5 minutes before becoming a manual fault.	Excessive load on the AC output.	Check for loads above the inverter's capacity. Turn off some loads if necessary. To clear the fault: Turn off the unit by holding the power button for 5 sec. Disconnect the Conext XW Pro from the battery bank for 20 sec.
F64	AC Overload L1	Escalating Auto Fault. Must occur 3 times in 5 minutes before becoming a manual fault.	Excessive load on the AC output.	See F63
F65	AC Overload L2	Escalating Auto Fault. Must occur 3 times in 5 minutes before becoming a manual fault.	Excessive load on the AC output.	See F63.
F66	System Configuration Fault	Automatic	Multi-Unit Configuration settings are incorrect.	Ensure only one unit is configured as the master. Ensure each unit has a unique Device Number, and that connections have been configured correctly. Ensure there is only one primary charger. See <i>Using the Conext SCP</i> on page 55.
F67	Watchdog Error	Manual		Service required.

Fault Number	Message	Fault Type	Cause	Solution
F68	Transformer Over Temperature	Automatic	The transformer temperature is over 140 °C.	The fault clears when the transformer temperature falls to 125 °C. Ensure adequate ventilation around the Conext XW Pro. Reduce AC loads.
F69	External Sync Failed	Manual		Check connections and cable on external AC sync port. In a single-inverter system, nothing must be plugged into the AC sync port. Clear fault and try again. If these steps fail, the unit requires service.
F70	Check Phase Configuration	Automatic	The unit cannot qualify its AC input because of an incorrect three-phase installation. For example, phase B and phase C are reversed, either through miswiring or incorrect Connections and Inverter Mode settings.	<ol style="list-style-type: none"> 1. Make sure that only one unit on each phase is configured as the master. Make sure each unit has a unique Device Number and that Inverter Mode and Connections have been configured correctly. See <i>Using the Conext SCP on page 55</i> and <i>Using the Conext SCP on page 55</i>. 2. Disconnect all units and make sure that the three-phase wiring is correct.
F71	Battery Discharge Over Current	Manual	There is an excessive load on the Li-Ion battery. (The fault applies only to Li-Ion batteries.)	Change the default threshold of the max battery discharge current limit or reduce the load.

Fault Number	Message	Fault Type	Cause	Solution
F72	External AC Contactor Malfunction	Manual	The External AC Contactor was not set as expected.	Check why the AC contactor has failed. Check for fusing of coil, wiring and connections. Verify that the AC contactor has power.
F500	Silicon Serial ID Failure	Manual	Silicon Serial ID Failure	Service required.

5 Specifications

What's in This Chapter?

Appendix A: Specifications	132
Electrical Specifications	132
Regulatory Approvals	133
Response to Abnormal Grid Conditions	140
Conext XW Pro Overload Capability	141
Output Power Versus Ambient Temperature	142
Conext XW Pro Efficiency	143
Mechanical Specifications	145
Default Settings	147

Appendix A: Specifications

Appendix A: "Specifications" provides the electrical and mechanical specifications for the Conext XW Pro.

DISCLAIMER REGARDING STATUS DATA

Status data reported by the Conext XW Pro are approximate values intended to provide general and non-exact information about the Conext XW Pro. Under no circumstances should this status data be used for precise evaluation of the Conext XW Pro system performance, including efficiency considerations. In systems with a single Conext XW Pro, the measurement capabilities of the inverter/charger allow for deviations of up to 5% of actual values. In systems with multiple inverter/charger units, the compounded effect of accuracy deviations in the status data could result in aggregated deviations exceeding 5% of actual values. For systems requiring higher accuracy status reporting of ac parameters, Schneider Electric recommends the use of external monitoring equipment of appropriate and accurate calibration. For higher accuracy measurement of dc (battery) parameters, Schneider Electric recommends installing an appropriate dc battery monitor in the system.

Electrical Specifications

NOTE: Specifications are subject to change without prior notice.

Table 21 Conext XW Pro Electrical Specifications

	XW Pro 6848 NA
Continuous Output Power	6,800 W
Surge Rating (Overload for 1 minute)	12,000 W
Surge Rating (Overload for 5 minutes)	11,000 W
Surge Rating (Overload for 30 minutes)	8,500 W
Surge Current (120V configuration)	104 A _{rms} (60 s)
Surge Current (120/240V configuration)	52 A _{rms} (60 s)
Waveform	True Sine Wave
Idle Consumption—Inverter mode, no load	28 W
Idle Consumption—Search mode	< 8 W
AC Output Voltage	L-N: 120 VAC ±3% L-L: 240 VAC ±3%
AC Input Voltage range (120/240V configuration), (Bypass/Charger Mode)	160–270 VAC (240 V nominal)
AC Input Breaker	60 A double-pole
AC Input Frequency Range (Bypass/Charger Mode)	52–68 Hz (default) 44–70 Hz (allowable)
AC Output Current (maximum 75% imbalance between L1-N, L2-N) in Inverter Mode (120/240V configuration)	L-L: 28 A

	XW Pro 6848 NA
AC Output Breaker	60 A double-pole
AC Output Frequency	60.0 \pm 0.1 Hz
Total Harmonic Distortion	< 5% at rated power
Automatic Transfer Relay	60 A
Auxiliary Relay Output	0–12 VDC, maximum 250 mA DC
Peak Efficiency	95.1%
CEC Weighted Efficiency	93.0%
CEC Power Rating	
DC Input Voltage (Nominal)	48 VDC
DC Input Voltage Range	40–64 VDC
DC Current at Rated Continuous Power (Inverter Mode)	180 A
Max. Charge Rate (Charger Mode) 120/240V Configuration	140 A
Power Factor Corrected Charging	PF (0.98)
Typical Transfer Time	8 ms

Regulatory Approvals

Electromagnetic Compatibility

The Conext XW Pro inverter complies with emission limits specified in:

- FCC Part 15B Class B limits
- Industry Canada ICES-003 Class B limits

Utility Interactive

The Conext XW Pro inverter complies with the following standards:

- UL1741, 2nd Edition -2018 ("UL1741SA")
- CSA 107.1-2016
- IEEE 1547-2003
- IEEE 1547.1-2005
- IEEE 1547a-2014 (Amd 1)

California Electric Rule 21

- Source Requirements Document: RULE 21 Generating Facility Interconnection - Smart Inverter Generating Facility Design and Operating Requirements - Section Hh - Effective July 30, 2017

- The following Grid Support Utility Interactive Functions are accessible only with the use of the Conext™ Gateway configuration accessory (PN: 865-0329).

Instructions for Rule 21 Compliance

To be California Rule 21 compliant, and for CEC compliance, upgrade your unit firmware to Version 1.0 or later, and update the Grid Code region in the Conext Gateway app.

Note: This procedure is for authorized personnel only.


NOTICE
INCOMPATIBLE FIRMWARE DO NOT use the Conext XW Pro firmware upgrade package to update the firmware on the Conext XW+. The Conext XW Pro firmware is not compatible with the Conext XW+.
Failure to follow these instructions can result in equipment damage.

To update firmware:


1. Go to the Conext XW Pro product webpage.
<https://solar.schneider-electric.com/product/conext-xwpro-na-solar-inverter/>
2. Click **DOWNLOADS > Firmware**.
3. Select the latest firmware upgrade package from the list and download it to a local directory.
4. Open the package and follow the upgrade instructions from the package called *Conext General Firmware Update Instructions (document number 975-0810-01-01)*.

To update the Grid Code region in Conext Gateway:

1. Log in to the Conext Gateway web application. For more information, see the *Conext Gateway Conext Gateway Owner's Guide (975-0806-01-xx)*.
2. Go to **Devices > Inverter/Charger**, and then select the Conext XW Pro Inverter.
3. Select **Grid Codes**.

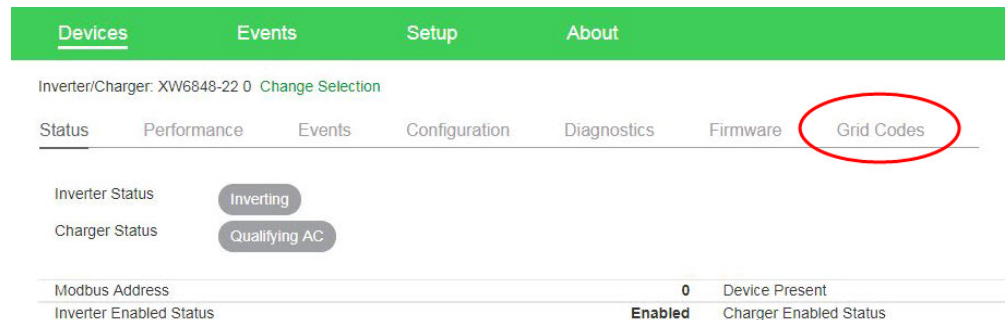

4. Type in the password.
5. Press **Submit**.
6. Select California R21 from the **Select Region** drop-down menu.

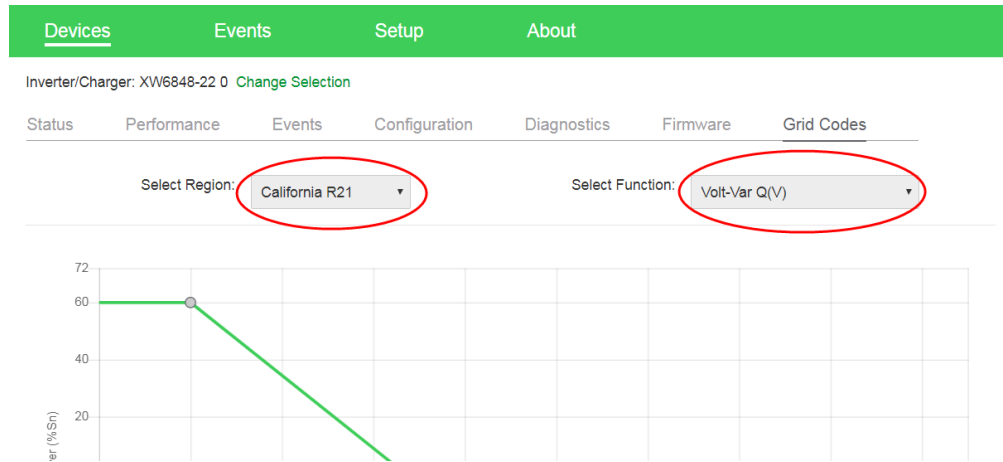

7. Go through the options in the **Select Function** drop-down menu and configure the settings below the graph.
8. Click **Apply**.

Grid Support Utility Interactive Functions

The following Grid Support Utility Interactive Functions are identified by UL1741SA nomenclature. They are programmed into in the Conext XW Pro inverter, and accessible only via the Conext Gateway communications accessory:

- Anti-islanding
- Voltage Ride-Through (L/HVRT)
- Frequency Ride-Through (L/HFRT)
- Volt-Var Q(V)¹
- Soft Start (SS)
- Ramp Rate (RR)
- Specified Power Factor (SPF)²
- Volt-Watt P(V) (Optional)
- Frequency-Watt P(f)³

Utility interconnection voltage and frequency trip limits and trip times		
Trip limit and trip time accuracy	Voltage:	+/- 1.0% pu
	Frequency:	+/- 0.05 Hz
	Trip time accuracy:	+/- 0.5 sec +/- 1 sec (for ride-through duration ≥ 12 sec)

¹ This function was evaluated with reactive power priority and was not evaluated with active power priority.

² This function was evaluated with reactive power priority and was not evaluated with active power priority.

³ IEEE1547 compliant when voltage and frequency ride-through features are disabled.

The following are the Default Activation States:

- Anti-islanding: activated
- Voltage Ride-Through (L/HVRT): activated
- Frequency Ride-Through (L/HFRT): activated
- Dynamic Volt/Var operations Q(V): activated
- Ramp Rate (RR): activated
- Fixed power factor: deactivated
- Reconnect by Soft Start (SS) methods: activated
- Frequency-Watt: deactivated
- Volt-Watt P(V): deactivated

Table 22 Q(V) Volt-Var: Default=Activated

Function	Parameter	Value	Units	Description
Q(V)	Sn	6000	VA	Apparent power rating
	Pn	6000	W	AC output active power rating
	[Vdc.min, Vdc.max]	[42, 60]	Vdc	DC input voltage range
	Vn	240	Vrms	AC nominal voltage
	[Vac.min, Vac.max]	[0.85, 1.125]Vn	Vrms	AC voltage range
	MASAg	5	%Sn	Manufacturer's stated reactive power accuracy
	Max Ramp Rate	15	(%Sn)/sec	Maximum ramp rate
	Qmax.cap.inj	60	%Sn	Maximum rated reactive power production (capacitive/injection)
	Qmax.ind.abs	60	%Sn	Maximum rated reactive power production (inductive/absorption)
	KVARmax	-20	%	Maximum reactive power slope
	Min Deadband	0% Vn	V	Minimum deadband
	Max Deadband	20% Vn	V	Maximum deadband
	ts	2	sec.	Settling time

Table 23 P(f) Frequency-Watt: Default=Deactivated

Function	Parameter	Value	Units	Description
P(f)	Pn	6000	W	Output active power rating
	fn	60	Hz	AC nominal frequency
	[fmin, fmax]	[57.0, 63.0]	Hz	AC frequency range
	MSAHz	0.01	Hz	Manufacturer's stated AC frequency fccuracy
	MSAP(f)	3	(%Pn)/Hz	Manufacturer's stated P(f) accuracy
	ts	2	sec.	Settling time
	[fstart.min, fstartmax]	[60.1, 62.1]	Hz	Adjustment Range of the start of P(f) curtailment
	Kpower-freq.min	-50	(%Pn)/Hz	Minimum slope of P(f) curtailment
	Kpower-freq.max	-75	(%Pn)/Hz	Maximum slope of P(f) curtailment
	Kpower-freq.default	-50	(%Pn)/Hz	Default slope of P(f) curtailment

Table 24 P(V) Volt-Watt: Default=Deactivated

Function	Parameter	Value	Units	Description
P(V)	Pn	6000	W	AC output active power rating
	[Vdc.min, Vdc.max]	[42, 60]	Vdc	DC input voltage range
	Vn	240	Vrms	AC nominal voltage
	[Vac.min, Vac.max]	[0.85, 1.125]Vn	Vrms	AC voltage range
	MASAwatt	3	%Pn	Manufacturer's stated active power accuracy
	K.Power-Volt.min	-5	(%Pn)/V	Minimum slope of active power reduction
	K.Power-Volt.max	-20	(%Pn)/V	Maximum slope of active power reduction
	K.Power-Volt.default	-10	(%Pn)/V	Default slope of active power reduction
	KVARmax	-20	%	Maximum reactive power slope
	ts	2	sec.	Settling time

Table 25 Power factor (PF): Default=Deactivated

Function	Parameter	Value	Units	Description
PF	Sn	6000	VA	Apparent Power Rating
	Pn	6000	W	Output Active Power Rating
	[Vdc.min, Vdc.max]	[42, 60]	Vdc	DC Input Voltage Range
	Vn	240	Vrms	AC Nominal Voltage
	[Vac.min, Vac.max]	(0.85, 1.125)Vn	Vrms	AC Voltage Range
	MSAVac	1	%Vn	AC Voltage Accuracy
	MSAVdc	0.1	Vdc	DC Voltage Accuracy
	[Pmin, Pn]	0-100	%Pn	Active Power Range of Function
	MSAPF (P<50%)	0.1	-	Manufacturer's stated power factor accuracy
	MSAPF (P>50%)	0.01	-	Manufacturer's stated power factor accuracy
	ts	1	sec.	Power factor settling time (1%PF/sec)
	Pfmin.ind	-0.80	-	Minimum inductive (lagging/underexcited) power factor
	Pfmin.cap	+0.80	-	Minimum capacitive (leading/overexcited) power factor

Table 26 Soft Start (SS): Default=Activated

Function	Parameter	Value	Units	Description
SS	Sn	6000	VA	Apparent power rating
	Pn	6000	W	Output active power rating
	[Vdc.min, Vdc.max]	[42, 60]	Vdc	DC input voltage range
	Vn	240	Vrms	AC nominal voltage
	In	25	Arms	AC rated current
	RRss.min	1	(%In)/sec	Minimum soft start ramp rate up
	RRss.max	100	(%In)/sec	Maximum soft start ramp rate up
	RRss.default	2	(%In)/sec	Default soft start ramp rate up
	RRA	1	(%In)/sec	Manufacturer's stated ramp rate accuracy
	td	1	sec	Dwell time(s) between test iterations as specified by the manufacturer
	tR	300	sec	Reconnect time of the inverter according to IEEE 1547

Table 27 Ramp Rate (RR): Default=Activated

Function	Parameter	Value	Units	Description
RR	Sn	6000	VA	Apparent power rating
	Pn	6000	W	Output active power rating
	[Vdc.min, Vdc.max]	[42, 60]	Vdc	DC input voltage range
	Vn	240	Vrms	AC nominal voltage
	In	25	Arms	AC rated current
	RRnorm_up.min	1	(%In)/sec	Minimum normal ramp-up rate
	RRnorm_up.max	100	(%In)/sec	Maximum normal ramp-up rate
	RRnorm_up.default	100	(%In)/sec	Default normal ramp-up rate
	RRA	1	(%In)/sec	Manufacturer's stated ramp rate accuracy
	Imin	0	Arms	Minimum Output Current
	td	1	sec.	Dwell time(s) between test iterations as specified by the manufacturer

IEEE 1547 - 2003 Certified Thresholds and Clearing Times

NOTE: Specifications are subject to change without prior notice.

Function	Limit	Response Time
Anti-islanding reconnect	254 V (± 3 V)	300 s (+10/-0 s)
Over frequency disconnect	60.5 Hz (± 0.05 Hz)	70 ms (± 25 ms)
Under frequency disconnect	59.3 Hz (± 0.05 Hz)	70 ms (± 25 ms)
Over voltage LN fast disconnect	135 V (± 1.5 V)	100 ms (± 50 ms)
Over voltage LN slow disconnect	132 V (± 1.5 V)	500 ms (± 75 ms)
Over voltage L1/L2 fast disconnect	270 V (± 3 V)	80 ms (± 50 ms)
Over voltage L1/L2 slow disconnect	264 V (± 3 V)	500 ms (± 50 ms)
Under voltage LN fast disconnect	66 V (± 5 V)	60 ms (± 25 ms)
Under voltage LN slow disconnect	106 V (± 1.5 V)	1000 ms (± 100 ms)
Under voltage L1/L2 slow disconnect	212 V (± 3 V)	1000 ms (± 100 ms)
Under voltage L1/L2 fast disconnect	132 V (± 10 V)	60 ms (± 25 ms)

Response to Abnormal Grid Conditions

Category	Function	Fixed Setting	Nominal Clearing Time
Abnormal Voltage Fast (VAC)	HECO TOV	288 V (split-phase)	< 1 cycle
	VAC High Off		
	VAC High Off	270 V (± 3 V)	60 ms
	VAC High On	≤ 252 V	300 s
	VAC Low Off	150 V (± 3 V)	60 ms
	VAC Low On	> 214	300 s
Abnormal Voltage Slow (VAC)	VAC High Off Slow	264 V (± 3 V)	500 ms
	VAC High On Slow	≤ 252 V	300 s
	VAC Low Off Slow	211 V (± 3 V)	1 s
	VAC Low On Slow	> 214 V	300 s
Abnormal Frequency (Hz)	FAC High Off	60.5 Hz (± 0.05 Hz)	100 ms
	FAC High On	< 60.45 Hz	300 s
	FAC Low Off	59.3 Hz (± 0.05 Hz)	100 ms
	FAC Low On	> 59.35 Hz	300 s
Reconnect Time (s)	—	300 s	—

Category	Function	Fixed Setting	Nominal Clearing Time
Abnormal Voltage Fast (VAC)	HECO TOV	288 V (split-phase)	< 1 cycle
	VAC High Off	144 V (single-phase)	
	VAC High Off	270 V (± 3 V)	60 ms
	VAC High On	≤ 252 V	300 s
	VAC Low Off	150 V (± 3 V)	60 ms
	VAC Low On	> 214	300 s

Abnormal Voltage Slow (VAC)	VAC High Off Slow	264 V (± 3 V)	500 ms
	VAC High On Slow	≤ 252 V	300 s
	VAC Low Off Slow	211 V (± 3 V)	1 s
	VAC Low On Slow	> 214 V	300 s
Abnormal Frequency (Hz)	FAC High Off	60.5 Hz (± 0.05 Hz)	100 ms
	FAC High On	< 60.45 Hz	300 s
	FAC Low Off	59.3 Hz (± 0.05 Hz)	100 ms
	FAC Low On	> 59.35 Hz	300 s
Reconnect Time (s)	—	300 s	—

Conext XW Pro Overload Capability

Loads connected to the inverter are seldom constant, and large loads are often operated for short periods. To accommodate larger loads, the Conext XW Pro can temporarily exceed its continuous output power rating.

The graphs below illustrate approximate operation time versus load. Inverter operation time during overload is limited by both inverter internal temperature protection and by the product of AC output current and elapsed time.

Figure 31 AC Overload Capability


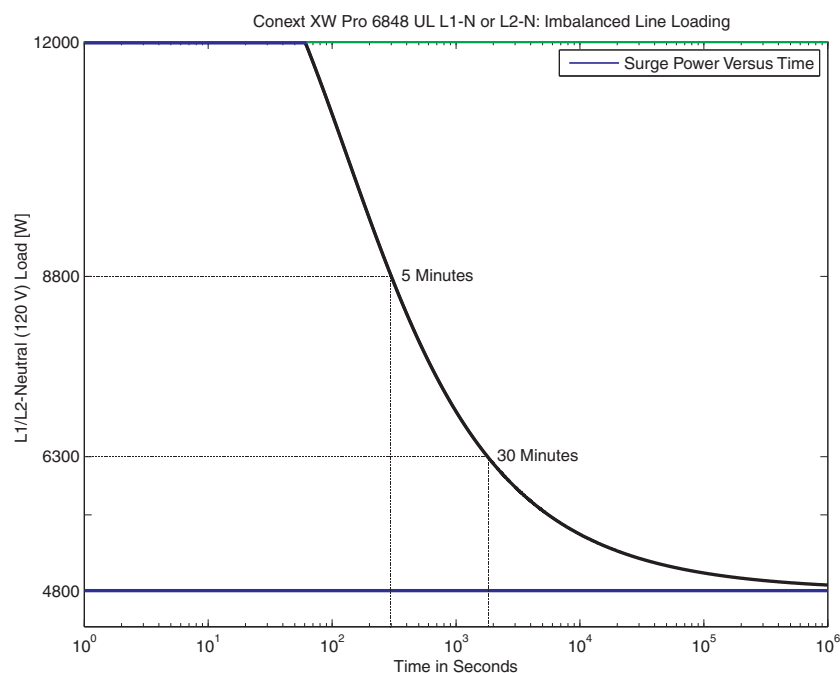



Figure 32 AC Overload Capability

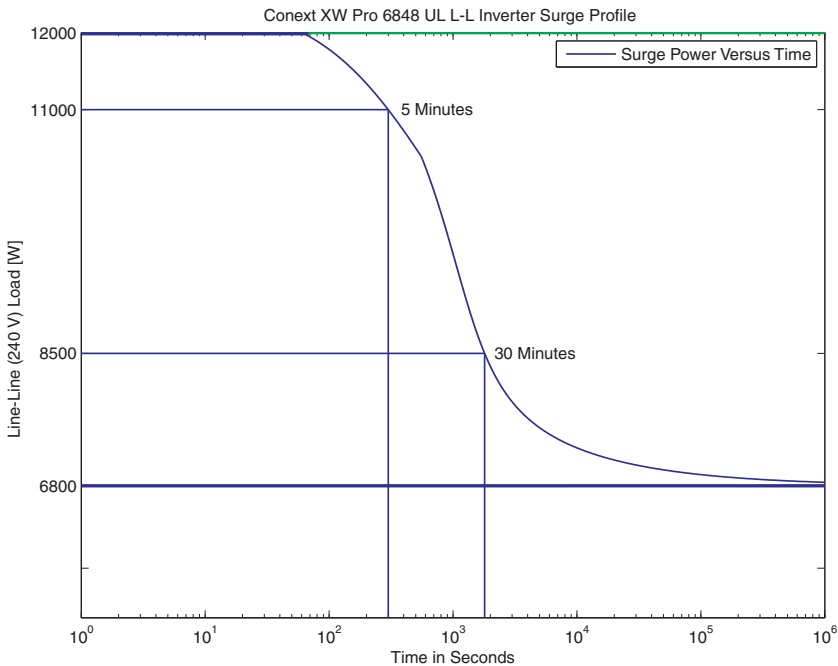

Output Power Versus Ambient Temperature


For the Conext XW Pro 6848 model, the power can be limited by the installed DC and AC breakers. For example, at 8500 W the DC or AC breakers may disconnect before the 30 minute rating.

When the internal temperature of the Conext XW Pro exceeds a preset limit, it begins to limit output power automatically to stop maximum internal temperatures from being exceeded.

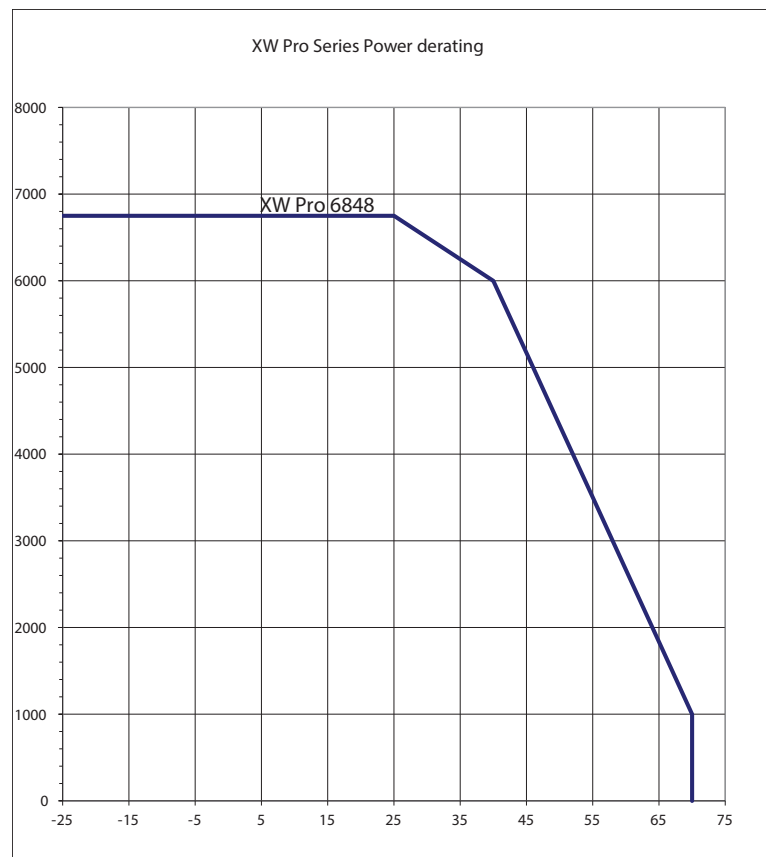Figure 33 Output Power Versus Ambient Temperature


Conext XW Pro Efficiency

Inverting Efficiency (Typical)

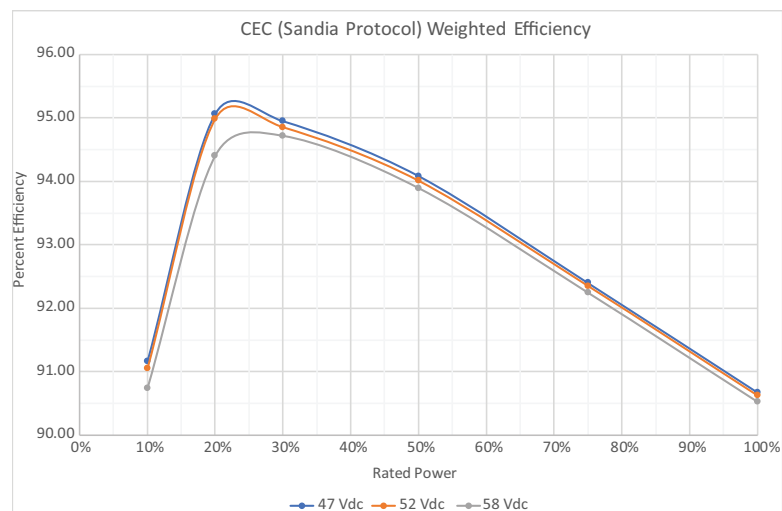Figure 34 Inverting Efficiency (Typical)


Charging Efficiency (Typical)

Figure 35 Charging Efficiency (Typical)

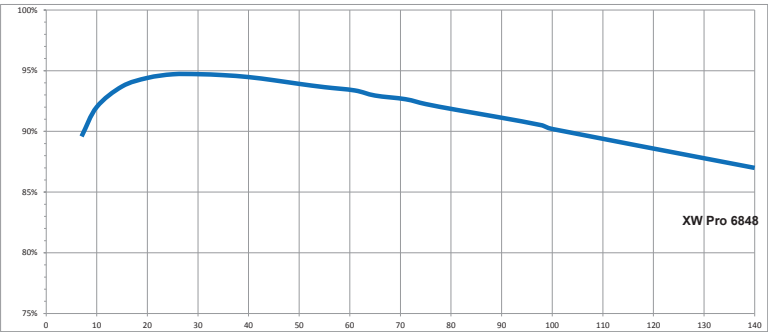


Charging Efficiency Power Factor

Figure 36 Input Power Factor versus Output Charger Current

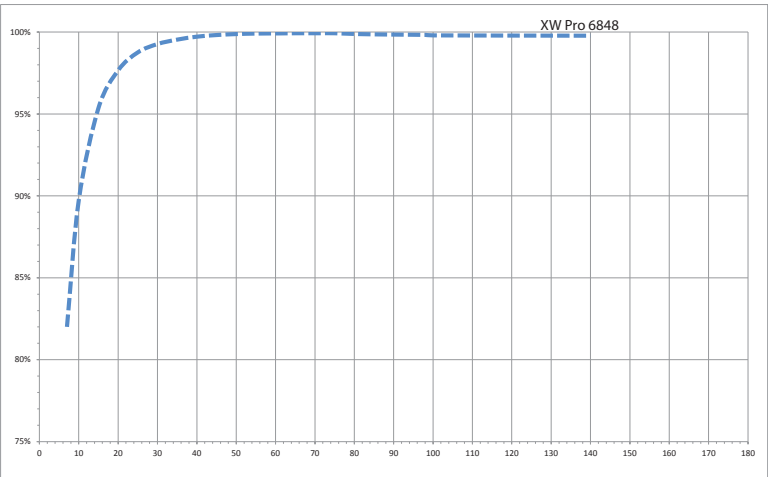

Maximum Charging Current

Figure 37 Charging Current

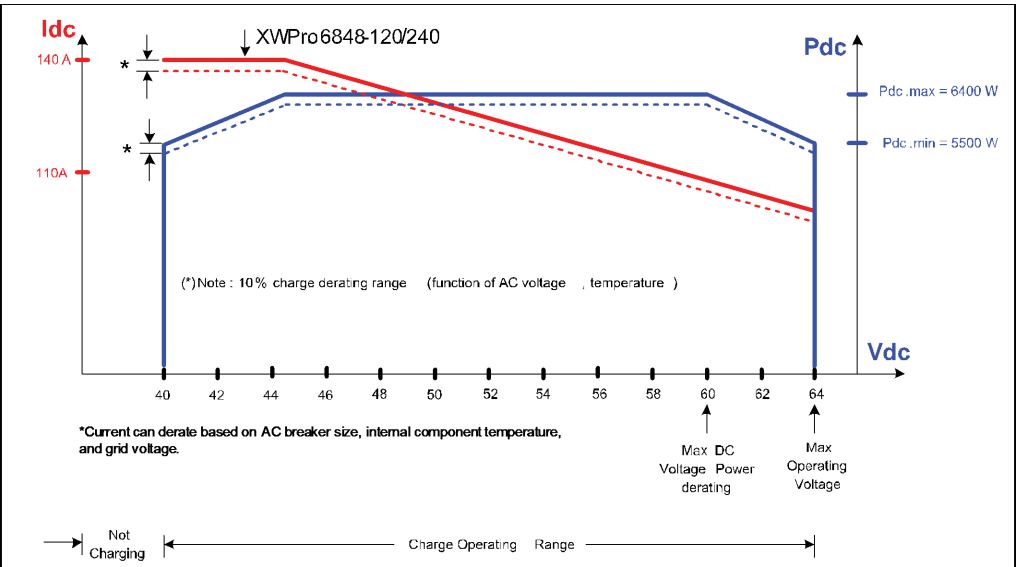

Mechanical Specifications

NOTE: Specifications are subject to change without prior notice.

Table 28 Conext XW Pro Mechanical Specifications

Model	XW Pro 6848 NA
Supported Battery Types	Flooded (default), Gel, AGM, Lithium Ion, Custom
Battery bank size	440–10000 Ah
Non-Volatile Memory	Yes
Inverter Information Panel	Status LEDs indicate AC In status, events/warnings, equalize mode, battery level. 3-character display indicates output power or charge current, event/warning codes. STARTUP/SHUTDOWN and equalize button
Multiple Unit Configurations	Up to 3 parallel units in 120/240 three-wire configuration.
System Network	Conext Xanbus™ (publish-subscribe network, no need for hubs or special cards)
Emissions	FCC Part 15, Class B Industry Canada ICES-003 Issue 5, Class B
Regulatory approvals	CSA C22.2 No. 107.1-01 - General Use Power Supplies UL 1741 - 2nd Ed - Inverters, Converters, Controllers and Interconnection System Equipment California tariff Rule 21-compliant and certified to UL 1741SA
Enclosure Type	NEMA Type 1—Indoor
Rated Temperature Range (meets specifications)	32–77 °F (0–25 °C)
Operational Temperature Range	-13–158 °F (-25–70 °C)
Storage Temperature Range	-40–185 °F (-40–85 °C)
Inverter Dimensions (H × W × D)	23 × 16 × 9" (580 × 410 × 230 mm)
Shipping Dimensions (H × W × D)	28 × 22 ½ × 15 ½" (711 × 572 × 394 mm)
Inverter Weight	125 lb (57 kg)
Shipping Weight	132 lb (60 kg)

Default Settings

This section contains the default configuration settings and ranges for the Conext XW Pro. Configuration settings can be viewed and changed using the Conext SCP.

Default Settings and Ranges

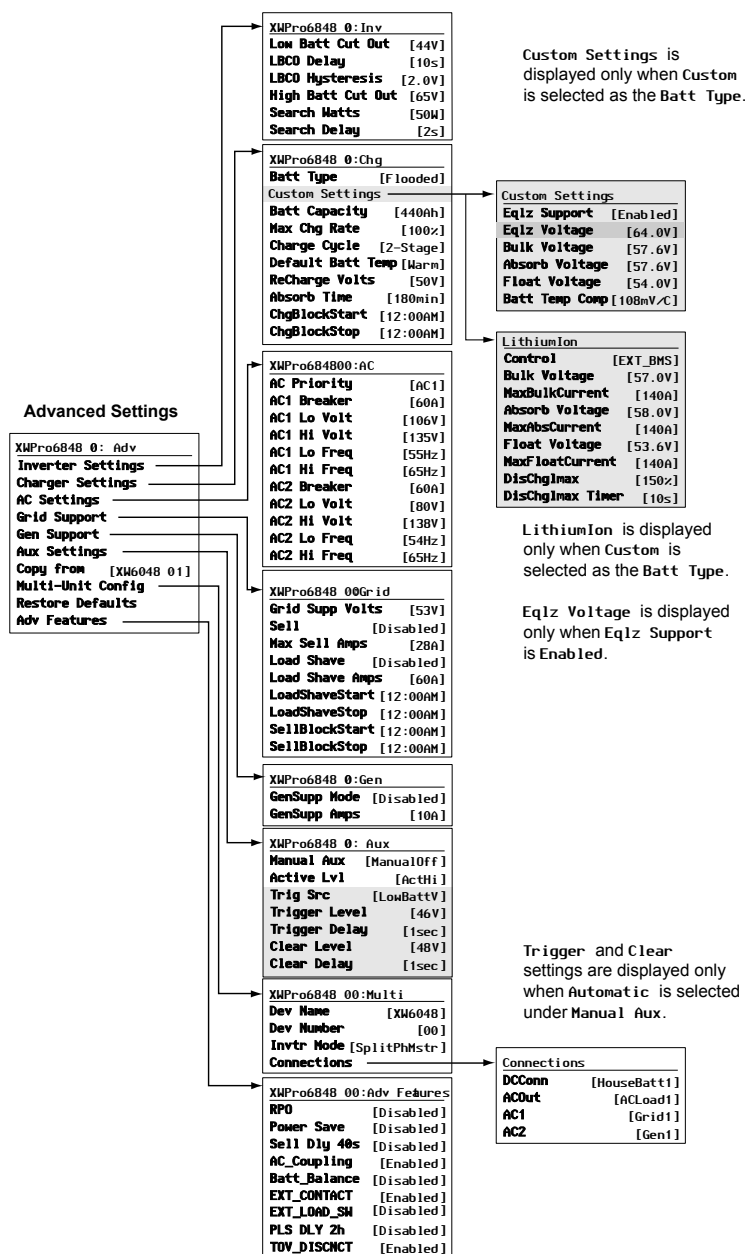


Figure 39 Configuration Menu Map (Advanced)

Figure 39 shows how the advanced Conext XW Pro configuration menus are organized in the Conext SCP.

Inverter Settings Menu

Item	Default Setting	Range	Step Size
Low Batt Cut Out	44 V	36-48 V	0.1
LBCO Hysteresis	2 V	0-10 V	0.1
LBCO Delay	10s	0-600s	1
High Batt Cut Out	65 V	58-70 V	0.1
Search Watts	50 W	25-255 W	5
Search Delay	2s	1-25s	1

Charger Settings Menu

Item	Default Setting	Range	Step Size
Batt Type	Flooded	Flooded, Gel, AGM, Custom ^d	n/a
Batt Capacity	440 Ah	0-10000 Ah ^e	1
Max Chg Rate	100%	5-100%	1
Charge Cycle	2-Stage	2-Stage, 3-Stage	n/a
Default Batt Temp	Warm	Cold, Warm, Hot	n/a
ReCharge Volts	50 V	40.0-54.0 V	0.1
Absorb Time	180 min	1-480 min	1
Chg Block Start	12:00 AM	12:00 AM-11:59 PM, 00:00-23:59	1
Chg Block Stop	12:00 AM	12:00 AM-11:59 PM, 00:00-23:59	1

^dWhen Custom battery selected, two sub-menus appear: Custom Settings and LithiumIon

^eSetting the battery capacity to 0 will reset the charging current to its default values. Zero Ah battery capacity implies there is no absorption exit current criteria and absorption only exits when the absorption timer (default 3 hrs, range 1 min-8 hr) expires.

Custom Settings Submenu

Item	Default Setting	Range	Step Size
Eqlz Support	Enabled	Enabled, Disabled	n/a
Eqlz Voltage	64.0 V	54.0-64.0 V	0.1
Bulk Voltage ^f	57.6 V 56.8 V (Gel) 57.2 V (AGM)	54.2-64.0 V	0.1
Bulk termination level	54 V	40.0-54.0 V	0.1
Absorb Voltage ^a	57.6 V 56.8 V (Gel) 57.2 V (AGM)	40.0-64.0 V	0.1
Float Voltage ^a	54.0 V 55.2 V (Gel) 53.6 V (AGM)	50.0-64.0 V	0.1
Batt Temp Comp ^a	108 mV/C (Flooded, Gel) 84 mV/C (AGM)	0-180 mV/C	1

LithiumIon Submenu

Item	Default Setting	Range	Step Size
Control	EXT_BMS	EXT_BMS, 3stage, 2stageNoFloat	n/a
Bulk Voltage	57.0 V	40.0-64.0 V	0.1
Max Bulk Current	140 A	10-140 A	1
Abs Voltage	58.0 V	40.0-65.0 V	0.1
Max Abs Current	140 A	10-140 A	1
Float Voltage	53.6 V	40.0-64.0 V	0.1
Max Float Current	140 A	1-140 A	1
DisChgImax	150%	20-500%	1
DisChgImax Timer	10 sec	0-300 sec	1

^fCustom battery default settings are based on the Flooded battery default settings. The Gel and AGM default settings are provided here for reference only.

AC Menu

Item	Default Setting		Range		Step Size
	120 VAC	240 VAC	120 VAC	240 VAC	
AC Priority	AC1		AC1, AC2		n/a
AC1 Breaker	60 A		3-60 A		1
AC1 Lo Volt	106 V	212 V	60-115 V	156-230 V	1
AC1 Hi Volt	135 V	270 V	125-144 V	250-288 V	1
AC1 Lo Freq	55 Hz		44-59 Hz		1
AC1 Hi Freq	65 Hz		44-70 Hz		1
AC2 Breaker	60 A		3-60 A		1
AC2 Lo Volt	80 V	160 V	60-115 V	120-230 V	1
AC2 Hi Volt	138 V	276 V	125-144 V	250-288 V	1
AC2 Lo Freq	54 Hz		44-58 Hz		1
AC2 Hi Freq	65 Hz		44-70 Hz		1

Grid Support Menu

Item	Default	Range	Step Size
Grid Supp Volts	53.0 V ^g	42.0-70.0 V	0.1
Sell	Disabled	Disabled, Enabled	n/a
Max Sell Amps ^h	27 A	0-27 A	1
Load Shave	Disabled	Disabled, Enabled	n/a
Load Shave Amps	48 A	0-48 A	1
Load Shave Start ⁱ	12:00 AM	12:00 AM-11:59 PM, 00:00-23:59	1
Load Shave Stop	12:00 AM	12:00 AM-11:59 PM, 00:00-23:59	1
Sell Block Start	12:00 AM	12:00 AM-11:59 PM, 00:00-23:59	1
Sell Block Stop	12:00 AM	12:00 AM-11:59 PM, 00:00-23:59	1

^gThe setting for Grid Supp Volts must be greater or equal to LBCO+2 V. For example, if LBCO is 44 V then the minimum Grid Supp Volts is 46 V.

^hThis setting is restricted to the selected external AC1 breaker size.

ⁱWhen Load Shaving is enabled, if Load Shave Start and Load Shave Stop are set to the same time, the Conext XW Pro load shaves continuously.

Gen Support Menu

Setting	Default	Range	Step Size
GenSupp Mode	Disabled	Enabled, Disabled	n/a
GenSupp Amps	48 A	0-48 A	1

Aux Menu

Item	Default	Range	Step Size
Manual Aux	ManualOff	ManualOn, ManualOff, Automatic	n/a
Active Lvl	ActiveHigh	ActiveHigh, ActiveLow	n/a
Trig Src ^j	LowBattV	LowBattV, HighBattV, LowBattTemp, HighBattTemp, Fault	n/a
Trigger Level–LowBattV ^k	46.0 VDC	40.0–58.0 VDC	0.1
Clear Level–LowBattV	48.0 VDC	40.0–58.0 VDC	0.1
Trigger Level–HighBattV	56.0 VDC	48.0–64.0 VDC	0.1
Clear Level–HighBattV	52.0 VDC	48.0–64.0 VDC	0.1
Trigger Level–HighBattTemp	45.0°C	30.0-60.0°C	1
Clear Level–HighBattTemp	35.0°C	30.0-60.0°C	1
Trigger Level–LowBattTemp	0.0°C	-30.0-10.0°C	1
Clear Level–LowBattTemp	5.0°C	-30.0-10.0°C	1
Trigger Delay	1s	0-600s	1
Clear Delay	1s	0-600s	1

Connections Menu

Item	Default	Range	Step Size
DCConn	HouseBatt1	HouseBatt1-6	n/a
ACOut	ACLoad1	ACLoad1-10	n/a

^jThe Trigger Src setting (and the settings below Trigger Src) appear only if Manual Aux setting has been set to Automatic.

^kTrigger Level, Trigger Delay, Clear Level and Clear Delay do not appear if Trigger Src is set to Fault.

Item	Default	Range	Step Size
AC1	Grid 1	None, Grid1-10, Gen1-10	n/a
AC2	Gen 1	None, Grid1-10, Gen1-10	n/a

Advanced Features Menu

Item	Default	Range	Step Size
RPO	Disabled	Enabled, Disabled	n/a
Power Save	Disabled	Enabled, Disabled	n/a
Sell Dly 40s	Disabled	Enabled, Disabled	n/a
AC_Coupling	Enabled	Enabled, Disabled	n/a
Batt_Balance	Disabled	Enabled, Disabled	n/a
EXT_CONTACT	Enabled	Enabled, Disabled	n/a
EXT_LOAD_SW	Disabled	Enabled, Disabled	n/a
PLS DLY 2h	Disabled	Enabled, Disabled	n/a
TOV_DISCNCT ^l	Enabled	Enabled, Disabled	n/a

For an explanation of these features, see *Using the Conext SCP* on page 55.

^lHawaii HECO TOV requirement

Schneider Electric

As standards, specifications, and designs change from time to time, please ask for confirmation of the information given in this publication.

For other country details please contact your local Schneider Electric Sales Representative or visit the Schneider Electric Solar Business website at: <https://solar.schneider-electric.com>

© 2019 Schneider Electric. All Rights Reserved.