

Notes to Installer:

The pump pulls water in by suction. The inlet plumbing must offer an unobstructed flow. The pump will be noisy if intake is restricted or blocked, or intake pipe is undersized.

The pump tolerates no solid debris.




A disposable cartridge filter is required at the intake. Never run the pump without a filter.

Do not omit the intake screen. After first test run, check the screen and remove any debris.

Low voltage systems require larger wire than 115/220 VAC. See the *Universal Wire Sizing Chart* on page 9 for assistance.


Failure to install a fuse or circuit breaker of proper size will void the pump warranty.

The manual contains important maintenance information, and is the property of the pump owner. Ensure manual is delivered to pump owner after installation.

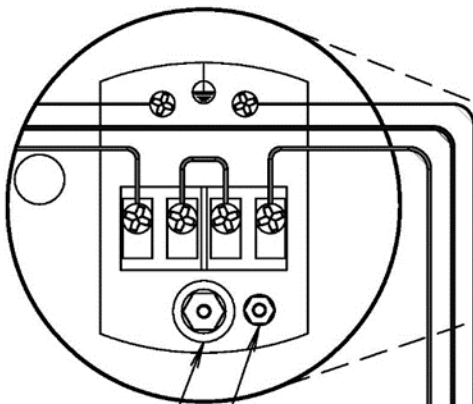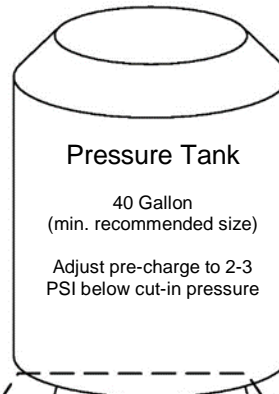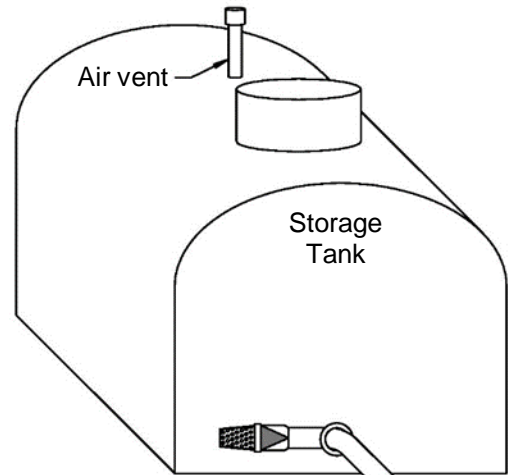

Turn CW to raise
Cut On & Off
Pressure

Turn CW to raise
Off Pressure

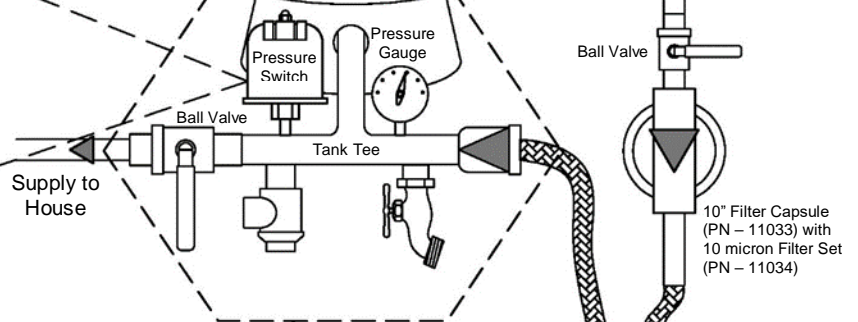

EZ Install Kit
(PN - EZ2900)

Flex Hose

Debris

A steady buzzing sound indicates excessive suction.
An unsteady buzzing sound indicates a leak in the suction line.

See page 17 for troubleshooting tips



**FLOWLIGHT BOOSTER
EZ INSTALL DIAGRAM**

www.dankoffsolarpumps.com

5/2016

R 2.0

© Copyright Dankoff Solar 2016

Optional:
Dry Run Switch
DRS1300 for
1300/1400 Series,
DRS2500 for
2500/2600 Series